

# INSTALLATION INSTRUCTIONS AND PARTS LIST

## MODEL 570340 MEGA STEPS

VEHICLE APPLICATION:

2003 AND NEWER 135" & 155" WB CHEVROLET EXPRESS AND GMC SAVANA VANS CAB LENGTH

**READ INSTRUCTIONS COMPLETELY AND CHECK TO MAKE SURE THAT ALL REQUIRED PARTS (LISTED ON SERVICE PARTS LIST) ARE ON HAND BEFORE STARTING THE INSTALLATION**

1. ON THE LEFT SIDE OF THE VEHICLE, REMOVE THE FRONT BODY MOUNTING BOLT. THE BOLT, STEEL WASHER AND RUBBER CUSHION WILL BE REUSED.
2. INSTALL THE MULTI-THREAD U-NUT (ITEM #14) ON THE FRONT MOUNTING BRACKET (ITEM #2&3) AND ASSEMBLE THE 3/8"-16 X 5 BOLT (ITEM #7), 3/8"-16 SERRATED FLANGE NUTS (ITEM #8) INTO THE U-NUT (ITEM #14) AND PUT THE 3/8"-16 SERRATED FLANGE NUTS(ITEM #8), WSHR-FL,SST, .438X1.00X.083(ITEM # 13) AND .354 X 1.00 X .748 RUBBER WASHER (ITEM #10) (**LOAD REACTION BOLT ASSEMBLY**) AS SHOWN IN *fig. 1*.
3. INSTALL THE FRONT MOUNTING BRACKET TO THE FRONT BODY MOUNT WITH THE WASHER AND THE RUBBER CUSHION BETWEEN THE MOUNTING BRACKET AND THE BODY MOUNT. THE STEP END OF THE BRACKET SHOULD BE PERPENDICULAR TO THE OUTSIDE BODY. TIGHTEN THE BOLT TO 65 LB. FT. ADJUST THE LOAD REACTION BOLT ASSEMBLY SO THAT THE RUBBER CUSHION IS SNUG AGAINST THE FRAME AND TIGHTEN DOWN THE OUTSIDE FLANGE NUT.
4. REMOVE THE SECOND BODY MOUNTING BOLT. THE BOLT, STEEL WASHER AND RUBBER CUSHION WILL BE REUSED.
5. INSTALL THE MULTI-THREAD U-NUT (ITEM #14) ON THE SECOND MOUNTING BRACKET (ITEM #4&5) (**USE THE TOP HOLE ON 1500 VANS AND THE BOTTOM HOLE ON 2500 & 3500 VANS**) AND ASSEMBLE THE 3/8"-16 X 1-1/4" SCREW (ITEM #10) AND 3/8"-16 SERRATED FLANGE NUT (ITEM #13) INTO THE U-NUT (ITEM #14) AND PUT THE 3/8"-16 SERRATED FLANGE NUTS(ITEM #8), WSHR-FL,SST, .438X1.00X.083(ITEM # 13) AND CP PLUGS-.364X.625 (ITEM #12) (**LOAD REACTION BOLT ASSEMBLY**) AS SHOWN IN *fig. 1*.
6. INSTALL THE SECOND MOUNTING BRACKET TO THE SECOND BODY MOUNT WITH THE WASHER AND THE RUBBER CUSHION BETWEEN THE MOUNTING BRACKET AND THE BODY MOUNT. THE STEP END OF THE BRACKET SHOULD BE PERPENDICULAR TO THE OUTSIDE BODY. TIGHTEN THE BOLT TO 65 LB. FT. ADJUST THE LOAD REACTION BOLT ASSEMBLY SO THAT THE END OF THE BOLT IS SNUG AGAINST THE FRAME AND TIGHTEN DOWN THE OUTSIDE FLANGE NUT.
7. ON THE RIGHT SIDE OF THE VEHICLE, REPEAT STEPS 1-6.



(A LIVERNE Company)

1200 E. Birch St.

Brandon, SD 57005

REV A 9/28/21  
552129 SHEET 1 OF 3 18JUN12

## SERVICE PARTS LIST

ITEM	QTY	DESCRIPTION
1	1	STEP ASSY- 36.00" (MOD. 575036)
2	1	MOUNTING BRACKET – LH, FRONT
3	1	MOUNTING BRACKET – RH, FRONT
4	1	MOUNTING BRACKET – REAR, LH
5	1	MOUNTING BRACKET – REAR, RH
6	2	SCREW - HEX HEAD, 3/8"-16 X 1-1/4", ZP
7	2	SCR-HHC.3/8-16 X 5. ZP
8	6	NUT – SERRATED FLANGE, 3/8"-16, ZP
9	4	U-NUT – MULTI THREAD, 3/8"-16 X 1.09"
10	2	RUBBER WASHER - .354 X 1.00 X .748
12	2	CP PLUGS-.364X.625
13	2	WSHR-FL,SST, .438X1.00X.083, BZP



(A LIVERNE Company)

1200 E. Birch St.

Brandon, SD 57005

REV A 9/28/21  
552129 SHEET 2 OF 3 18JUN12

SERVICE PARTS LIST

MODEL NO. - 570340

LEFT SIDE SHOWN  
RIGHT SIDE MIRROR IMAGE

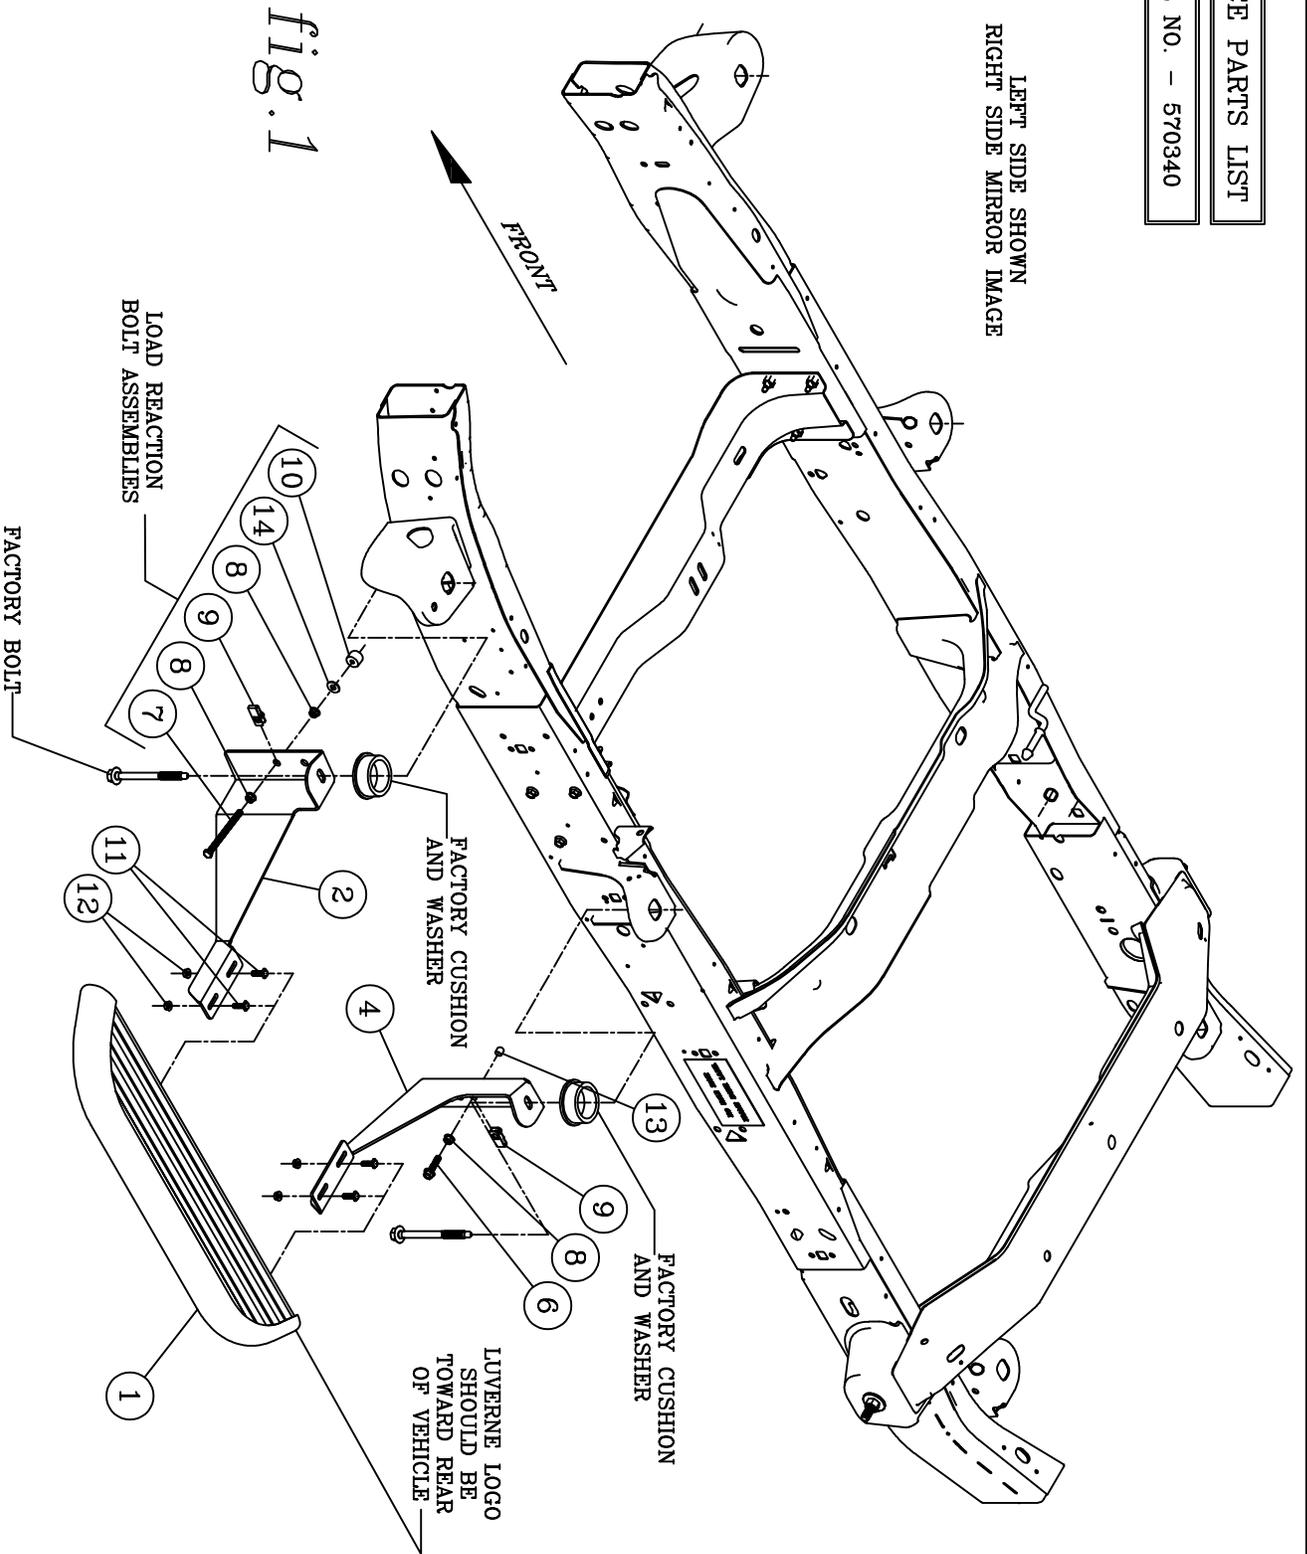


fig. 1