

INSTALLATION MANUAL

19104

Level of Difficulty

Easy

Installation difficulty levels are based on time and effort involved and may vary depending on the installer level of expertise, condition of the vehicle and proper tools and equipment.

Parts List

| Item | Qty | Description |
|------|-----|-----------------|
| 1 | 1 | Roller sleeve |
| 2 | 1 | Roller |
| 3 | 1 | Hex bolt, M16 |
| 4 | 1 | Nylock nut, M16 |

Tools Required

| | |
|-------------|-------------|
| Ratchet | Socket, M24 |
| Wrench, M24 | -- |


Product Registration and Warranty

CURT stands behind our products with industry-leading warranties. To get copies of the product warranties, register your purchase or provide feedback, visit: warranty.curtgroup.com/surveys

⚠ WARNING

Never exceed the vehicle manufacturer's recommended towing capacity.

Product Photo

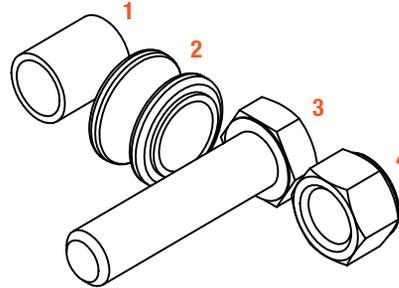

NOTICE

Visit www.curtmfg.com for a full-color copy of this instruction manual, as well as helpful videos, guides and much more!

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.

Periodic inspection of your product should be performed to ensure all hardware and / or components remain secure.

To help prevent damage to the product or vehicle, refer to the specified torque specifications when securing hardware during the installation process.

ASSEMBLY

Step 1

Insert the roller sleeve into the roller.

Align the roller/roller sleeve with the through hole on the carriage.

Insert the M16 hex head bolt through the slider carriage and roller sleeve. Secure using an M16 nylon lock nut.

Torque hardware to minimum of 75 ft-lbs.

