

# 56515

BUICK ENCLAVE  
BUICK RAINIER  
CADILLAC ESCALADE  
CHEVY AVALANCHE  
CHEVY SILVERADO  
CHEVY SUBURBAN  
CHEVY TAHOE  
CHEVY TRAILBLAZER  
GMC ACADIA  
GMC ENVOY

GMC SIERRA  
GMC YUKON  
HUMMER H2 & H3  
INFINITI QX56  
ISUZU ASCENDER  
NISSAN PATHFINDER  
NISSAN TITAN  
OLDSMOBILE BRAVADA  
SAAB 9-7X  
SATURN OUTLOOK

## WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.


### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

1/18/2011

## English

1. Locate the tow vehicle's trailer harness connector. This connector is located under the vehicle, behind the bumper, on the driver's side of the vehicle.
2. Remove protective cap from connector taking care not to damage the locking tabs. Return the protective cap to the vehicles owner for future use.
3. Insert the harness connector into the vehicle's connector (A,B). Make sure that the T-Connector is fully inserted with locking tabs in place.

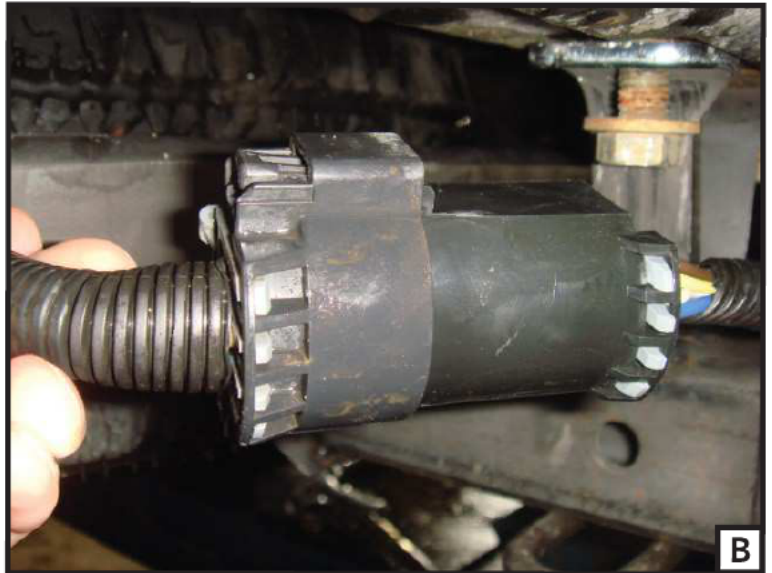

**INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-877-287-8634**

