

# ROTOBOXE™ RAZOR PRO Installation Guide

## PREPARATION

### Package Contents:

- ✓ 4 Stainless Brackets
- ✓ 2 Carriage Bolts
- ✓ 2 Coupling Nuts

Begin by verifying that all parts are present and necessary tools have been acquired. We recommend washing and rinsing the vehicle bed with soap and water prior to installation.




You will need:

- ✓ 3/8" Wrench or Socket




## STEP ONE

Locate Mounting Holes on Bed

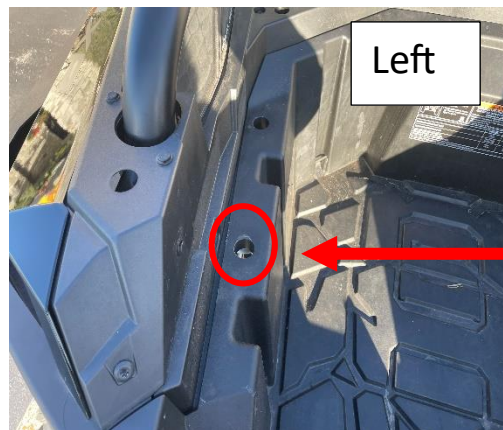


Left

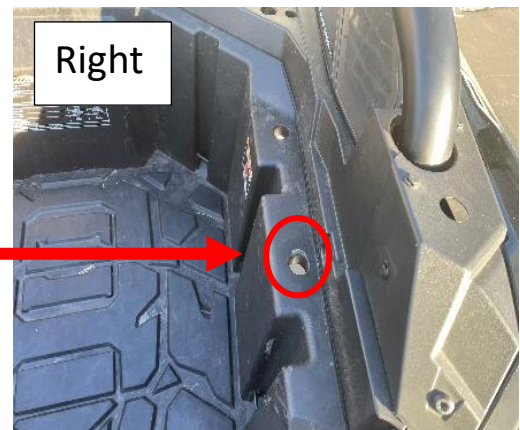

Right



Place your RotoBOXE™ Razor Pro into Vehicle Bed as Shown

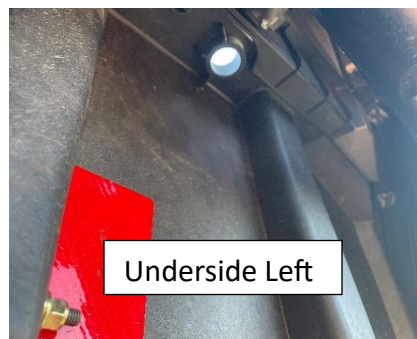

Underside Left



Underside Right



Verify Alignment. You should be able to see straight through both mounting holes

# ROTOBOXE™ RAZOR PRO Installation Guide

## STEP TWO

Place Stainless Bracket into slot surrounding mounting hole



X2



Insert Carriage Bolt into Stainless Bracket

Repeat on other side



## STEP THREE

We find this step to be a little easier with two people. Grab a friend!\*



1. On the underside of the vehicle, add stainless bracket to the bottom of the carriage bolt and secure with coupling nut.

2. Finger-tighten coupling nut to snug. Next, use 3/8" wrench or socket to tighten



This goes easier if someone holds the bolt for you\*

3. Repeat process on other side



## ROTOBOXE™ RAZOR PRO Installation Guide



You're done! Enjoy your new RotoBOXE™ Razor Pro! Find customer support and more great products at [www.rotokap.com](http://www.rotokap.com).

 **@roto.kap**



Please don't litter. Dispose of packaging materials in a responsible manner.