



# INSTALLATION GUIDE

## Items you'll need:

Solvent Cleaner  
Knife or Scissors  
Cloth  
3/8" Wrench

## Items included:

RotoKAP Lid & Base  
4 - Mounting Assembly  
Gasket




## UForce

### 1. Let's prep!

Begin by washing and rinsing the bed with soap and warm water.

**2. With a cloth,** clean outside edge of KAP base with solvent cleaner thoroughly, and apply included gasket. Pressing firmly.

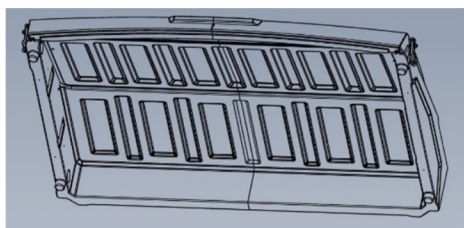

**3. Remove** the four mount assemblies and set aside.



### 4. Cut

four "X" through gasket, accessing mounting holes.



### 5. Add

threaded mount assembly through hole and add fender washer and coupling nut, loosely attach.



### 6. Lift

### 7. Insert

panel plugs into the mounting access holes on the bottom of the unit. Using two fingers, they should fit snugly.



### 8. Time to Ride!

To view video instructions, please visit our YouTube channel!  
[youtube.com/@rotokap](https://youtube.com/@rotokap)

