


INSTALLATION GUIDE

**roto
kap™**
COMMANDER Patent pending

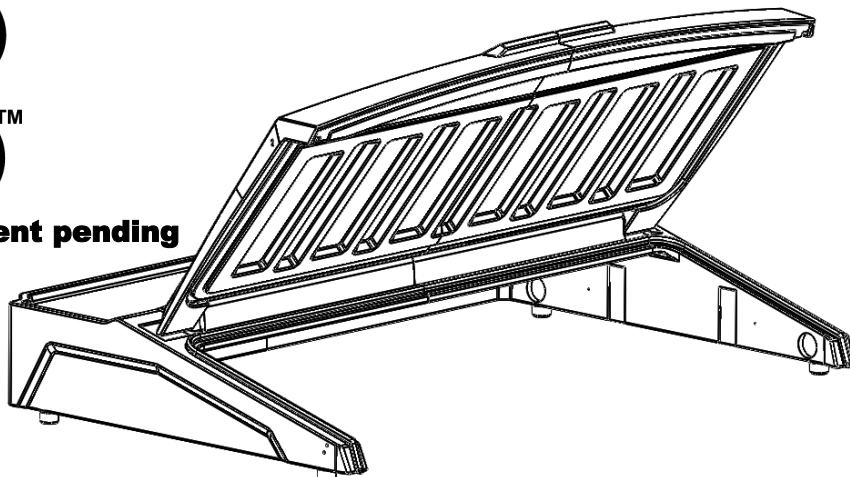


Package Contents:


1 Cap Lid
1 Cap Base
4 Plug Inserts
4 Hole Caps
1 Gasket

PREPARATION 1

Prep by washing and rinsing bed with water and soap.

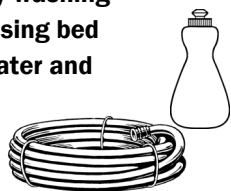

PREPARATION 2

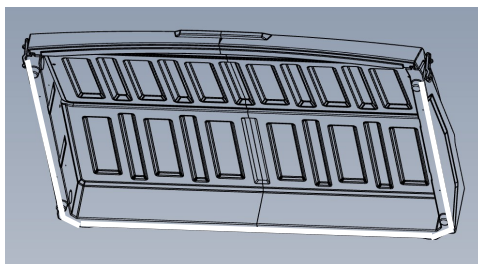


Apply included gasket to the outside edge of the RotoKap base as shown. In white

Tools Needed:


- 3/8" Wrench

1

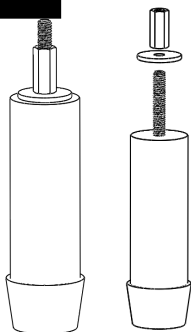


Remove: Washers and Coupling nuts from all 4 "Plug Inserts" and set aside. [Plugs will have a different shape for Defender, hardware and assembly are the same]

2

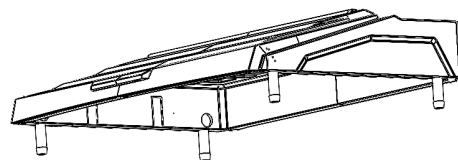

Insert the plugs into the holes on the bottom of the unit.

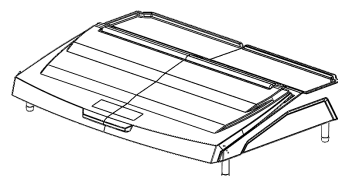

3



Re-attach the previously removed Washer and Coupling Nut to each of the 4 "Plug Inserts" and tighten with 3/8" wrench.

4

This step is most easily accomplished and recommended to be done with 2 people.

Place unit on Commander bed. Fit plugs into holes and apply pressure evenly. The unit should fit snugly against the gasket on the bed.



5



Push in the Hole Caps. They should fit snugly.

WWW.DU-HA.COM

6

**roto
kap™**
Patent pending



Enjoy Your fully-installed ROTO KAP™

Images above are representative and display Can-Am Defender photos, however all parts, hardware and steps are the exact same.