


INSTALLATION GUIDE (GENERAL)

**roto
kap™**
GENERAL Patent pending

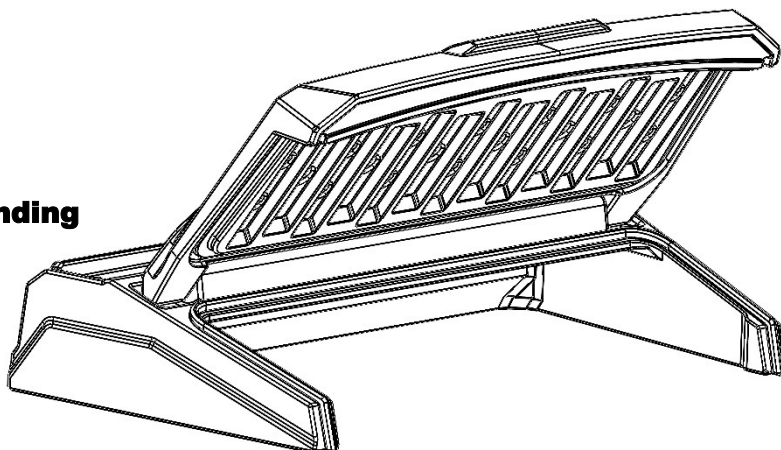

Package Contents:


- (1) Cap Lid
- (1) Cap Base
- (4) Plug Inserts
- (4) Hole Caps
- (1) Gasket
- (2) Tailgate Plugs

PREPARATION 1

Prep by washing and rinsing bed with water and soap.



PREPARATION 2

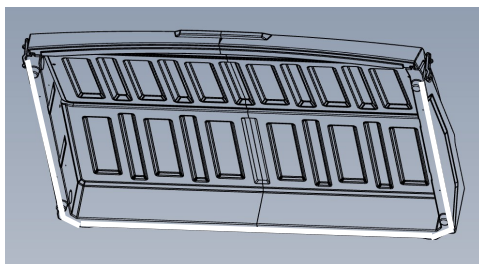


Apply included gasket to the outside edge of the rotokap base as shown.

Tools Needed:


- 3/8" Wrench

1

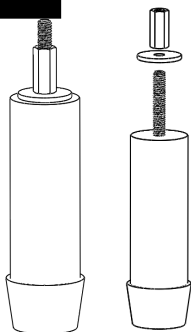


Remove: Washers and Coupling nuts from all 4 "Plug Inserts" and set aside.

2

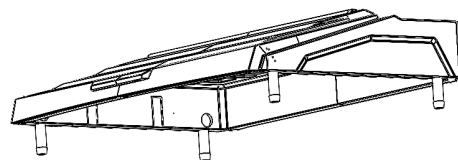

Insert the plugs into the holes on the bottom of the unit.

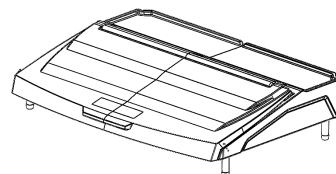

3



Re-attach the previously removed Washer and Coupling Nut to each of the 4 "Plug Inserts" and tighten with 3/8" wrench.

4

This step is most easily accomplished and recommended by tilting back the bed of the General and inserting the ROTOKAP so the windshield doesn't

Place unit on the General's bed. Fit plug into holes and apply pressure evenly. The unit should fit snugly against the bed.



5



Push in the Hole Caps. They should fit snugly.


6

Installing the Tailgate Plugs.



7

Plug location on tailgate

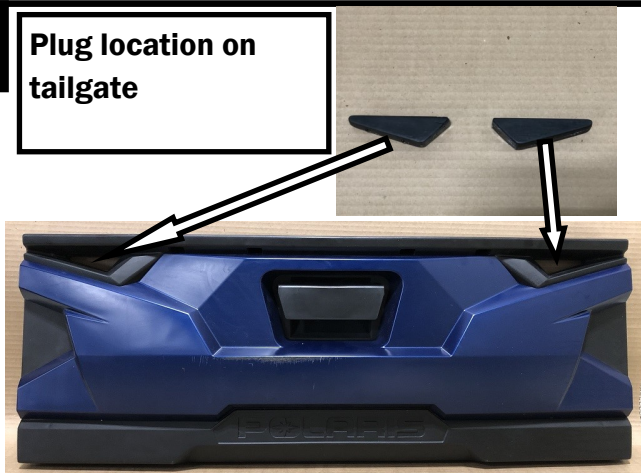

8

Flip tailgate down and locate holes from the back side as shown.




9

Place plugs to corresponding holes as shown.




10

Plugs should fit as shown below. Once in place, apply downward pressure by hand to the back or use a rubber mallet to fully seat in to place.

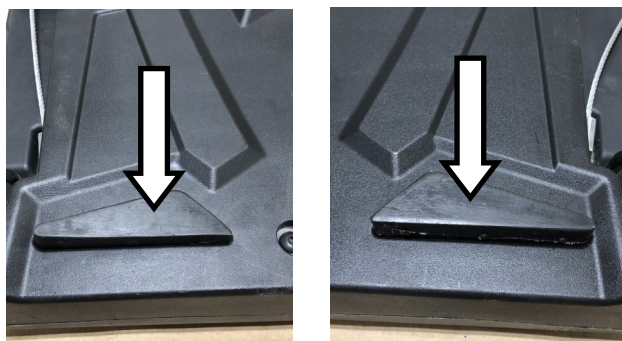

11

Plugs should be flush with the back panel of the tailgate (as shown below) if fully installed correctly.

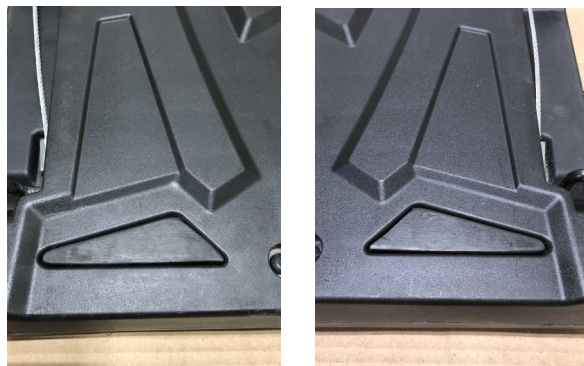

12



Enjoy Your fully-installed ROTO KAP™ GENERAL