


DECKED

INSTALLATION INSTRUCTIONS*

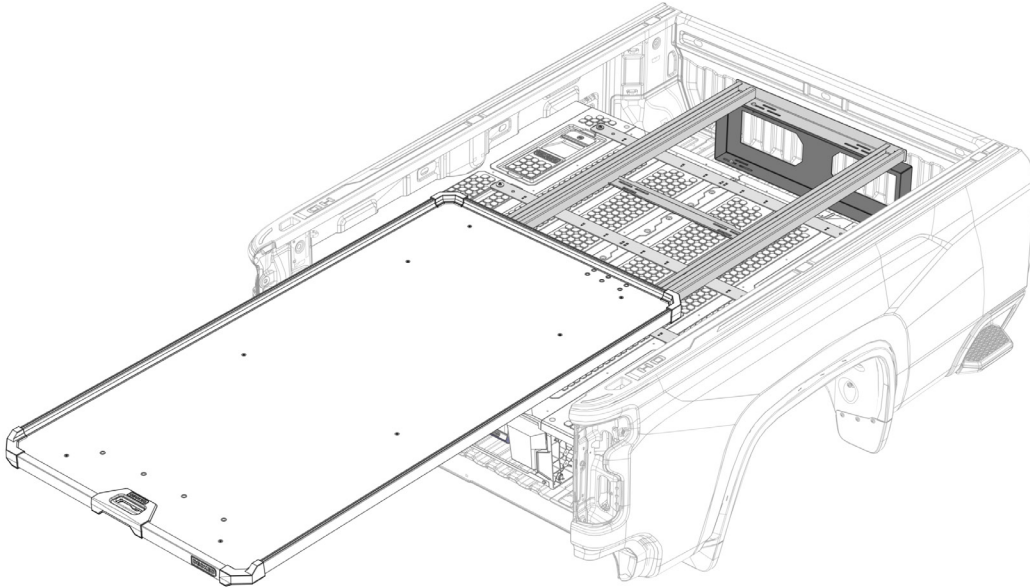

CARGOGLIDE DCG1500-9548 TO DECKED DRAWER SYSTEM

8' BEDS ONLY

(NOT COMPATIBLE WITH VANS OR SERVICE BODIES)

FACTORY INSPECTION CHECKLIST

- ☐ INSTRUCTIONS
- ☐ 8' HARDWARE KIT
- ☐ BIG CABSIDE BRACKET X 1
- ☐ BIG FLAT BRACKET X 3

DATE: _____

INITIALS: _____

INITIALS: _____

*Trust us on this one; don't go commando and attempt your install without reading.
You'll just cuss a bunch and create even more chaos in your truck.

URC719 | C0091 | DCG1500 - 8' BED/DS | V2



IMPORTANT INSTALLATION INFORMATION AND **WARNINGS**:

- Do not put fuels, flammables, explosives or hazardous materials inside or on top of any DECKED product.
- Any modification or unintended use of this product shall immediately void all manufacturers warranties.
- The DECKED Drawer System must be anchored to the truck in all four corners according to the instructions included.
- Replacement tie down brackets (if included) must be installed.
- Concentrated weight can damage the drawer system. All loads must be evenly distributed to approximately 50 lbs per foot².
- TAILGATE MUST BE CLOSED AND LATCHED DURING TRANSIT.
- Please reference vehicle owner's manual for maximum payload capacity.
- Operate CargoGlide unit while parked on level surfaces only.
- See special instructions for electric vehicles and vehicles with generators.
- DO NOT DRILL INTO ELECTRIC OR HYBRID VEHICLES UNTIL BATTERY LOCATION HAS BEEN CONFIRMED.
- It is the responsibility of the installer to ensure the DECKED DCG1500 unit and the DECKED Drawer System are securely fastened to the bed of the truck.

INSTALL VIDEO

High tech link to video here or you can visit decked.com/installvideo



Drawer System + CargoGlide Payload Guide. These capacities are secondary to your vehicle's payload and GVWR. Refer to your vehicle owner's manual.

	Drawer Capacity (each)	Drawer System Top Deck Payload (evenly distributed)	Drawer System or CargoGlide Tie-Down Load Rating	CargoGlide Payload (total) when installed on Drawer System
Full-Size/ 2-Drawer System	200 lb	2,000 lb	400 lb	850 lb
Midsize/ Single-Drawer System	400 lb	1,000 lb	400 lb	500 lb

TOOLS REQUIRED

- drill
- 3/16" hex wrench
- 5/16" and 1/2" drill bits
- 5/16" and 1/2" drill stops
- tape measure
- 1/2" deep socket or 1/2" socket and ratchet extender
- masking tape
- self-etching primer
- adjustable wrench
- ratchet or impact driver
- safety glasses

CONTENTS

BIG CABSIDE BRACKET	1
BIG FLAT BRACKET	3
ELEVATOR BOLTS	8
LOCKNUTS	8
SPACER PUCKS	6
NYLON WASHERS	6
LARGE FENDER WASHERS	6
2.5" REPLACEMENT TIE DOWN BOLTS	6
1/2" BUTTON HEAD CAP SCREW	6

HEY! TORQUE BOY

READ BEFORE YOU INSTALL

Welcome to DECKED! In a world of crappy instructions, bad advice, and questionable sources of truth, we are here to make sure that your install goes as smoothly as possible, saving you headaches and heartburn. That said, your part is to read the darned instructions!

This install manual is for the new (late 2023) DECKED drawer systems which have stash bins and D-Ring tie downs.

Installing a CargoGlide on a new DECKED drawer system requires the installation of the new DECKED no-drill brackets included in this kit.


We have illustrated install into one truck - your truck may have different features in the bed. Test fit with all accessories installed before drilling into the bed.





Does your DECKED drawer system have ammo cans?
This DCG1500 is not compatible with your drawer system.

Questions? Please call us: 208-806-0251.


STEP 1: PREP YOUR BED

1. Install the DECKED drawer system as instructed, but install the tailgate side D-Rings only.
2. Remove (or don't install) all hardware from the six accessory locations located on the DECKED panels shown. Save all fasteners for future use if needed.
3. Place the large cabside bracket in the truck bed. The flat side must face the cab. The slotted mounting holes must be on the bottom. DETAIL A.
4. Place one metal puck in each of the six locations where D-Rings or hardware was removed:

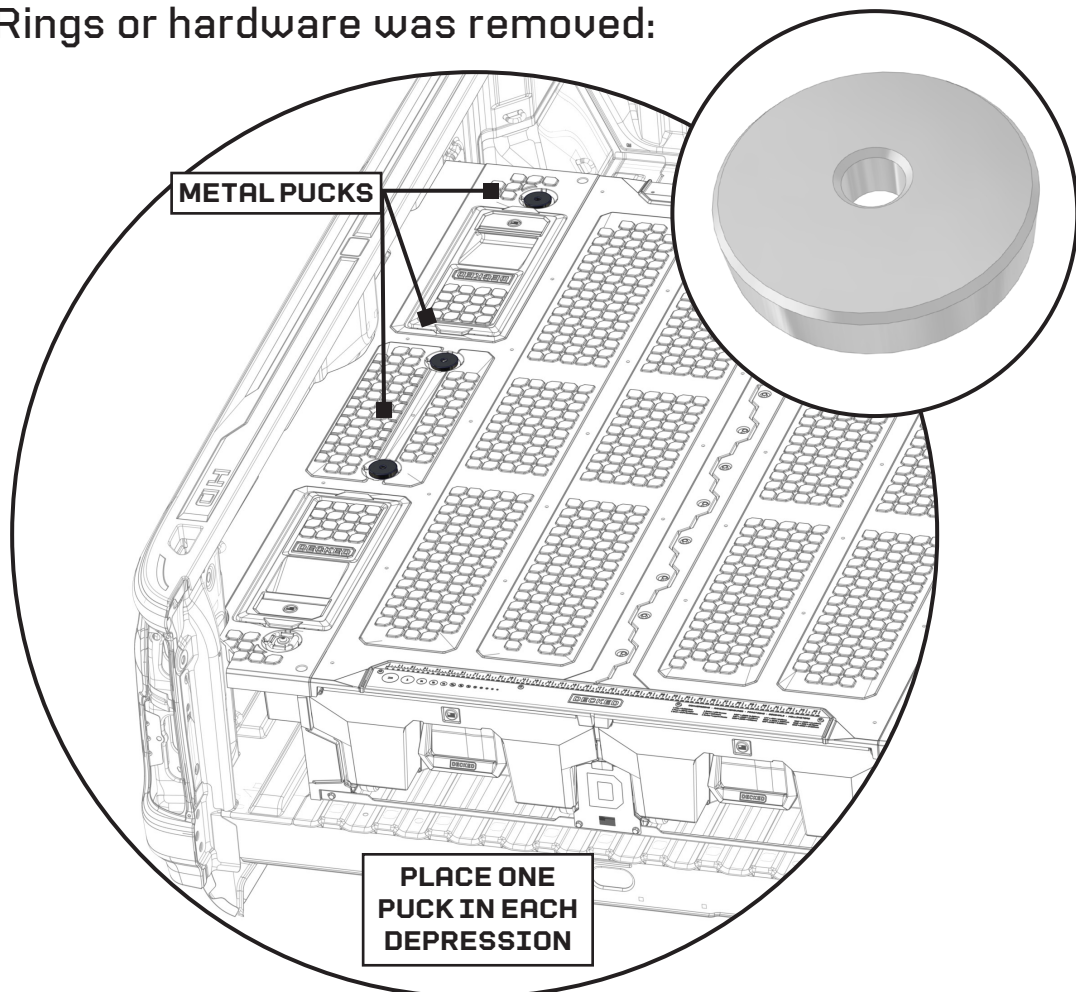

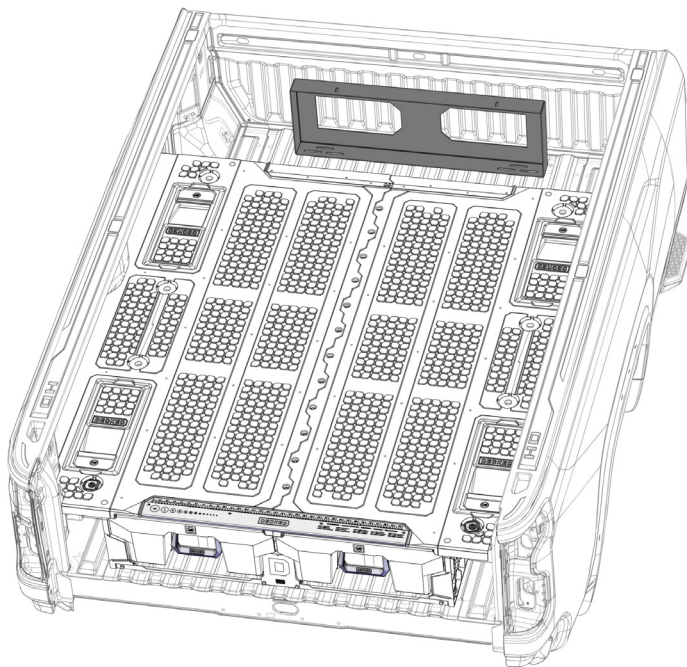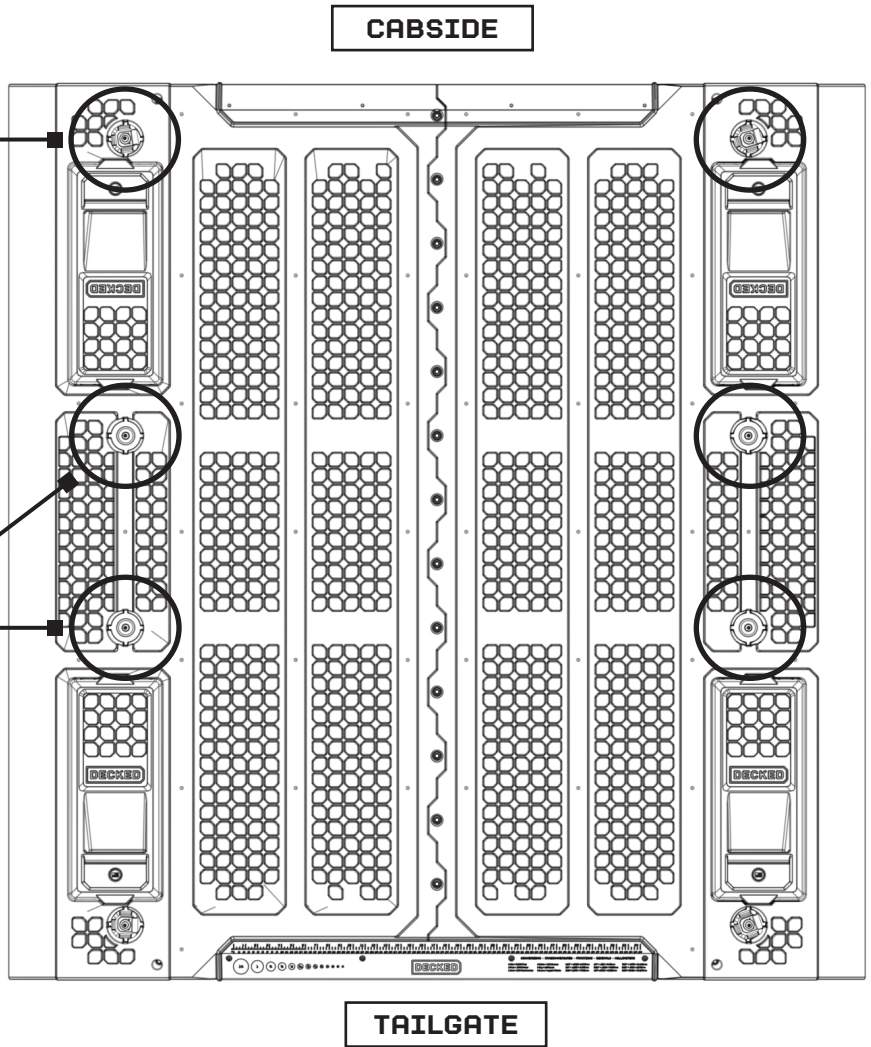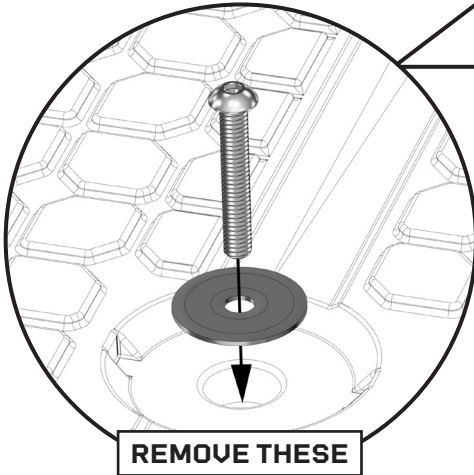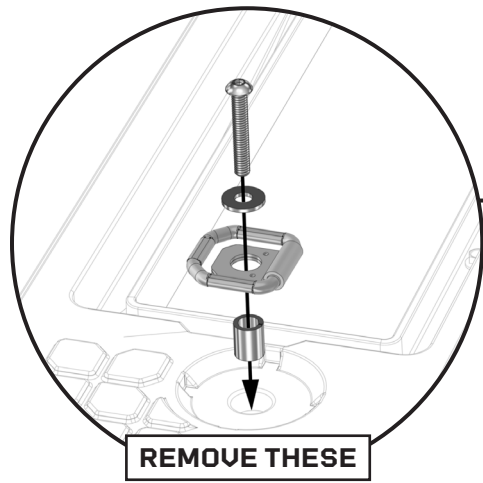



INSTALL DECKED DRAWER SYSTEM
PLACE CABSIDE BRACKET

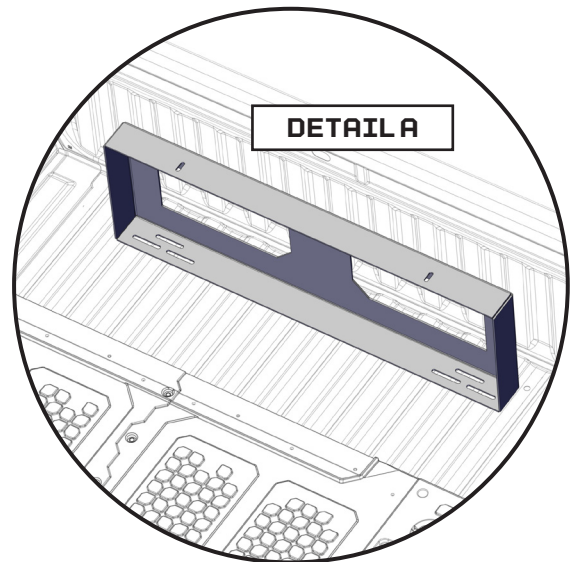

STEP 2:

PREPARE BRACKETS



1. Locate the “I” mounting holes on each side of the three flat brackets.
2. Insert an elevator bolt through all of the the “I” mounting holes from UNDER the big flat brackets. Be sure to seat the rectangular flange on the bolt into the bracket mounting hole.
3. Use a piece of tape on the underside of the bracket to hold the elevator bolts in place.
4. Place the big flat brackets on top of the Drawer System, one over each of the metal pucks. The Roman numerals must be facing towards the tailgate. The elevator bolt tails will be facing up.

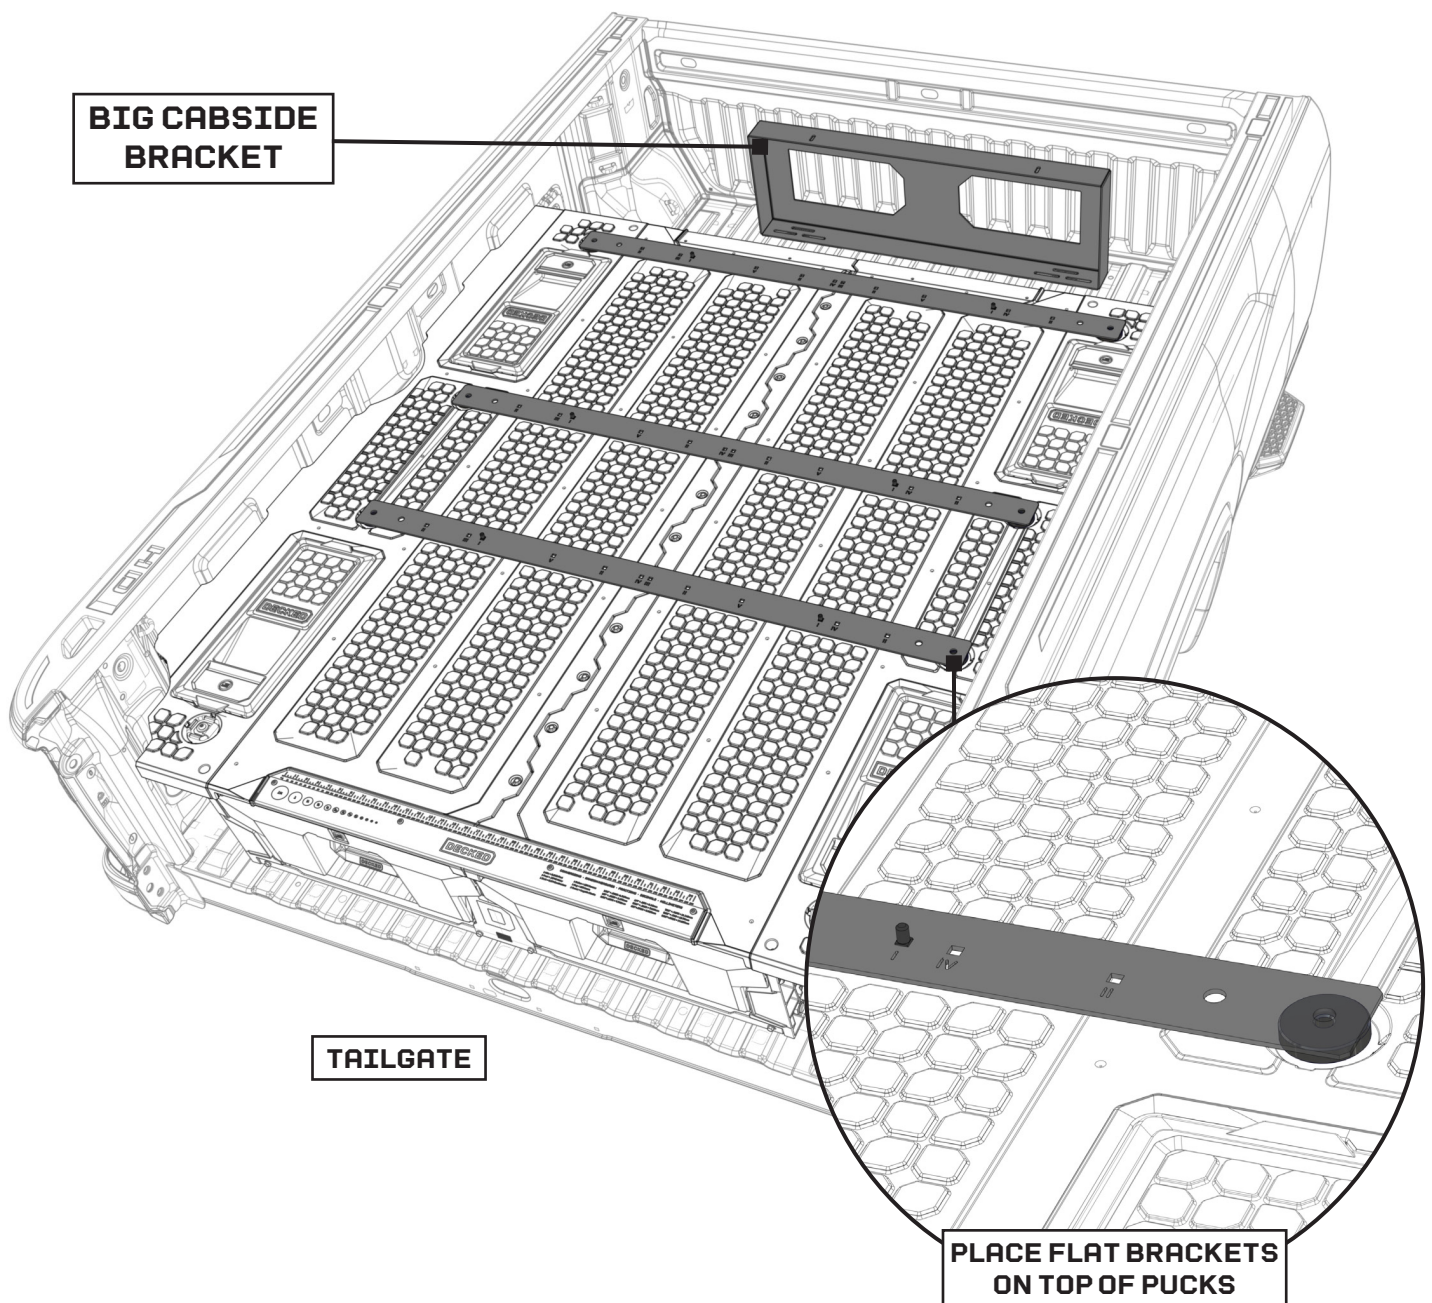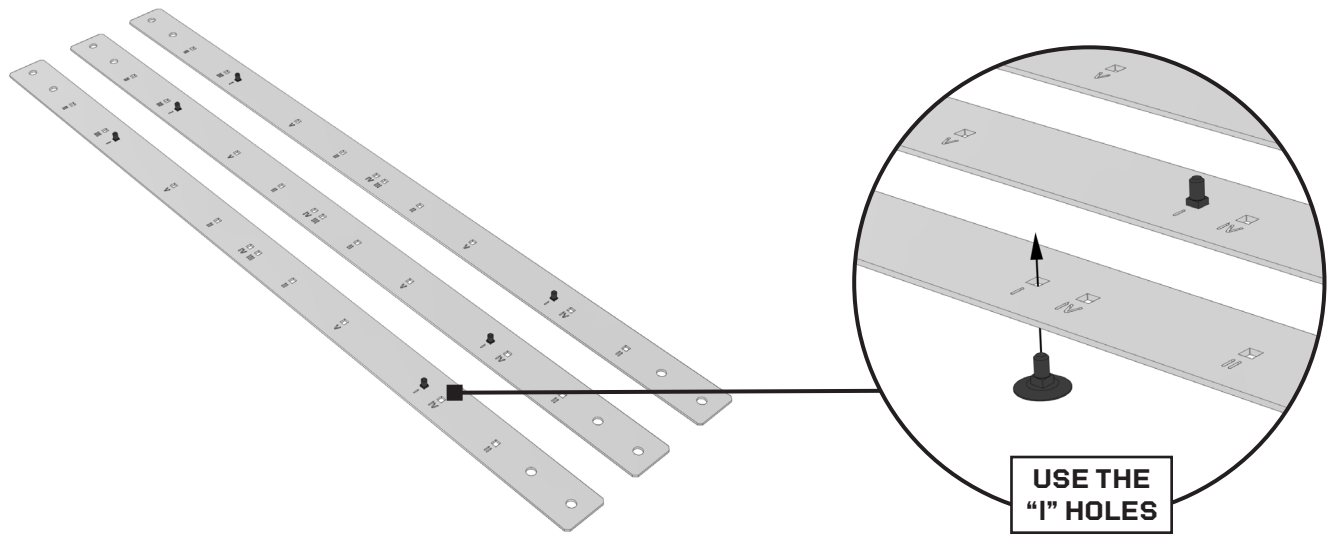

STEP 3:

SECURE BRACKETS

1. Use the 2.5" long bolts in the bracket hardware kit. Install a metal washer and nylon washer onto the bolt.
2. Thread the bolt and washers through the brackets and pucks and into the tie down brackets under the panels. Leave threaded, but loose. Repeat with the other five tie down locations. DETAIL A.
3. Support the CargoGlide and pull the tray out two stops. **WARNING:** Make sure the CargoGlide is supported at the tailgate end to avoid damage.
4. Carefully team lift the Cargo Glide and carefully place over the brackets and elevator bolts, confirming the elevator bolts are seated into a slot on the bottom frame.
5. Install one flanged nut onto each elevator bolt. Leave these loose for now. DETAIL B.

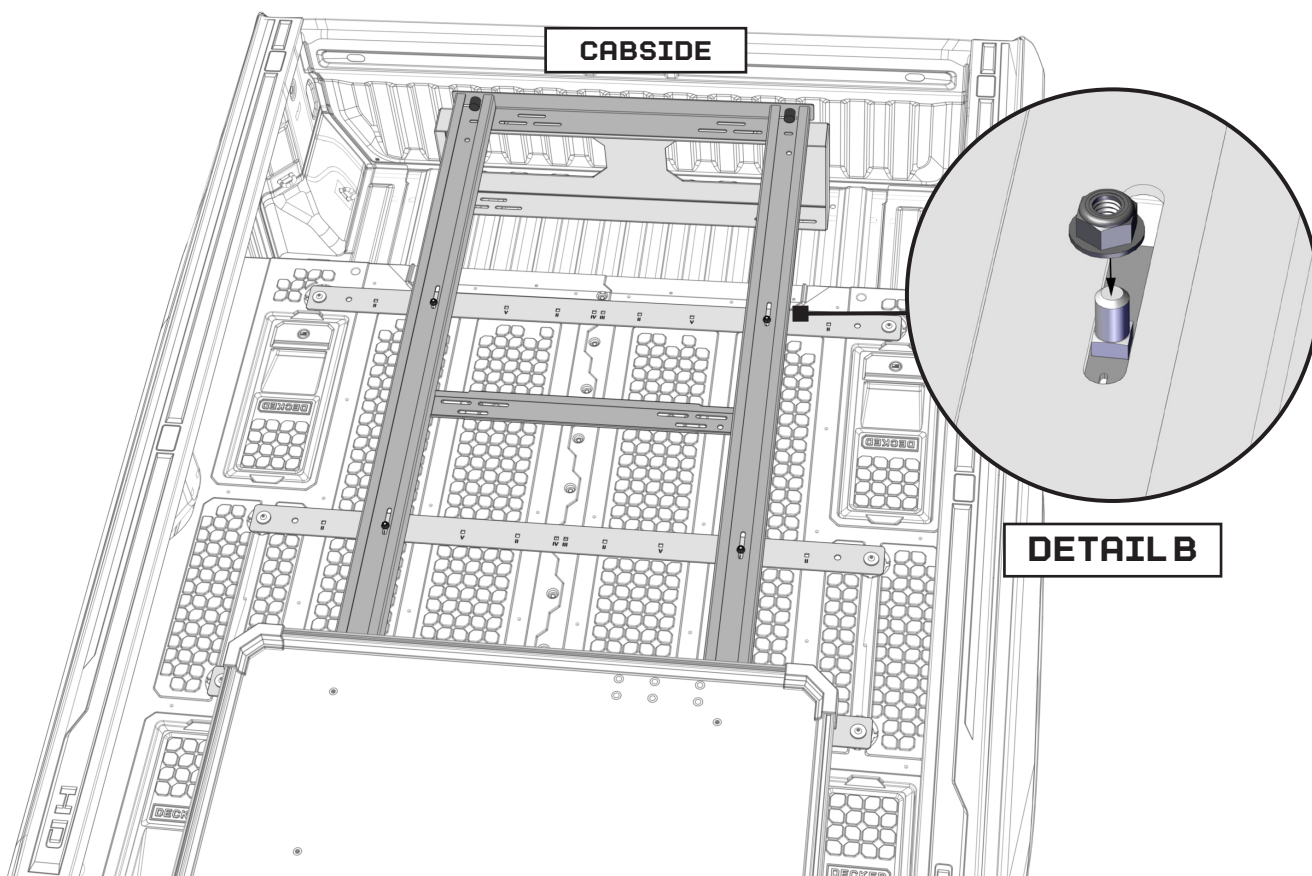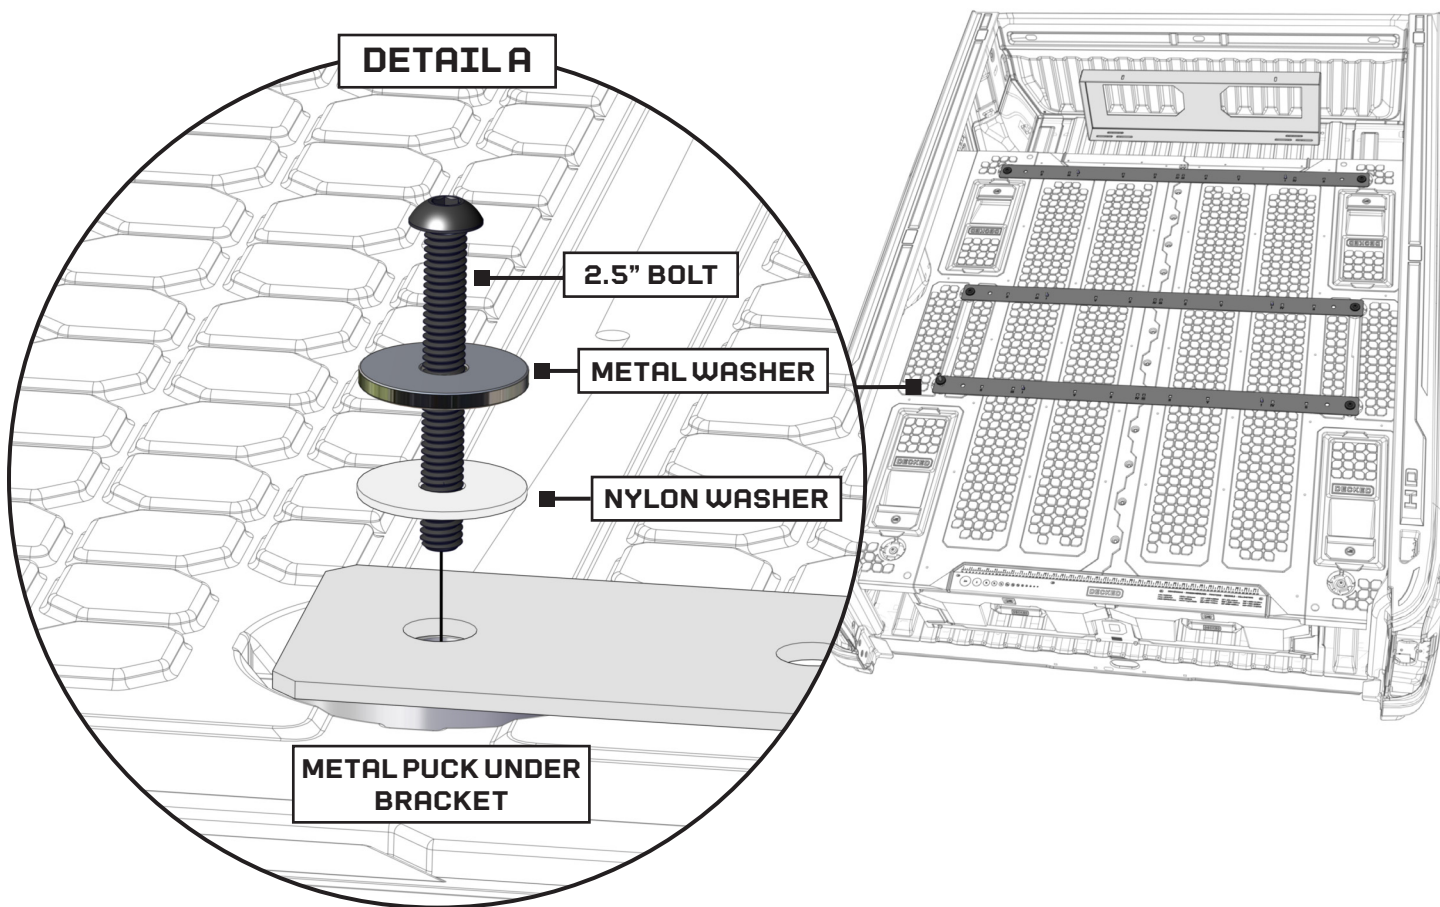


STEP 4:

SECURE YOUR POSITION


1. Align the cabside bracket under the mounting holes on the CargoGlide frame.
2. Secure the cabside bracket to the CargoGlide frame as shown; Install a small washer on a 1.5" bolt and install through the top of the CargoGlide frame and into the mounting hole on the cabside bracket. Confirm the back of the bracket and CargoGlide frame are aligned. Secure with a flanged nut from under the cabside bracket. Leave these loose. You'll remove them in the next step. DETAIL A.
3. Position the CargoGlide into the final mounting position. Center the system from left to right.
4. If CargoGlide High Sides will be used, install them now to confirm proper fitment for the installation.
5. Leave at least 1" of clearance from the cabside edge of the Cargo Glide frame to the cabside bulkhead. Move frame if needed. DETAIL B.

Confirm the tailgate can be fully closed and there is proper clearance at the cabside to lock the tray shut.


Check for fitment. Just like snowflakes, all truck beds are different! Confirm there will be enough clearance to fully stow the Cargo Glide tray, any accessories AND to close the tailgate. There is approximately a 1.75" tray overhang over the bottom frame on the tailgate side. Install all accessories (Cargo Glide High Sides) before confirming fitment.

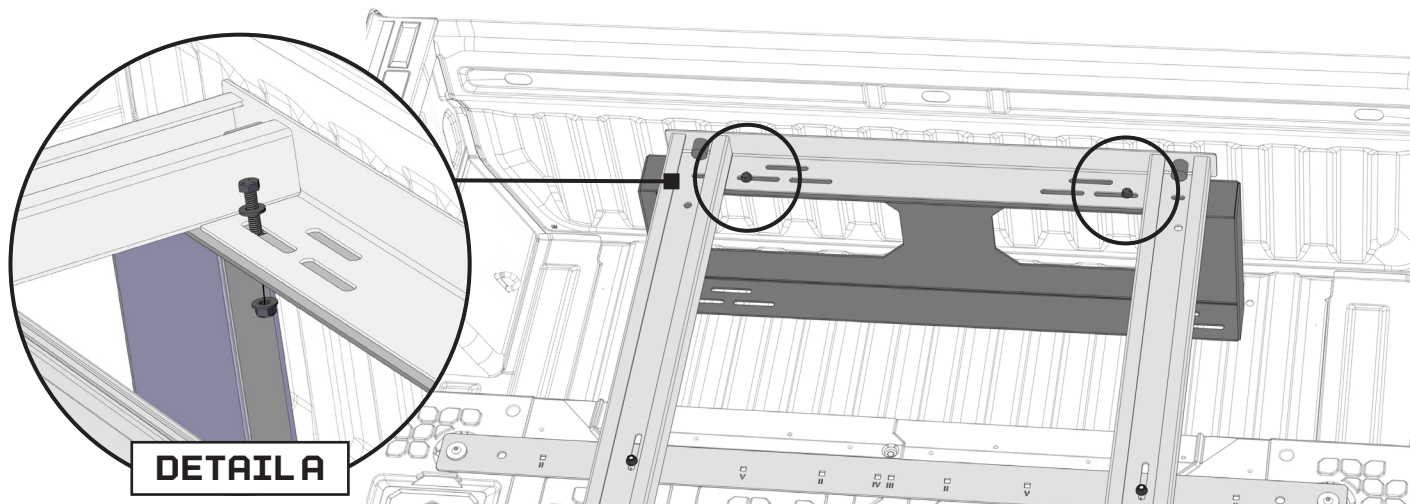

**INSTALL HIGH SIDES IF
PURCHASED. CHECK FOR
CLEARANCE.**

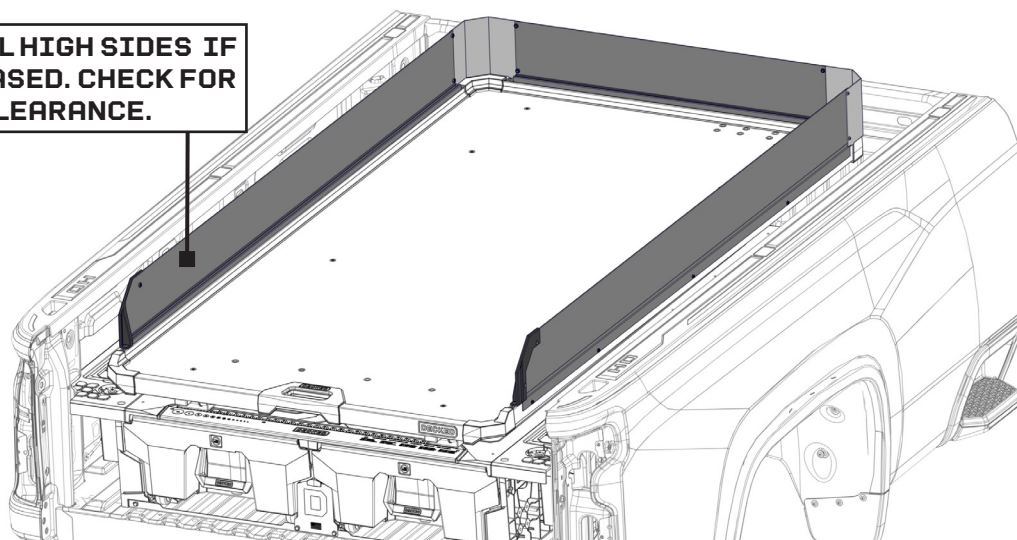

DETAIL B

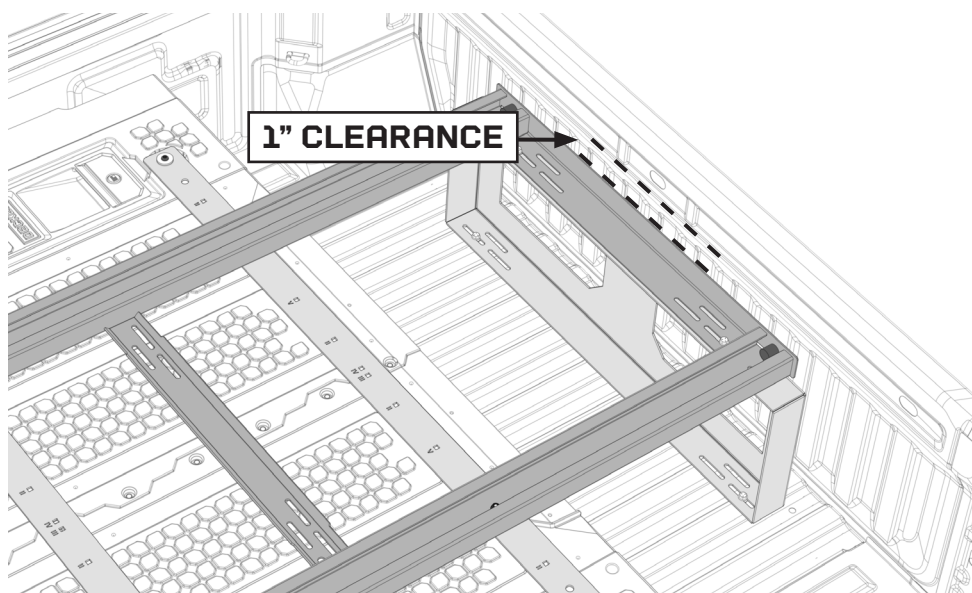

STEP 5:

MARK YOUR TARGET

1. Plus nuts must be installed in the bed floor to secure the Big Cabside Bracket to the truck bed floor.
2. Locate the appropriate mounting location for the plus nut installation under the Big Cabside Bracket, depending on your truck.

NOTE: Holes must be placed at least 1/4" from any edges of the top flat rib surface. The slots in the bottom frame ensure plus nuts can be installed on the top and in the middle of the floor ribs.


3. Use a marking pen to mark one drilling location on each side of the bracket. DETAIL A.
4. Carefully remove the bolts, washers and nuts from the top of the Big Cabside Bracket.
5. Move the Big Cabside Bracket out of the way to expose the drilling area.
6. Install a drill stop set to 1/2" depth onto a 5/16" drill bit and drill a pilot hole in each location.
7. Install a drill stop set to 1/2" depth on a 1/2" drill bit and enlarge the holes you just drilled.
8. Seal the drilled holes with self-etching primer.
Let it dry.

IMPORTANT:


ELECTRIC AND HYBRID VEHICLES MAY HAVE BATTERIES AND/OR HIGH VOLTAGE ELECTRICAL LINES UNDER THE TRUCK BED.

CONFIRM LOCATIONS OF ALL BATTERIES AND ELECTRICAL LINES BEFORE DRILLING INTO YOUR BED. DO NOT DRILL INTO BATTERIES OR ELECTRICAL LINES.

**DETAIL A:
MOUNTING HOLES MUST BE CENTERED
AND ON THE TOP OF A RIB**

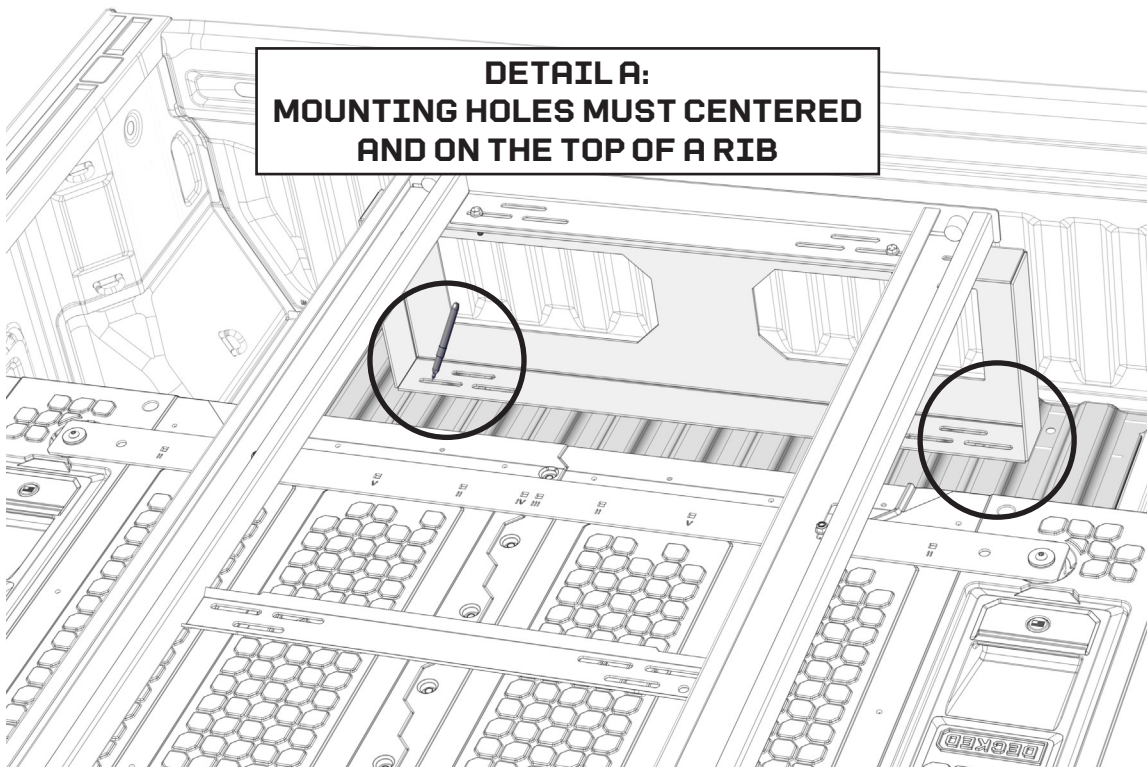

**DETAIL B:
MOVE BRACKET AND DRILL
PLUS NUT MOUNTING HOLES**

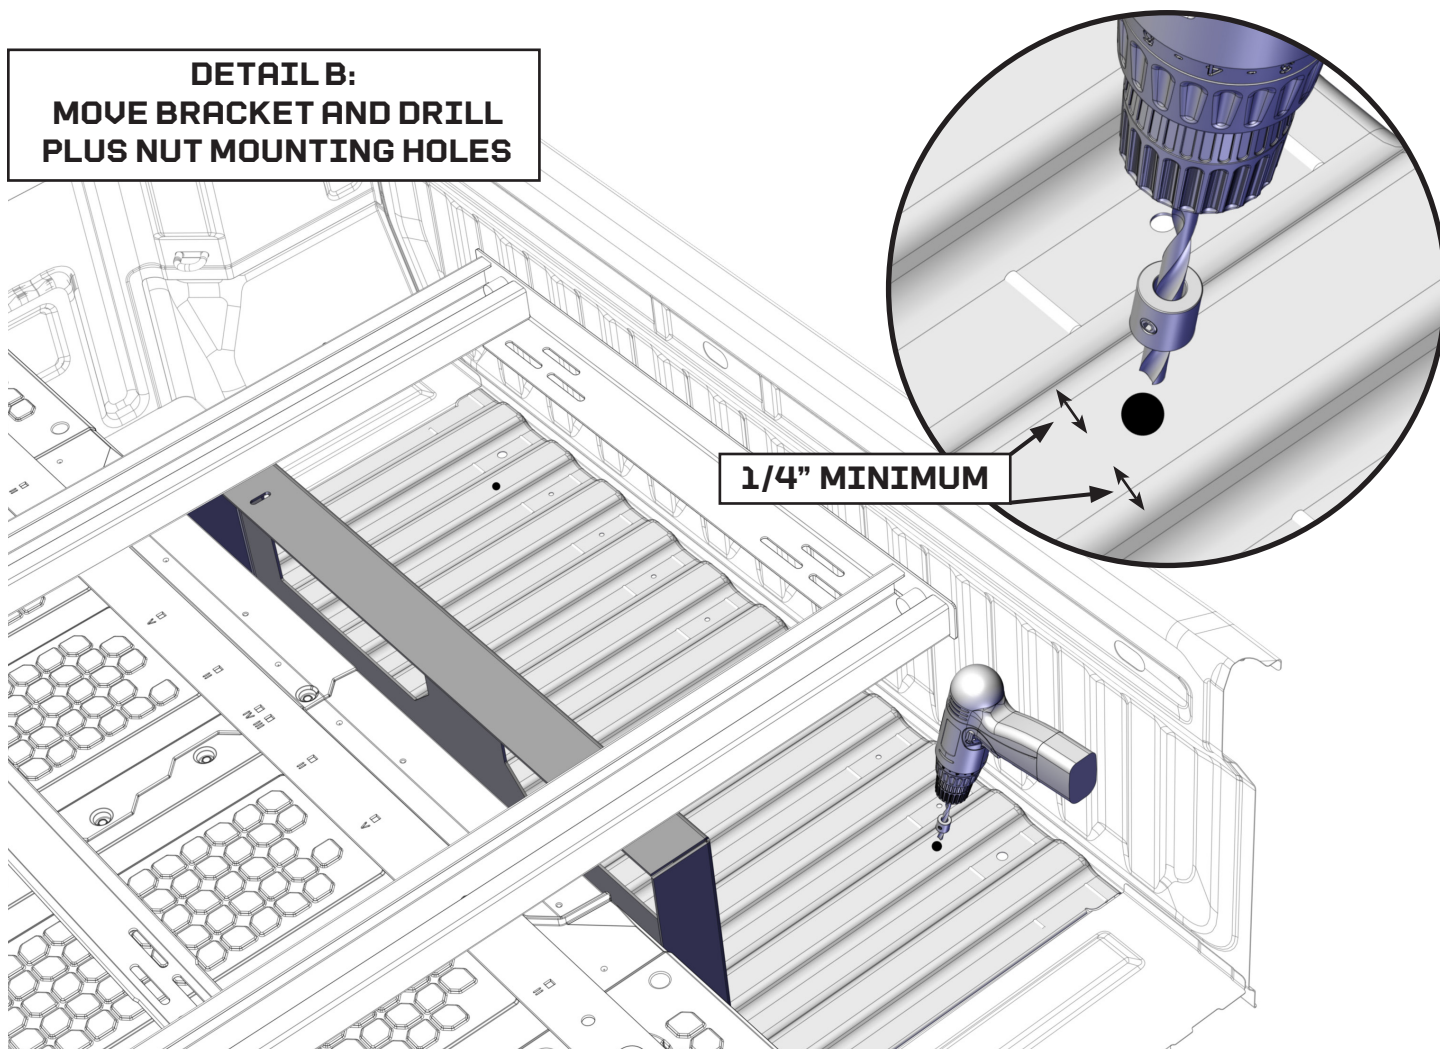


STEP 6:


CRIMP YOUR NUTS

1. Insert a plusnut anchor into each hole. DETAIL A.
2. Using a wrench to hold the plus nut compression tool in place, use a ratchet and socket or impact driver to tighten the bolt into the plus nut. As you tighten the bolt, you will feel strong resistance, then light resistance, then strong resistance again as it crimps the plus nut anchor under the vehicle bed. DO NOT OVERTIGHTEN. DETAIL B.
3. After the plus nut has been fully crimped, remove the bolt and repeat on the other side.
4. Replace the Big Cabside bracket over the plus nuts.
5. Reinstall the 1.5" bolt, small washer and flanged nut on the top of the Big Cabside Bracket. DETAIL C.
6. Install a small washer onto a 1.5" bolt and install through the bottom of the Big Cabside Bracket into the plus nut. Tighten until snug. DETAIL C.


DETAIL A

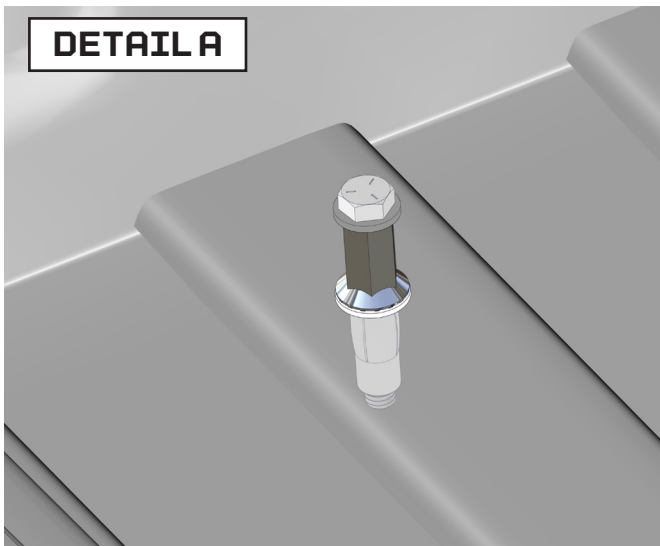


DETAIL B

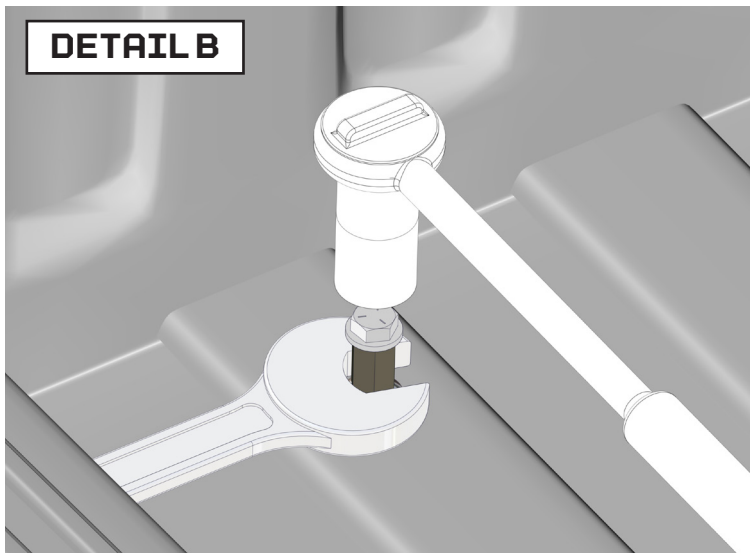

CRIMPED PLUS NUT

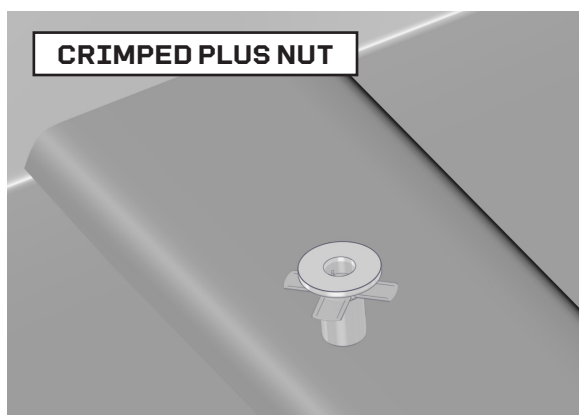




DETAIL C

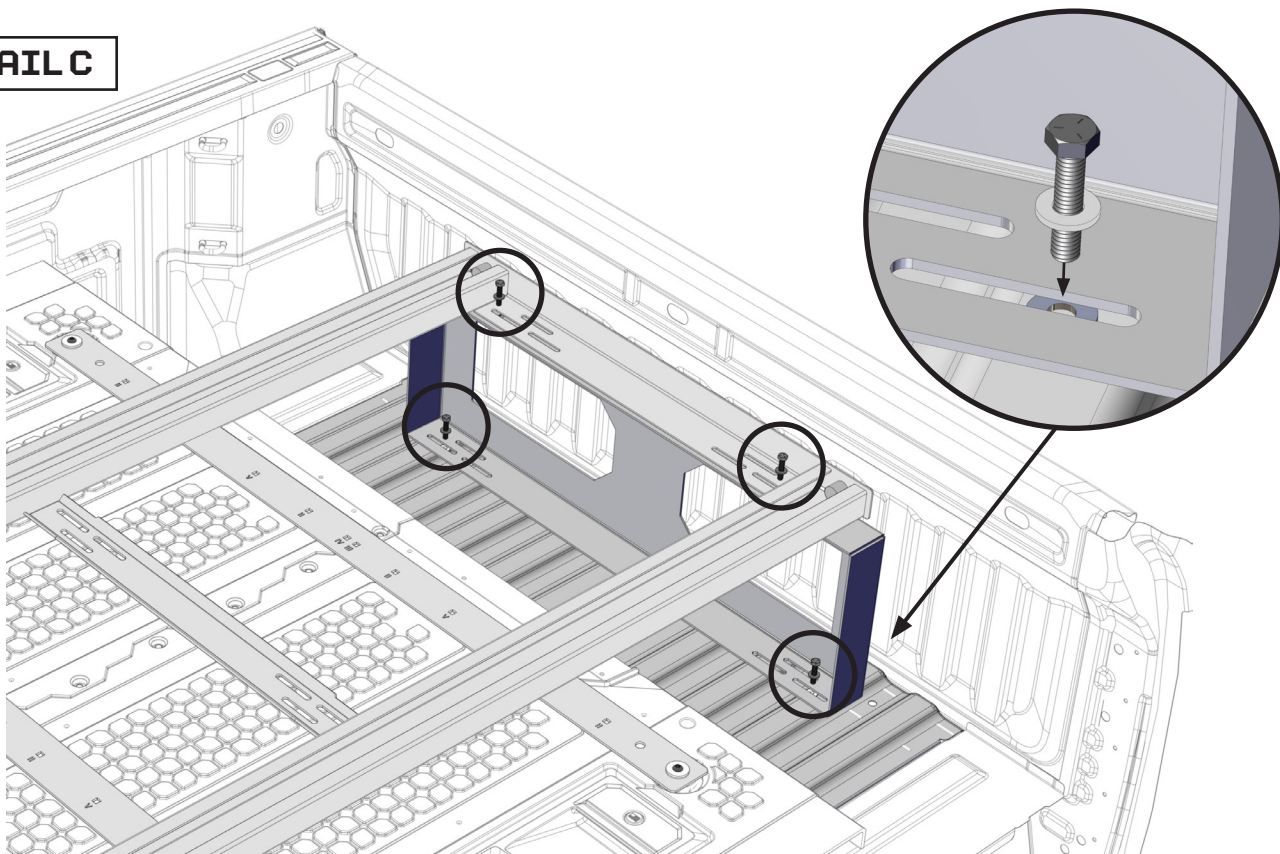

STEP 7:

TIGHTEN AND CONQUER

1. When the Cargo Glide frame is in place, tighten the six Big Flat Bracket bolts. DETAIL A.
2. Tighten the six elevator bolt nuts. DETAIL B.
3. Check tray function.

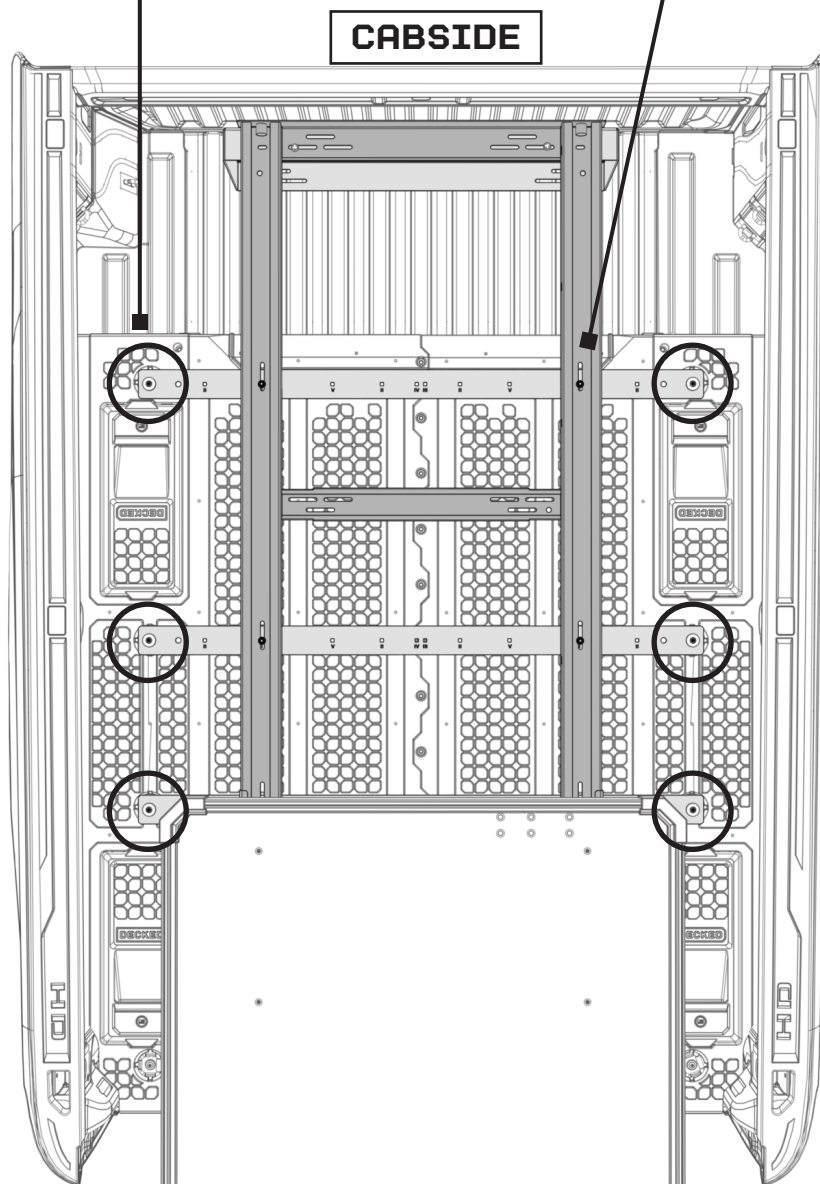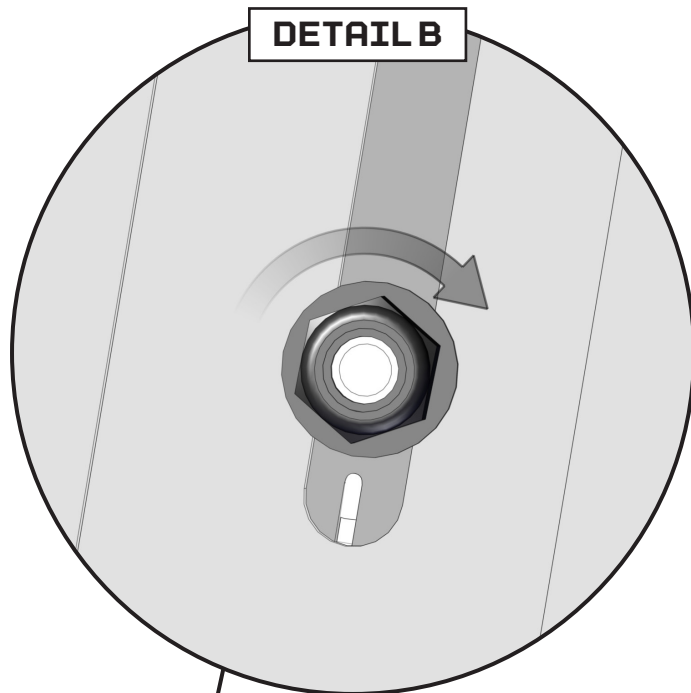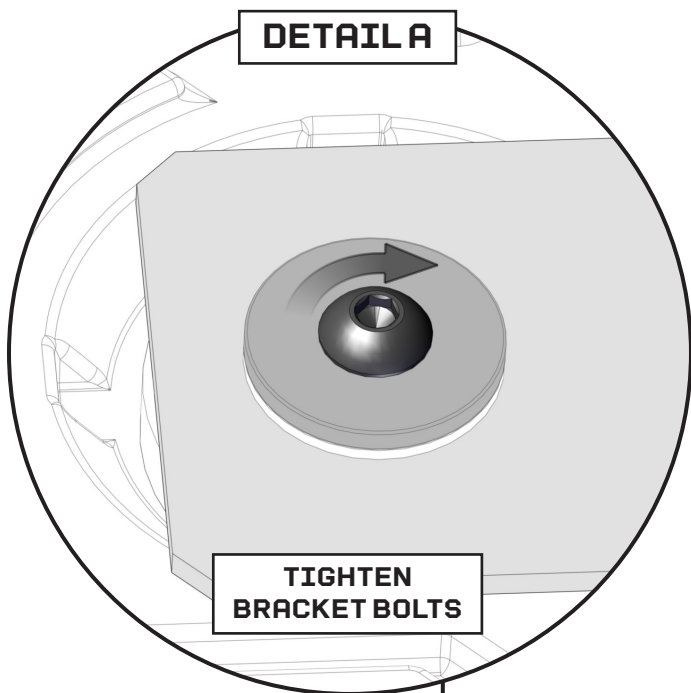

**CONGRATS,
GAME CHANGER!

YOU DID IT.**

Crack open a cold one of your liking, sit back
and admire your work. Now get busy organizin'!



DECKED PRODUCTS LIMITED LIFETIME WARRANTY

(Valid on DECKED Products purchased on or after 8/1/2021)

DECKED LLC, (the "Manufacturer") warrants the original purchaser only that DECKED Truck and Van Products (The "DECKED" Product) will be free from defects in material and workmanship from the date of purchase and continuing for the expected lifetime of the DECKED Product. The DECKED Product must be registered by the original purchaser with DECKED, LLC via its website at, decked.com/register, and a copy of the original sales receipt must be supplied to the Manufacturer at the time a warranty claim is made. This warranty terminates if the original purchaser transfers the DECKED Product to any other person or vehicle.

WHAT IS COVERED

All DECKED Products identified above on or after August 1, 2021. **DECKED's Limited Lifetime Warranty applies to US and Canadian customers only. International shipments are covered by DECKED's 3 Year Limited Warranty.**

WHAT WE WILL DO TO CORRECT PROBLEMS

Subject to the limitations and exclusions described in this limited warranty, the Manufacturer will remedy defects in workmanship or materials by providing one of the following remedies at its option and without charge to the original purchaser for parts: (a) repairing the defective portion of the DECKED Product or (b) replacing the entire DECKED Product. In addition, the Manufacturer may elect at its option not to repair or replace the DECKED Product, but rather issue to the original purchaser a refund equal to the purchase price paid for the DECKED Product or a credit to be used towards the purchase of a new DECKED Product.

WHAT IS NOT COVERED

This limited warranty expressly excludes:

- Damage or defects caused by normal wear and tear, cosmetic rust, scratches, accidents, unlawful vehicle operation, installation in a non-supported vehicle or installed in a vehicle which does not match the DECKED Product's SKU-intended fitment or use, or modification of the product, or any types of repair of a DECKED Product other than those authorized or provided by the Manufacturer.
- Damage or defects resulting from conditions beyond the Manufacturer's control and specifications including, but not limited to modification, misuse, overloading, or failure to assemble, install or use the DECKED Product in accordance with the Manufacturer's written instructions or guidelines included with the DECKED Product or separately made available to the original purchaser.
- Damage to the contents of the DECKED Product or vehicle.
- TO THE EXTENT PERMITTED BY LAW, IN NO EVENT SHALL THE MANUFACTURER BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, INCLUDING ECONOMIC LOSS, WHETHER RESULTING FROM NONPERFORMANCE, USE, MISUSE, OR INABILITY TO USE THE DECKED PRODUCT OR THE MANUFACTURER'S NEGLIGENCE.

NO OTHER EXPRESS WARRANTY APPLIES

This Limited Lifetime Warranty is the sole and exclusive warranty for DECKED Products. No employee, agent, dealer, or other person is authorized to alter this warranty or make any other warranty on behalf of DECKED LLC.


NOTIFICATION PROCEDURES

If the DECKED Product does not conform with the terms of this limited warranty, the original purchaser must promptly notify the Manufacturer in writing upon discovery of the nonconformity. In order to receive remedies under this limited warranty, a warranty claim must have been registered with DECKED LLC by the original purchaser, must describe the nature of the products nonconformity, include a copy of the original sales receipt, invoice, or other proof of purchase and be accompanied with photos or video. Repairs or modifications made to the DECKED Product by other than the Manufacturer or its authorized agent will nullify this limited warranty. Coverage under this limited warranty is conditioned at all times upon the owner's compliance with these required registration, notification, and repair procedures.

Product registration may be performed at:
decked.com/register

Warranty claims must include reciprocal contact information and may be made via certified mail or email to:

DECKED Warranty and Claims
PO Box 885
Ketchum, ID 83340
warranty@decked.com
208-806-0251

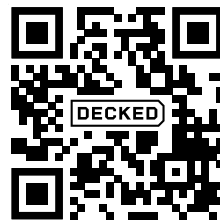

**SCAN TO REGISTER
YOUR SYSTEM**

Register your system at
decked.com/warranty

PATENTS

Covered by one or more patents:
www.decked.com/pages/patents

DECKED