

INSTALLATION INSTRUCTIONS D-CO CASE MOUNTING KIT T-TRACK

TOOLS REQUIRED
drill and 1/4" drill bit
5/32" hex key
12 mm wrench
Blue Loctite 242
torque wrench (in-lb)



WARNING

- It is the responsibility of the installer to confirm the D-Co Case is anchored to the T-Track in four locations per the instructions.
- Fasteners should be checked periodically and retightened if necessary. Torque to recommended specs only.
- Do not install on top of rubber mats or any other object.
- Max kinetic payload is 50 lbs. Do not exceed 50 lbs.
- The track nuts included will fit most standard track systems. The installer must confirm proper track nut fitment. Additional track nuts may be needed.

STEP 1 - PREPARE D-CO CASE

Place a mounting plate in each depression on the tub floor. Use the plate as a template to drill a 1/4" hole through the bottom of the D-Co Case tub. Remove the mounting plates for now.

STEP 2 - LOCATE POSITION

Decide where the D-Co Case will be placed. Move the rack's track to align to the mounting holes on the D-Co Case. Leave the tracks loose. The distance between the tracks is 21.5".

STEP 3 - CHOOSE THE CORRECT HARDWARE

IMPORTANT: We have included two sizes of track nuts to fit most tracks. Test fit the larger track nut first. When tightened fully, the edges of the track nut must be flush against the inside of the track for proper fitment.




DETAIL A: The LARGE track nut in front fits properly.

STEP 4 - KEEP IT TIGHT.

Apply one drop of Loctite 242 to the threads on the STAND-OFF and MOUNTING BOLT.

STEP 5 - ALIGN YOUR NUTS

Place a mounting plate into each of the four depressions. Using the best fitting track nut, loosely assemble the hardware as shown. DETAIL B. Align the D-Co Case and hardware over the tracks. Insert the track nuts into the track.

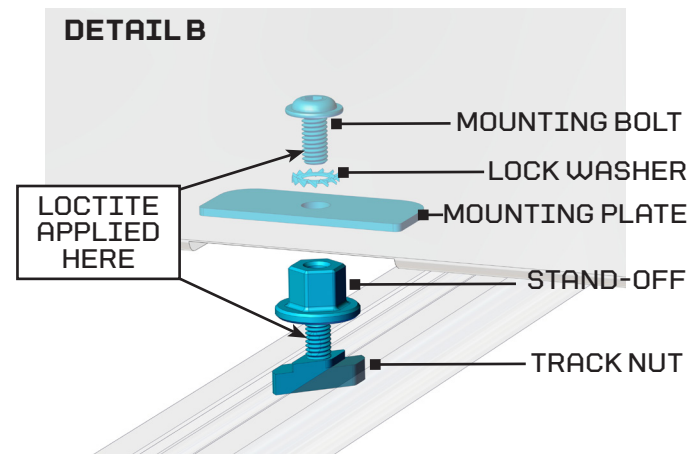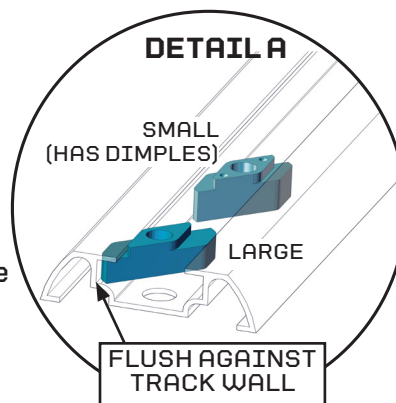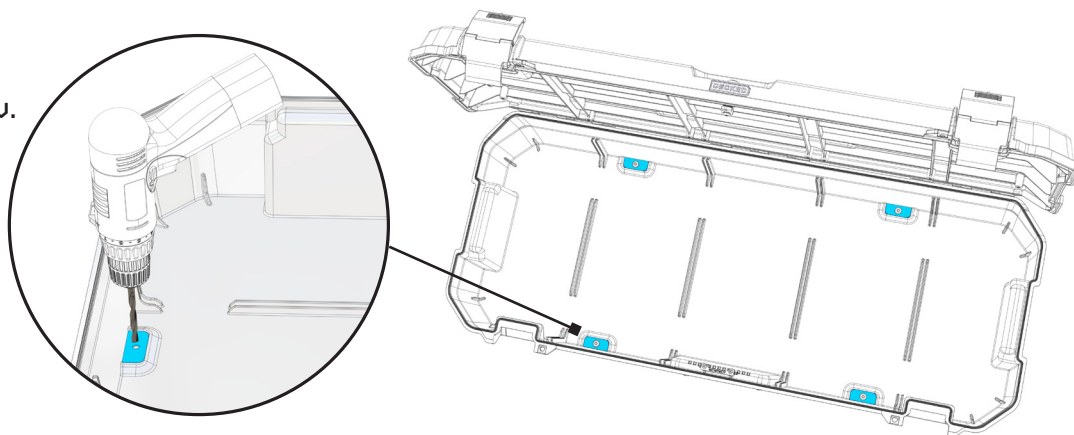



INSTALLATION INSTRUCTIONS

D-CO CASE MOUNTING KIT

T-TRACK


TOOLS REQUIRED
drill and 1/4" drill bit
5/32" hex key
12 mm wrench
Blue Loctite 242
torque wrench (in-lb)

STEP 6 - TIGHTEN TRACK NUT FIRST

Use the wrench to tighten the stand-off into the track nut.
Recommended torque is 80 in-lb.

STEP 7 - Tighten the mounting bolts from inside the D-Co Case tub. Recommended torque is 80 in-lb.

STEP 8 - Adjust the rack tracks if necessary.
Tighten track racks per manufacturer directions.

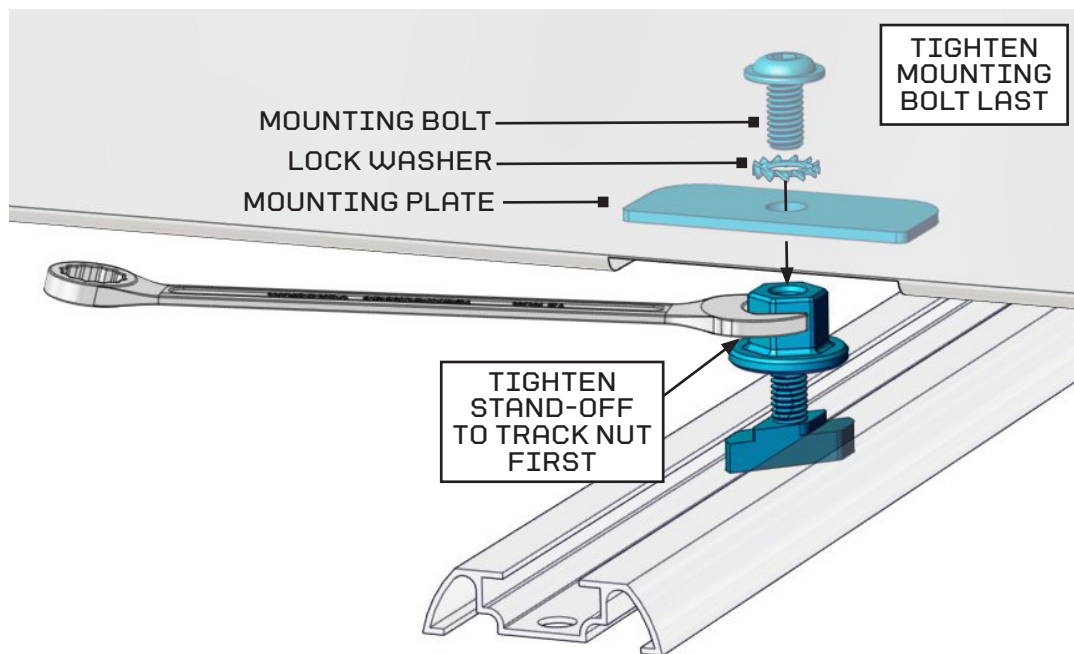

D-CO CASE PREP FOR USE WHEN NOT MOUNTED TO T-TRACK

The D-Co Case mounting holes can be sealed when not mounted.

Remove the D-Co Case from the T-Track by removing the mounting nut and lock washer. Remove the stand-off and track nut. Save all fasteners for later use.

Remove the mounting bracket.

Place neoprene gasket in mounting depression.
Place mounting bracket on top of gasket.
Install the mounting bolt, lock washer and additional nut.
Tighten until secure.

