


DECKED

INSTALLATION

INSTRUCTIONS*

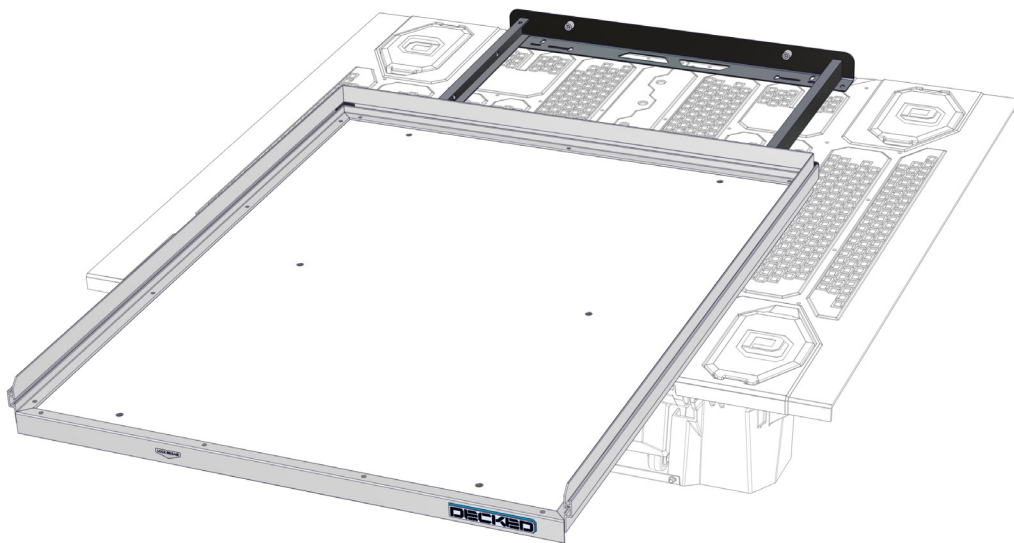

CARGOGLIDE TO LEGACY DECKED DRAWER SYSTEM

FULL SIZE TRUCKS: CG1000-6348 OR CG1000-7348 ONLY

MIDSIZE TRUCKS: CG1000-5641 OR CG1000-6841 ONLY

***NOT RECOMMENDED FOR COMPOSITE BEDS,
RAMBOXES OR SERVICE BODIES***

***Trust us on this one; don't go commando and attempt your install without reading.
You'll just cuss a bunch and create even more chaos in your truck bed.**

TOOLS REQUIRED

- 1/2" wrench
- chisel
- drill
- 1/4" and 5/16" drill bits

INSTALL VIDEO

High tech link to video here or you can visit decked.com/installvideo



CONTENTS

- plus nut tool (assembled on 2.5" bolt with washer and plus nut)
- mounting hardware: plus nuts, 1.5" bolts, washers
- tie down eye bolts: eye bolts, nylon washers, weld nuts
- PRIMER
- Cargo Glide to DECKED LEGACY Drawer System mounting hardware

HEY! TORQUE BOY

READ BEFORE YOU INSTALL

Welcome to DECKED! In a world of crappy instructions, bad advice, and questionable sources of truth, we are here to make sure that your install goes as smoothly as possible, saving you headaches and heartburn. That said, your part is to read the darned instructions!

Warning: It is the responsibility of the installer to ensure the DECKED CG1000 unit is securely fastened to a base which will provide safe and reliable operation.

DO NOT INSTALL ON DROP-IN PLASTIC BEDLINERS, RUBBER MATS OR COMPOSITE BEDS. DO NOT INSTALL ON RAMBOX OR SERVICE BODY SYSTEMS.

The many variations in application and placement of a sliding platform present specific issues to consider for safety and utility. The following recommendations are intended to be general in nature and provide important safety information for the installer to consider during installation.

DECKED DRAWER SYSTEM COMPATIBILITY:

- **DECKED LEGACY SYSTEMS** (have ammo cans) - We have included the hardware and instructions needed to install this Cargo Glide to your legacy drawer system. Please follow these instructions.
- **NEW DECKED DRAWER SYSTEM** (no ammo cans) installs require the purchase of no-drill brackets and instructions from DECKED.com. **DO NOT DRILL INTO YOUR DRAWER SYSTEM!**

IMPORTANT:

DO NOT USE THE PLUS NUT HARDWARE KIT FOUND IN THE CARGLIDE CARTON. USE THE CGIK-DM HW KIT ONLY.

DO NOT INSTALL THE LEGACY DRAWER SYSTEM YET. READ INSTRUCTIONS COMPLETELY BEFORE ATTEMPTING INSTALL. IF LEGACY DRAWER SYSTEM IS ALREADY INSTALLED, IT WILL NEED TO BE REMOVED.

STEP 1:


REMOVE OR ASSEMBLE THE DECKED DRAWER SYSTEM

IMPORTANT: Follow these instructions only if you have a LEGACY DECKED Drawer System - you'll have ammo cans.


No ammo cans? You have a newer system which requires the purchase of NO DRILL CargoGlide mounting brackets and separate instructions. DO NOT DRILL INTO YOUR PANELS! Order the NO DRILL brackets from DECKED.com. Brackets are specific to fullsize or midsize trucks.

NOTE: If your DECKED drawer system has not been installed in the truck, follow the drawer system directions until noted to pause for CargoGlide installation prep.

1. Do not install the drawer system yet. If it is already installed, it will need to be removed for the CargoGlide installation.
2. Remove the DECKED LEGACY drawer system from your truck - follow the DECKED drawer system instructions to remove.
3. Leave the panels attached to the ammo cans.
4. Place the DECKED drawer system on the ground or other flat surface.
5. Connect both panels to the center vert. Set the drawers aside.
6. Remove the CargoGlide top tray. See the CargoGlide instructions for tray removal.

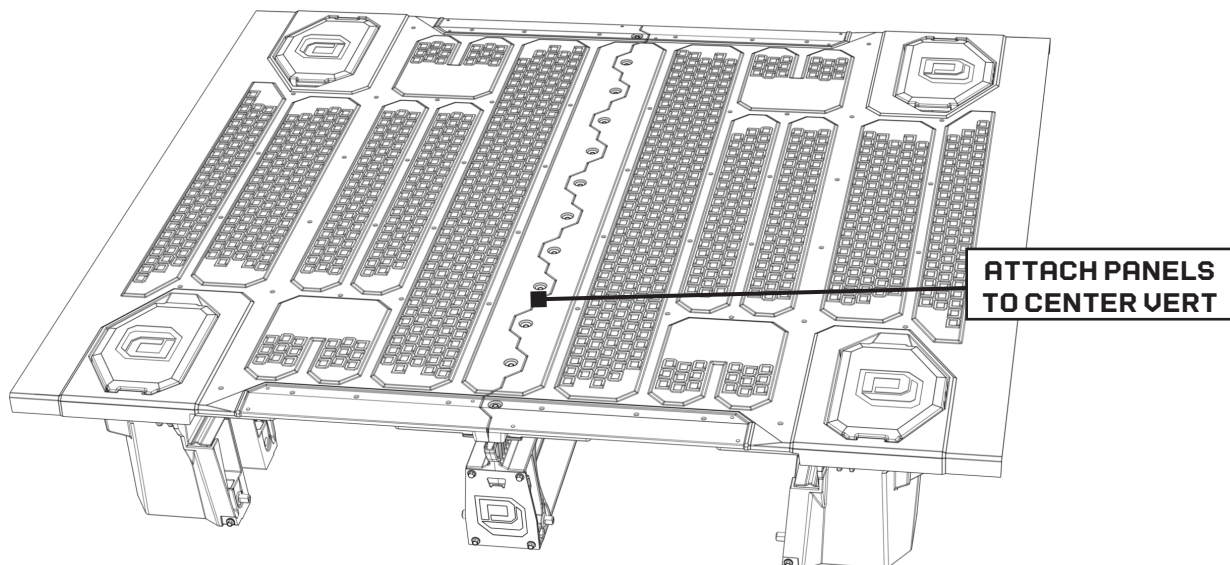

REMOVE DRAWER SYSTEM AND DRAWERS

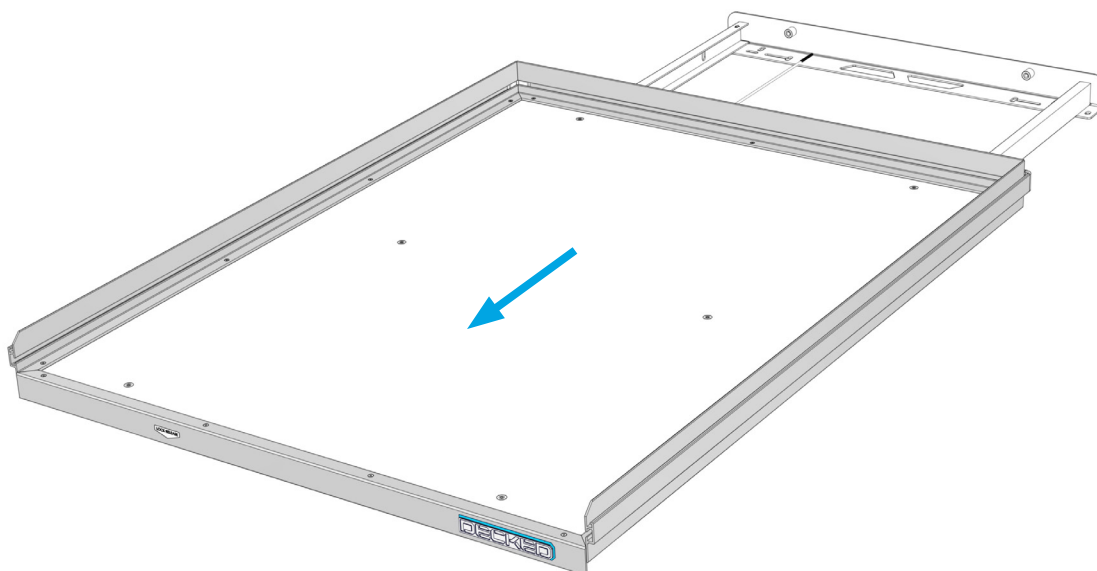

REMOVE CARGO GLILDE TRAY



STEP 2:

ALIGN CARGO GLIDE FRAME TO PANELS

1. Place the frame on the drawer system oriented towards the cabside. Center the frame from left-right. The roller wheels on the bottom frame go on the tailgate end of DECKED.

NOTE: Aligned dimples on top of the DECKED panels indicate the location of steel tubes underneath.

2. Align the four mounting points directly over a dimple in the DECKED panel. Refer to the next page for exact mounting locations based on your truck.
3. Mounting points **MUST** be directly over a dimple in the DECKED panel using the specified Cargo Glide frame mounting points shown for each truck type and bed length.
4. Drilling in the wrong location is **BAD!** The system may leak water into the drawers and the CargoGlide will not be anchored properly.

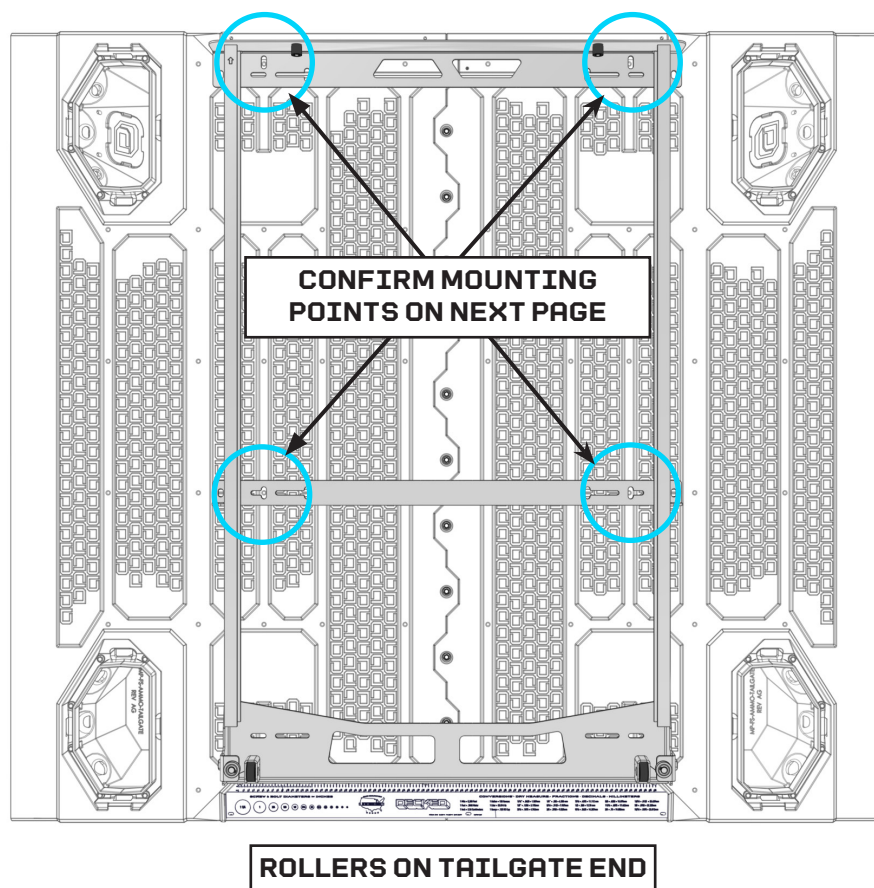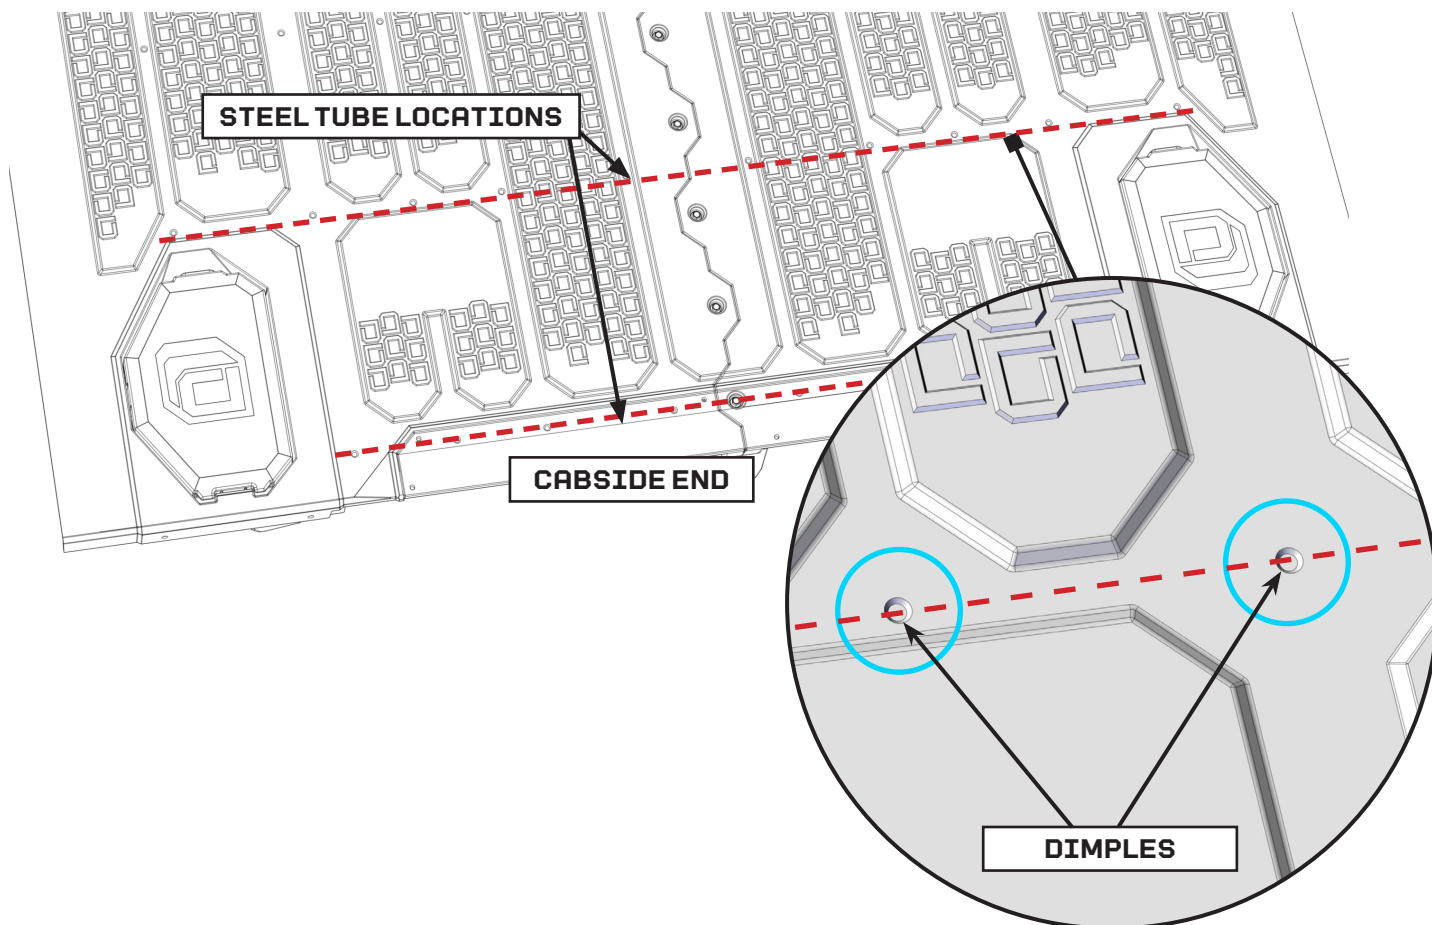

STEP 3:

CONFIRM MOUNTING LOCATIONS

1. Locate the graphic showing your truck type and bed length:

FULL SIZE SHORT (5'5" - 5'9" beds)

FULL SIZE LONG (6'4" - 8' beds)



MIDSIZE SHORT (4'8" - 5'3" beds)

MIDSIZE LONG (6'-6'3" beds)

IMPORTANT: Use only the dimple mounting points and frame mounting locations shown in the graphic for your truck.



2. Once the correct frame position is located, mark the four dimple locations on the panels. You can also mark the mounting holes on the frame for reference later. Move the frame out of the way.
3. Drill pilot holes in the center of the marked dimples with a 1/4" drill bit through the deck panel and lateral steel tube underneath.
4. Make sure to drill all the way through the CENTER of both the top and bottom of the DECKED steel tube.
5. Check the underside of the deck to verify your hole is centered in the steel tube.
6. Use the 5/16" drill bit to enlarge each hole.

FULL SIZE SHORT ONLY

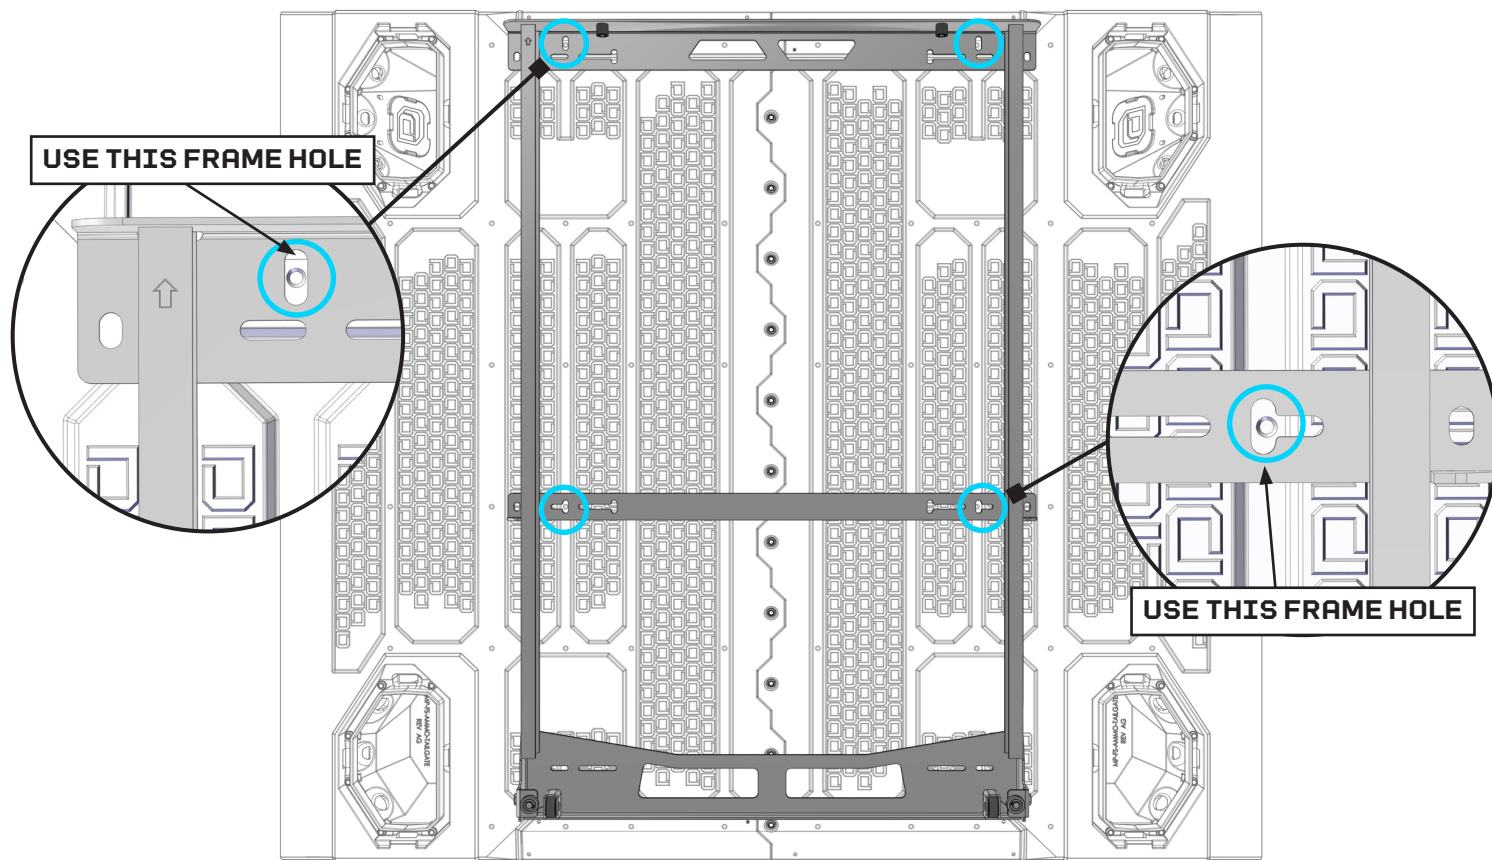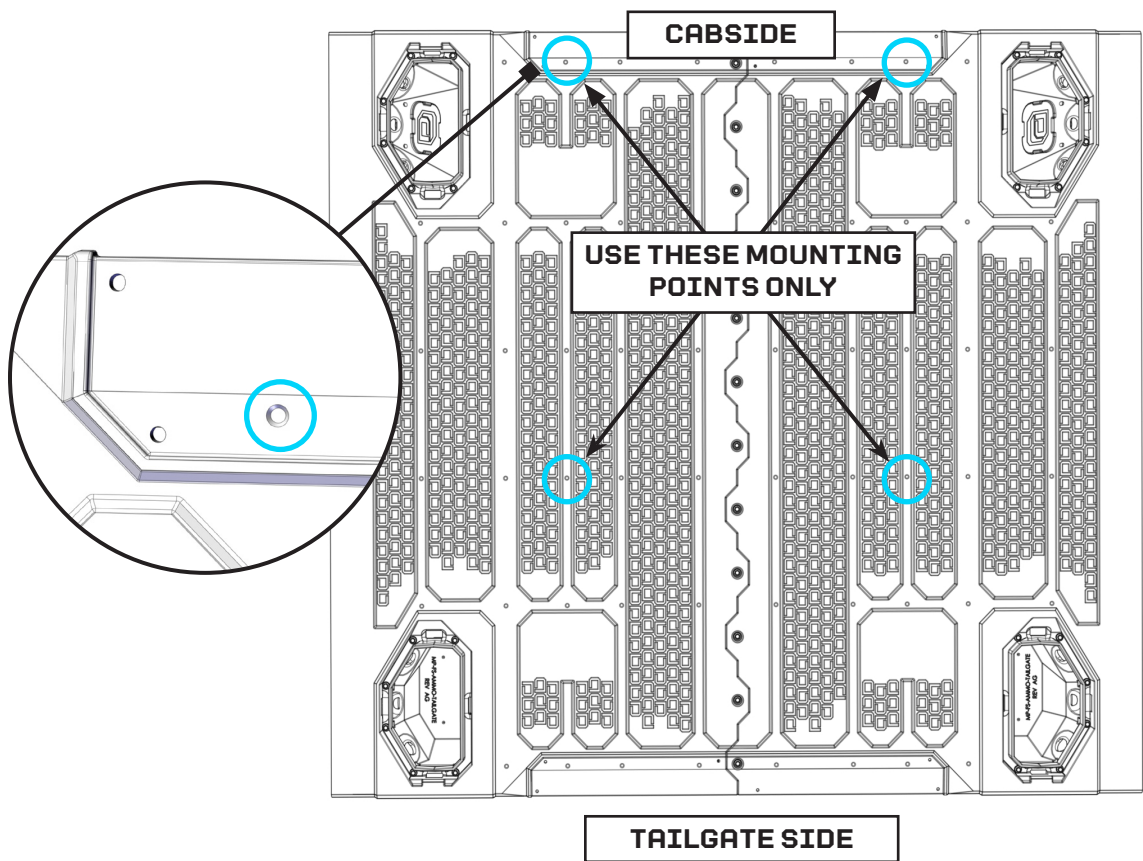


MOUNTING LOCATIONS, CON'T


FULL SIZE LONG ONLY

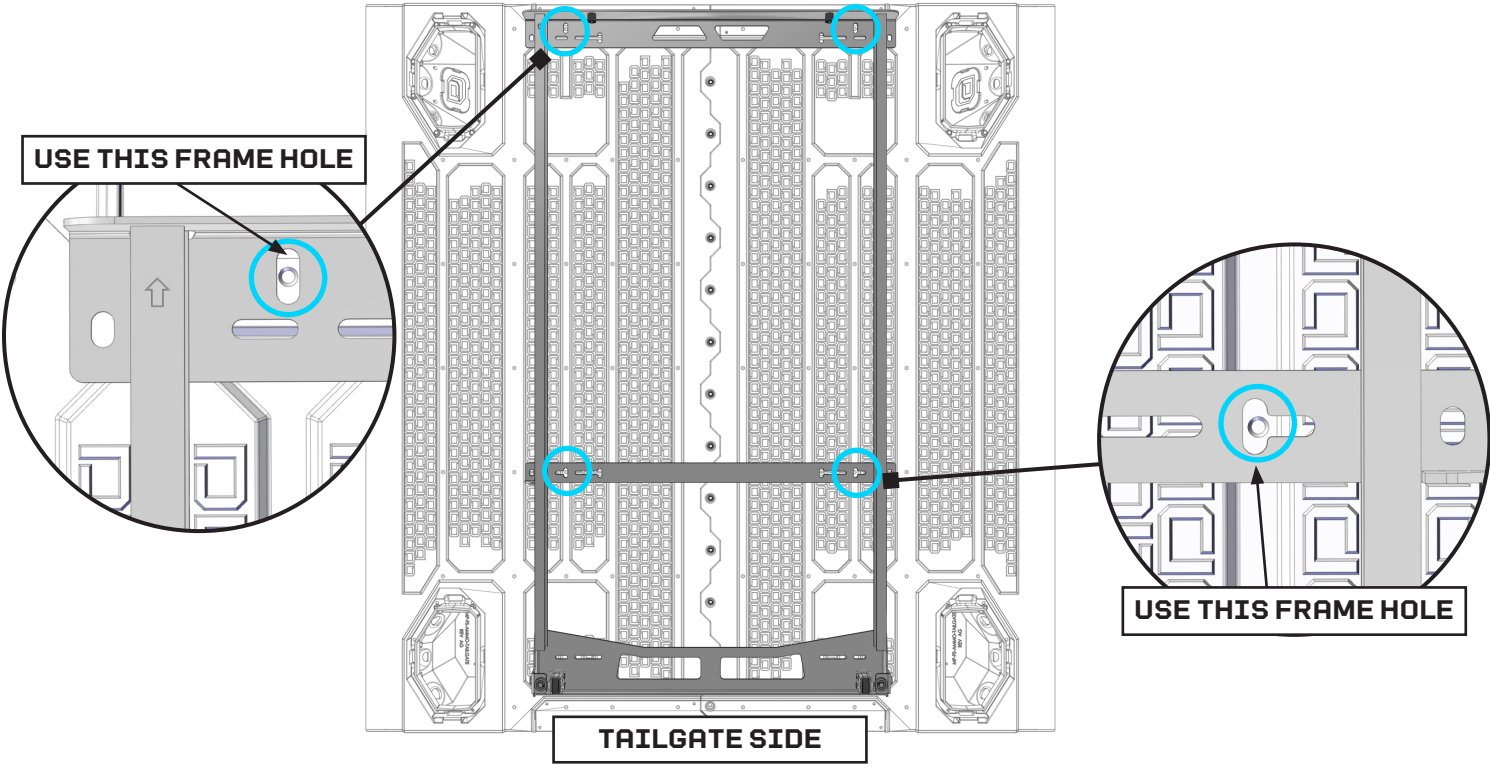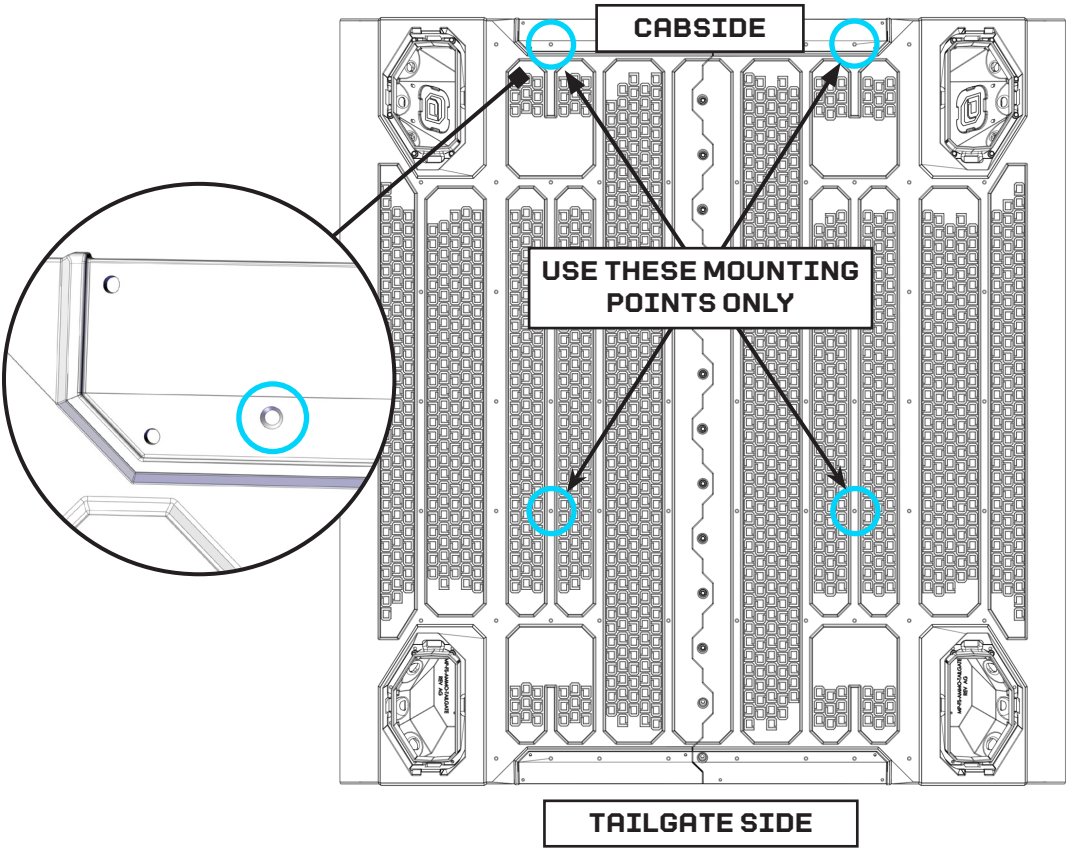

MIDSIZE SHORT ONLY

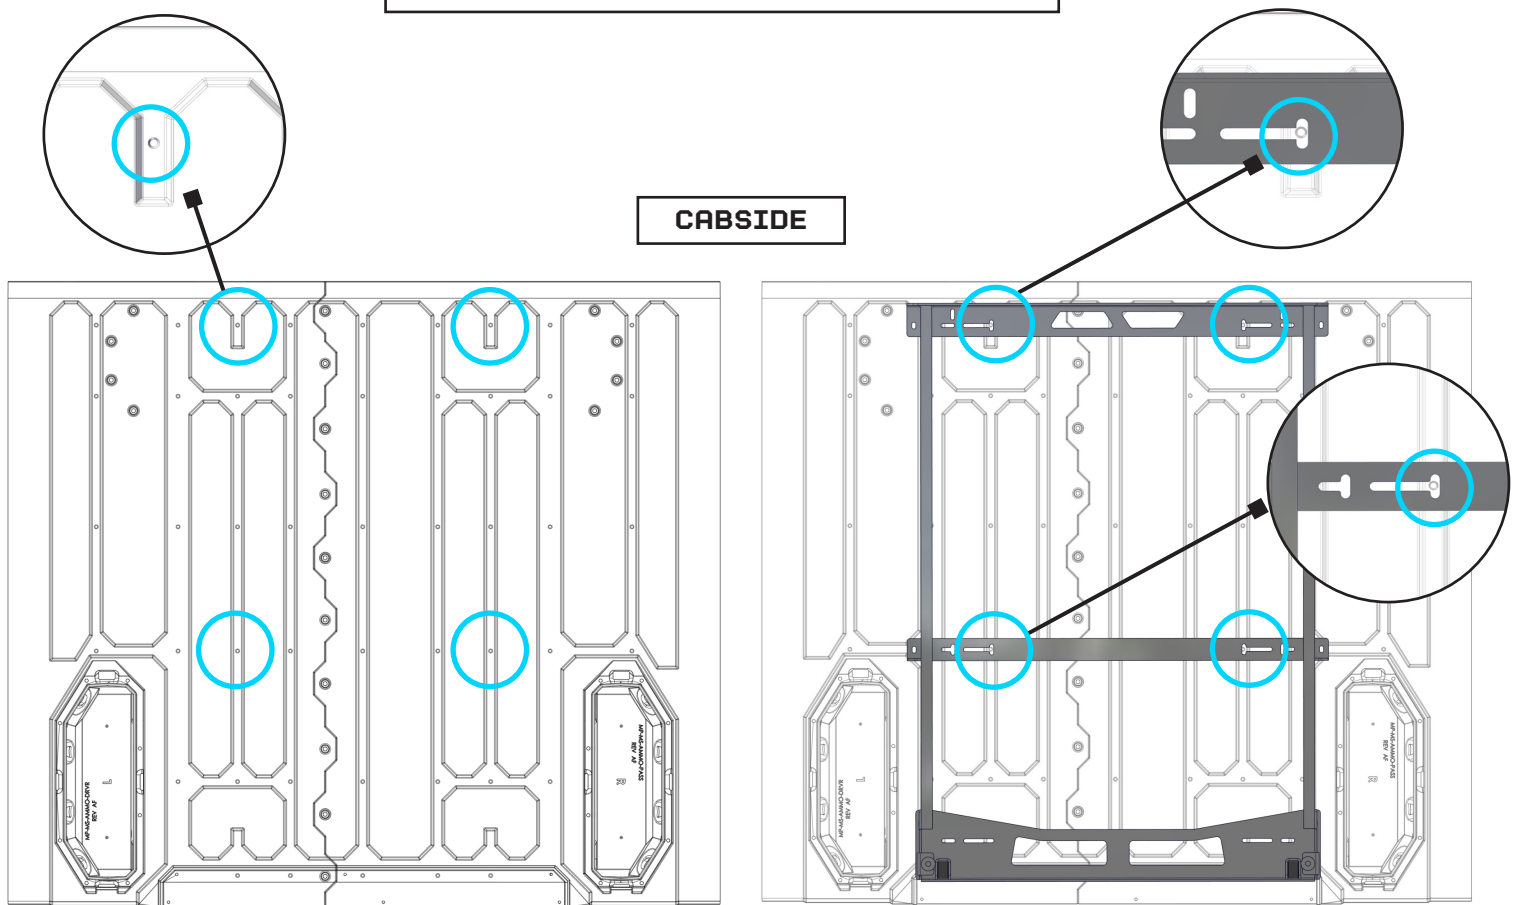


MIDSIZE LONG ONLY

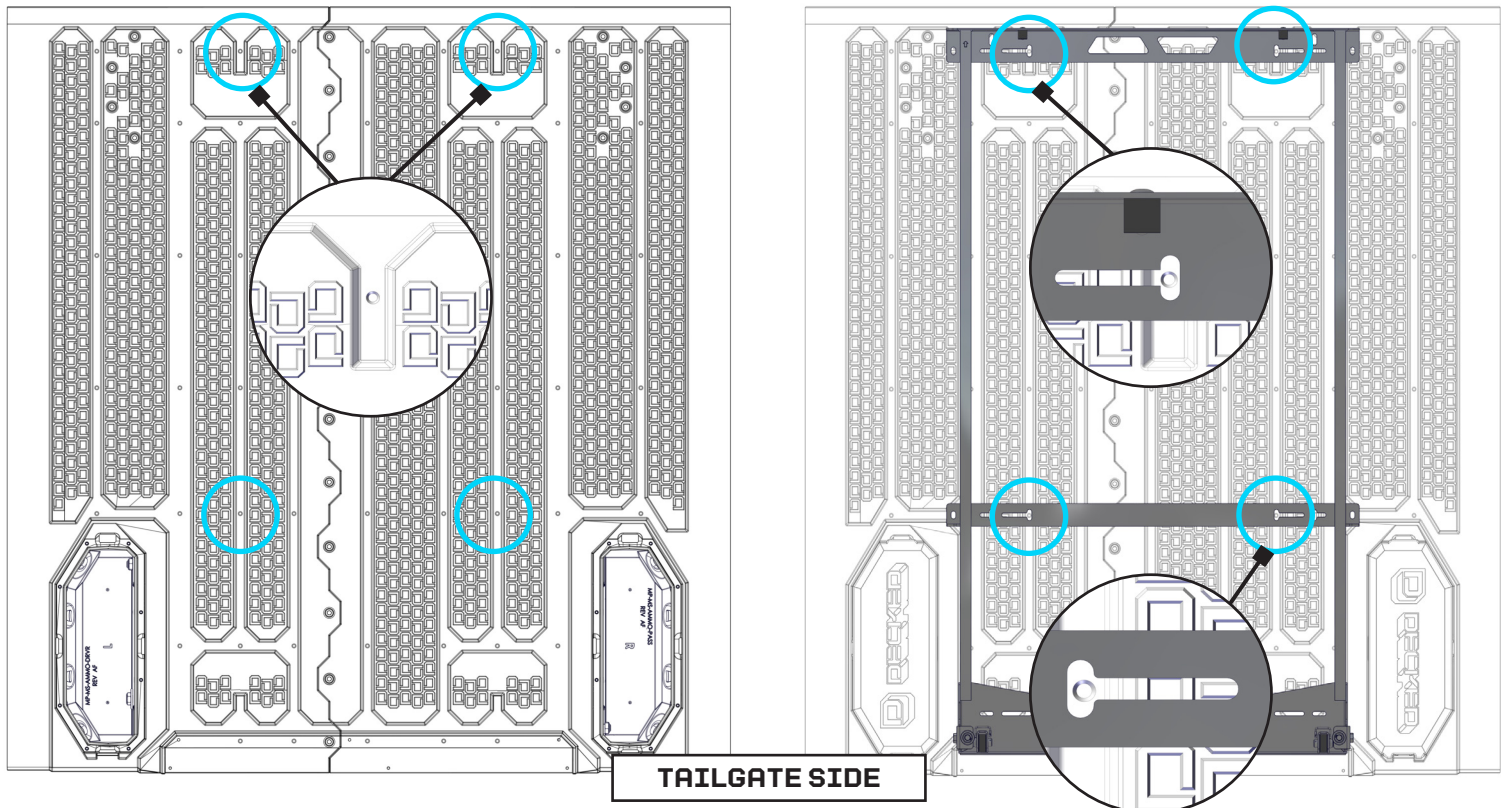


STEP 4:

INSTALL WELD BOLTS


1. Remove the deck panels from the center vert only and turn the assembly upside down. If any polymer resides around a drilled hole, carefully use a chisel to remove about 1" of material to make room for the welded bolt.
2. Pass the welded bolts through [4] holes from the **UNDERSIDE** of the panel. The welded tab of the bolt grabs the metal tube from below and prevents the bolt from spinning. Make sure the welded tab is seated on a steel tube.
3. Secure each bolt on the top side of the deck panel with a rubber combo washer [rubber side against DECKED panel] to prevent the bolt from slipping out.

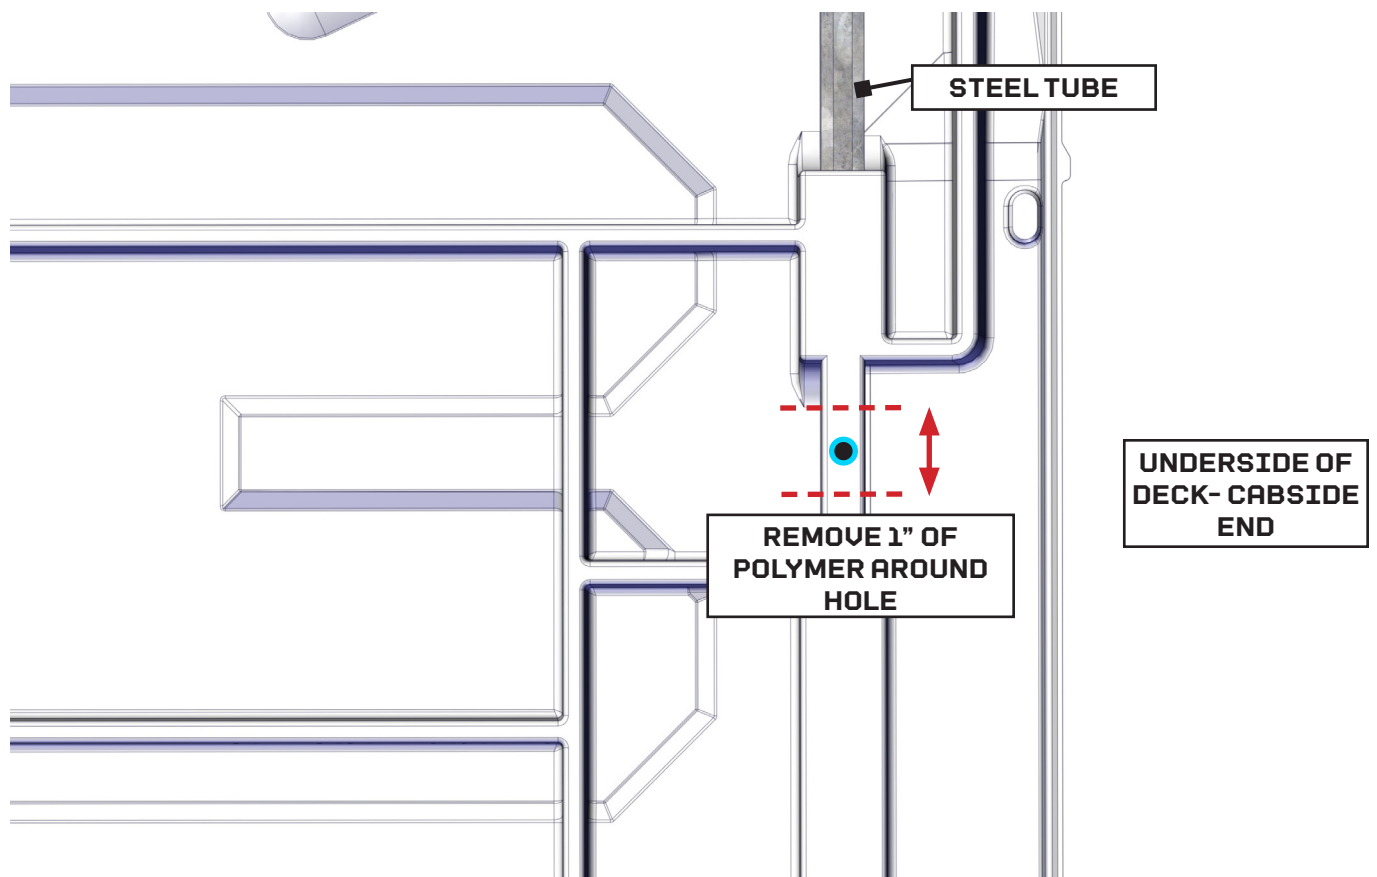

**INSTALL
WELDED
BOLT FROM
UNDERSIDE**

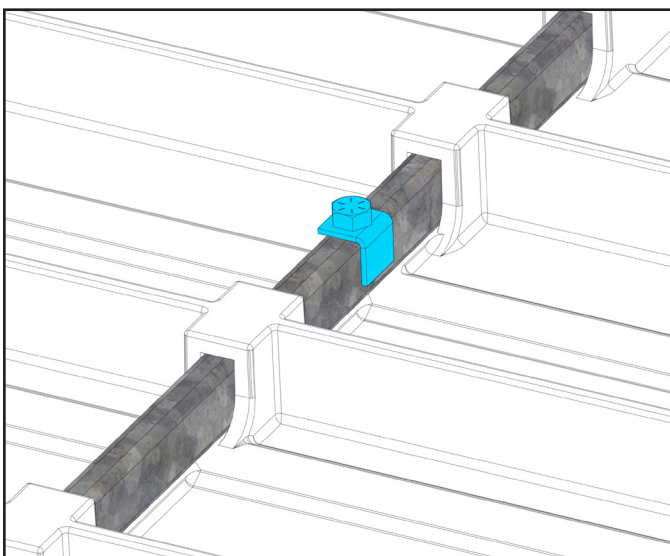

**SECURE
WITH COMBO
WASHER ON
TOP SIDE**


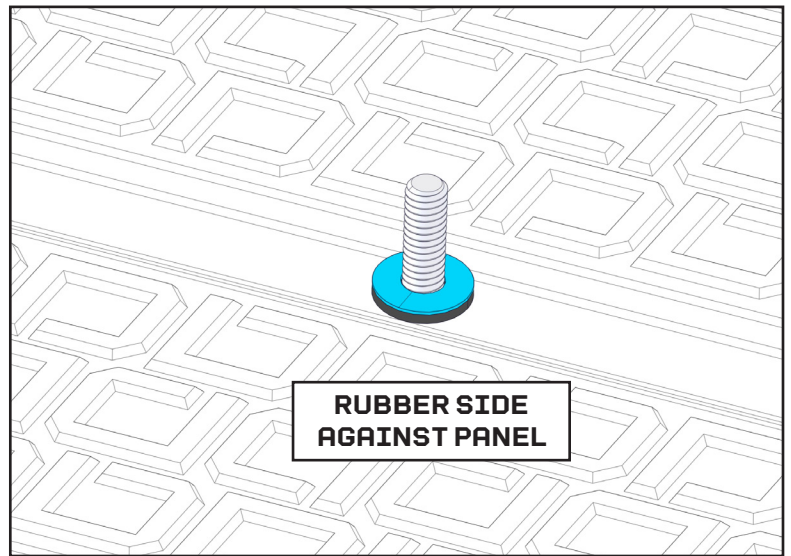


STEP 5 FULL SIZE: BACK IN THE TRUCK




NOTE; FOLLOW THE CORRECT INSTRUCTIONS FOR FULL SIZE OR MIDSIZE TRUCKS.

FULL SIZE TRUCKS (go to next page for MIDSIZE trucks):

1. Replace the panel assemblies and vert into the truck bed.
2. Reattach the deck panels to the center vert. Install the ruler. Do not install the drawers. You can install the j-hooks, but do not tighten yet.
3. Place one steel washer on top of each sealing washer. This will fill the gap between the deck and the CargoGlide bottom frame while compressing the sealing washer.
4. Carefully lift and place the CargoGlide frame over the four (4) exposed bolt tails, sealing washers and steel washers, making sure to align the proper mounting holes on the frame over the bolt tails. Be careful not to knock the bolt into the drawer space.

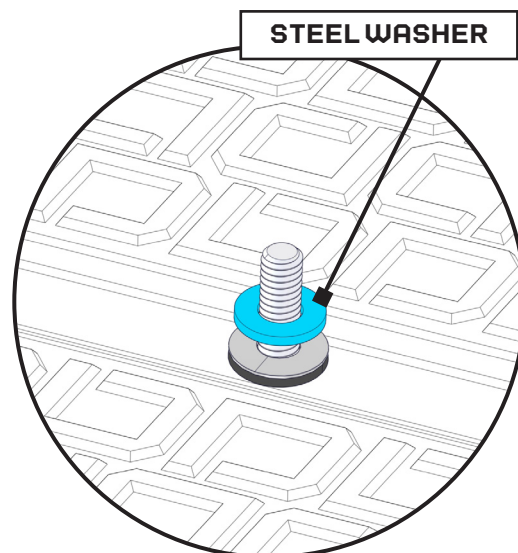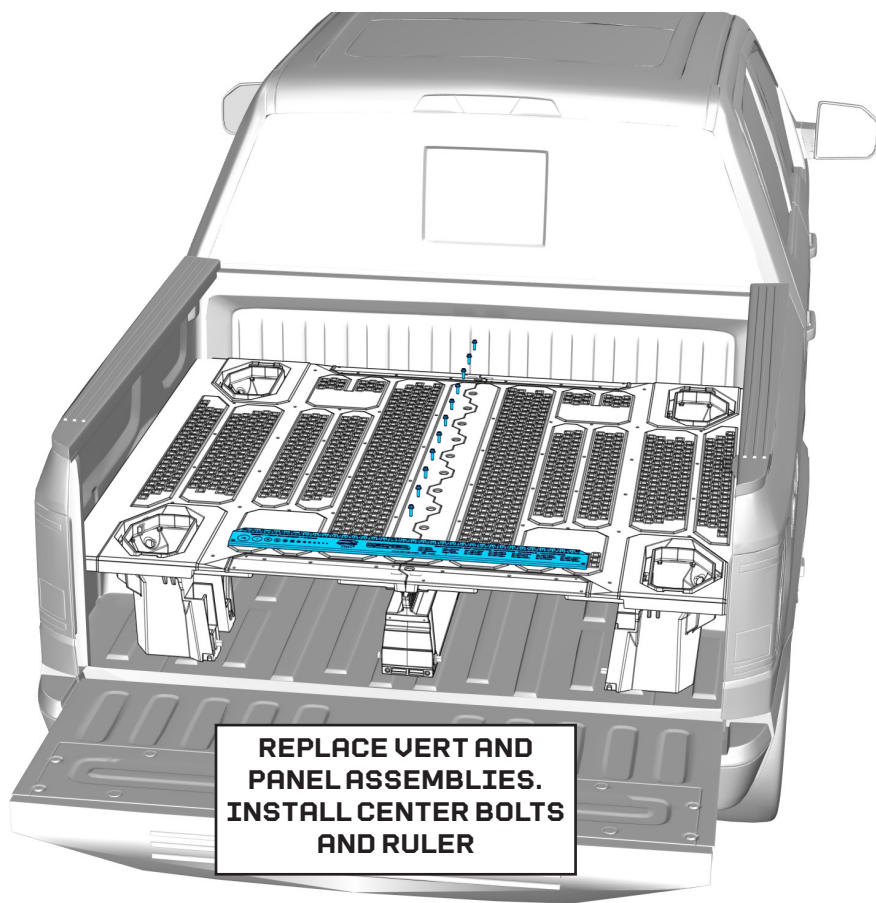

PLACE A STEEL WASHER
 ON TOP OF EACH
 SEALING WASHER

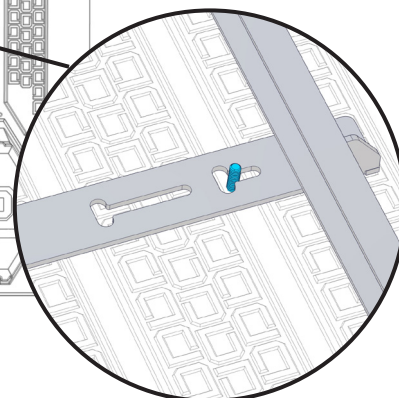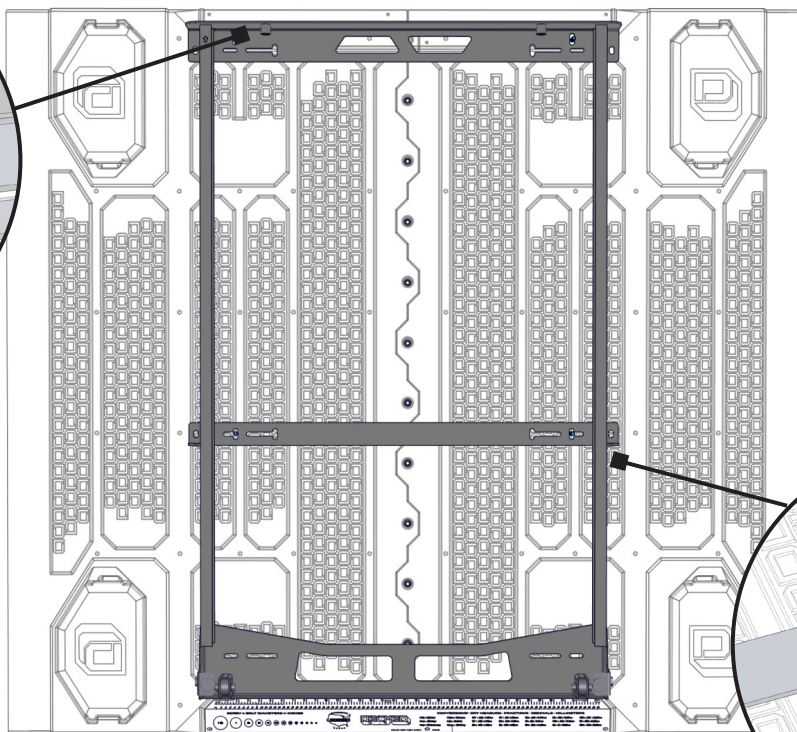
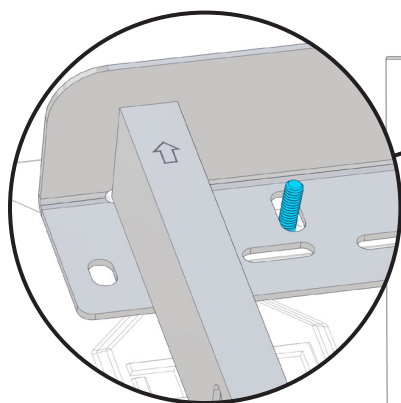


STEP 5 MIDSIZE: BACK IN THE TRUCK


NOTE; FOLLOW THE CORRECT INSTRUCTIONS FOR FULL SIZE OR MIDSIZE TRUCKS.

MIDSIZE TRUCKS (go to prior page for FULL SIZE trucks):

1. Remove the panels from the assembly being careful to keep the welded bolts in place.
2. Install the support structure in the truck (center vert, cabside closeout, cabside studs and tailgate ammo cans).
3. Reattach to the cabside tie downs, cabside stud brackets or cabside bulkhead, depending on your model.
4. Install the panels and replace all bolts.
5. Do not install DECKED drawers yet.
6. Install the ruler.
7. Place one steel washer on top of each sealing washer. This will fill the gap between the deck and the CargoGlide bottom frame while compressing the sealing washer.
8. Carefully lift and place the CargoGlide frame over the four (4) exposed bolt tails, sealing washers and steel washers, making sure to align the proper mounting holes on the frame over the bolt tails. making sure to use the specified mounting holes on the frame. Do not knock the bolts into the drawer space.

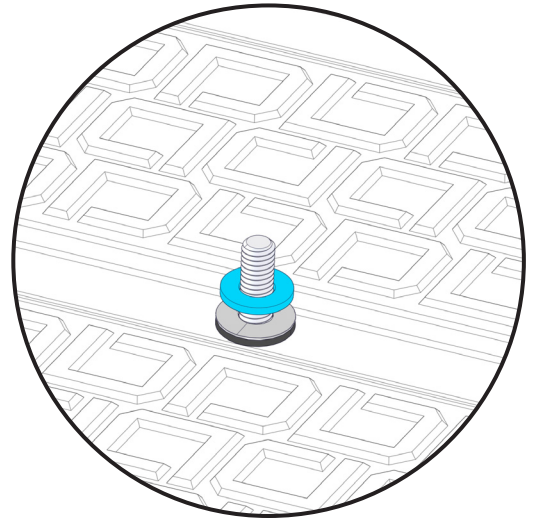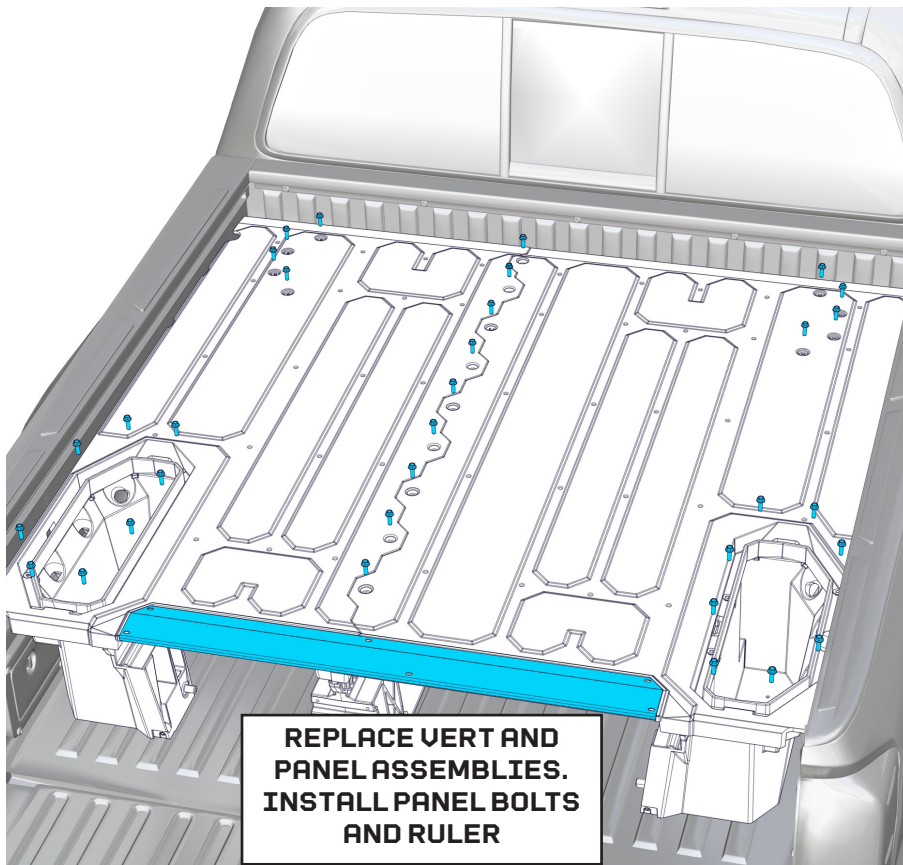

**STEP 7: PLACE A STEEL
 WASHER ON TOP OF EACH
 SEALING WASHER**

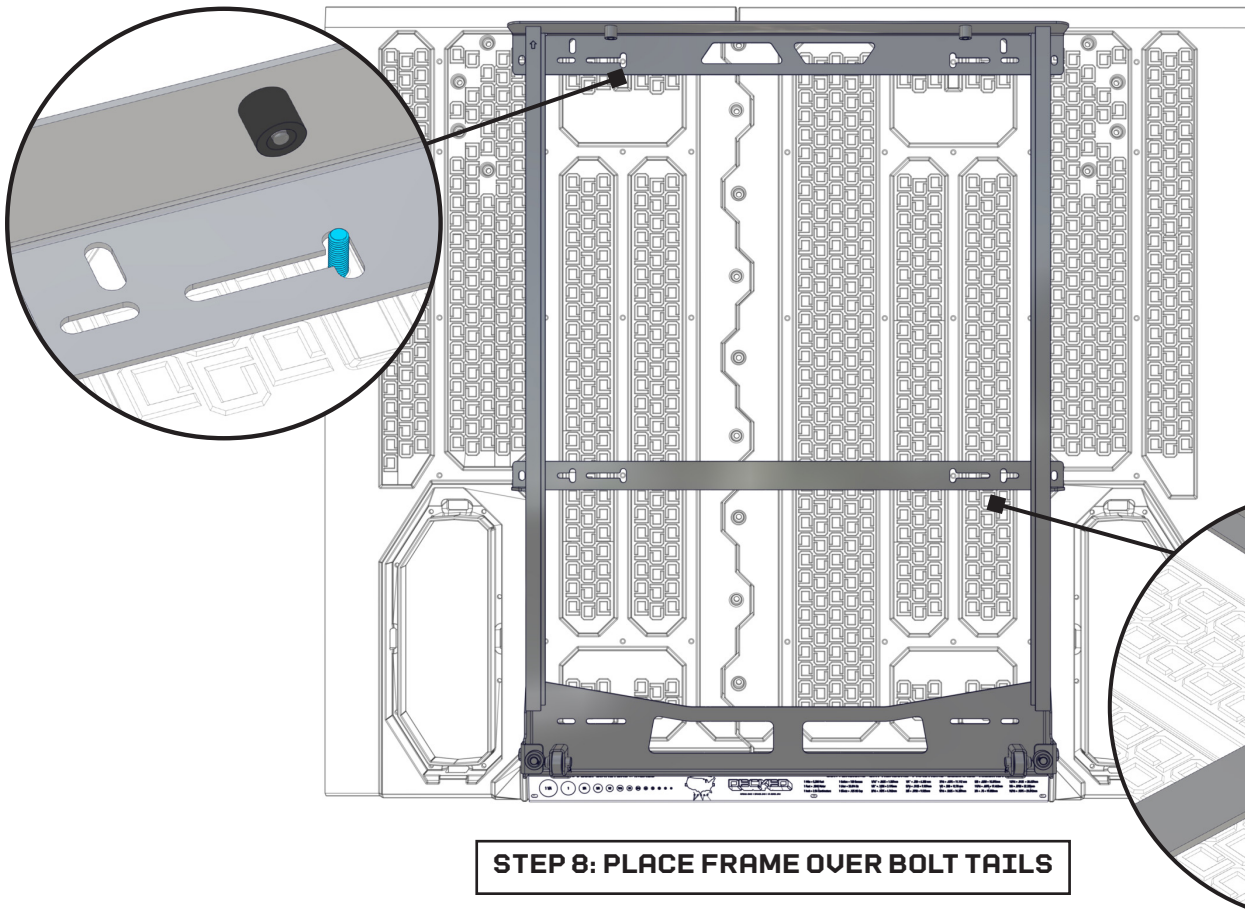


STEP 6:

INSTALL FRAME TO PANELS


1. Place a steel washer on the bolt tail (on top of the CargoGlide frame).
2. Loosely attach each bolt with a flanged nylok nut.
3. Make sure frame rests snugly against DECKED and tighten all four [4] nuts. Suggested torque is 15 ft-lb. You may need to stand on frame to get it to tighten entirely to deck panels.
4. Following the instructions that came with your DECKED drawer system, install the drawers, torsion brace and bottle opener.
5. Tighten the j-hooks ensuring the bottle opener remains centered for full size trucks - for mid size trucks, make sure the gaps on the left/right are equal.
6. Replace the CargoGlide top frame into the base frame by placing top frame over the rear bearings and sliding the frame forward to the stowed position.
7. Before loading any cargo, test the CargoGlide function by opening and closing the tray.

**CONGRATS,
GAME CHANGER!
YOU DID IT.**


Crack open a cold one of your liking, sit back and admire your work. Now get busy organizin'!

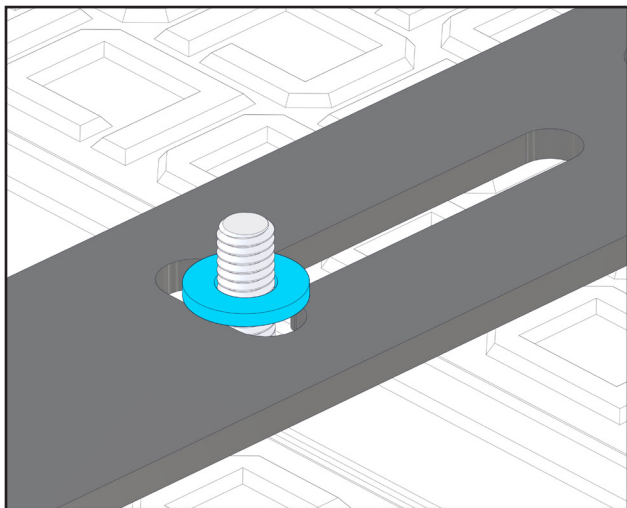

**PLACE STEEL WASHER
ON BOLT.**

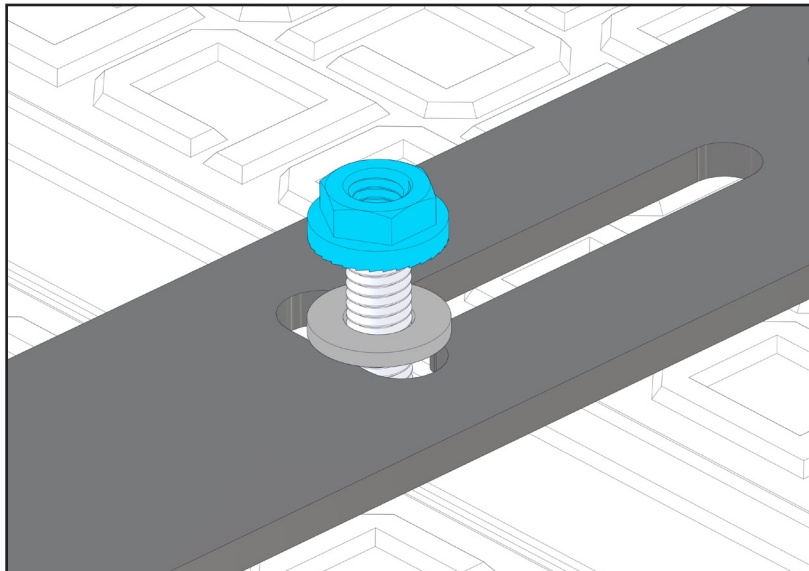

**LOOSELY INSTALL
FLANGED NUT**

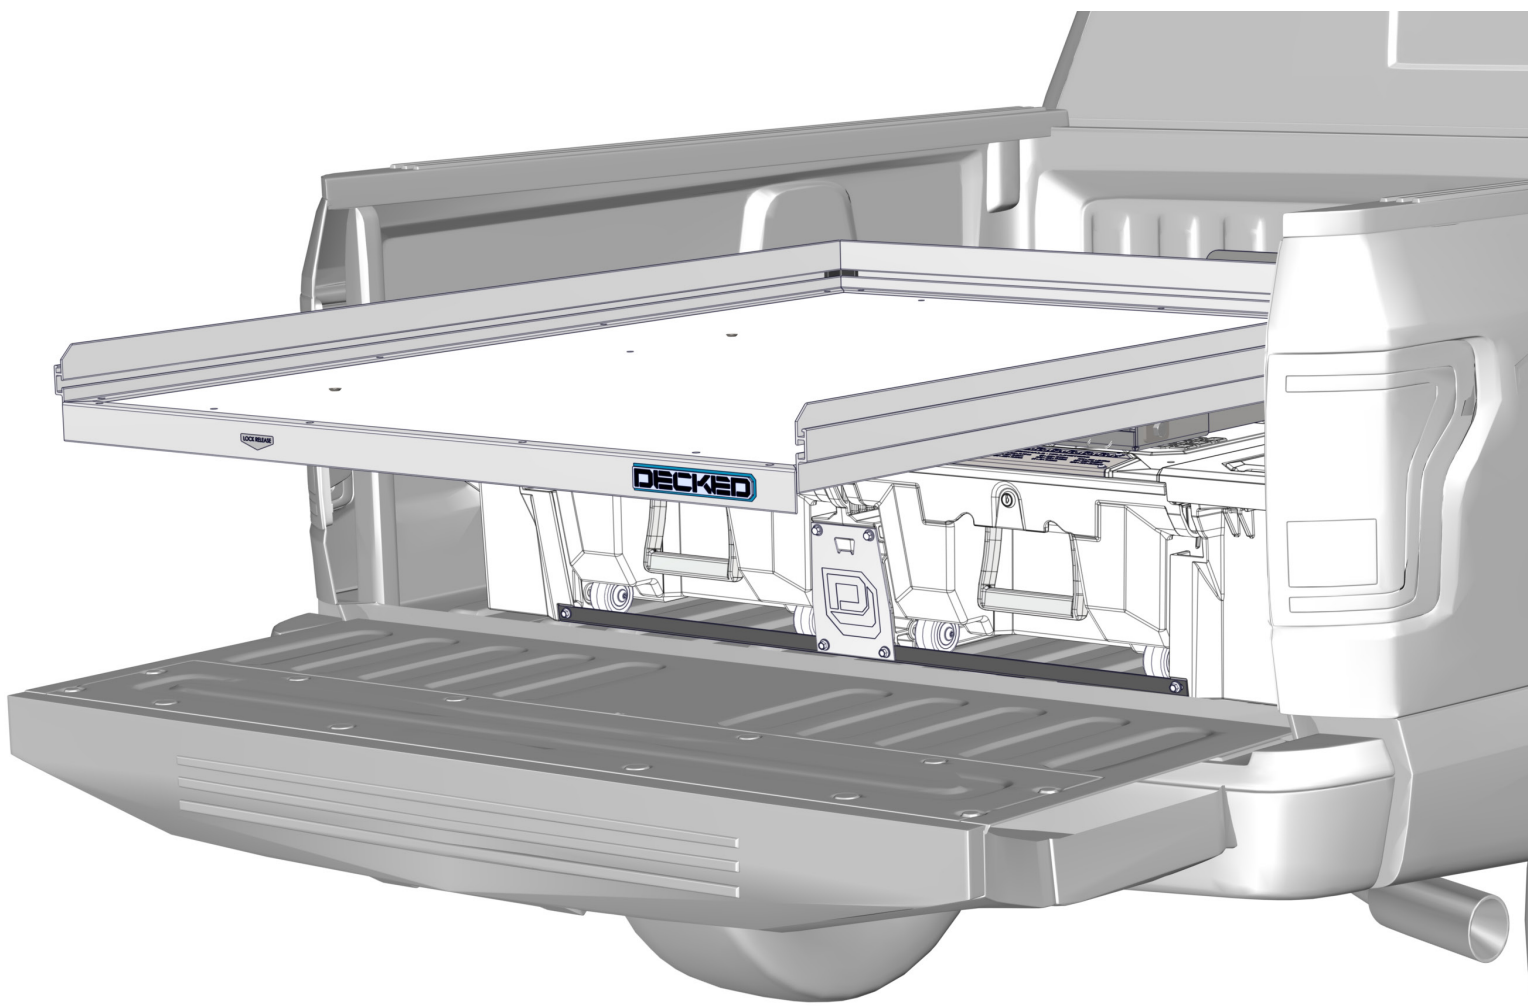



DECKED PRODUCTS LIMITED LIFETIME WARRANTY

(Valid on DECKED Products purchased on or after 8/1/2021)

DECKED LLC, (the "Manufacturer") warrants the original purchaser only that DECKED Truck and Van Products (The "DECKED" Product) will be free from defects in material and workmanship from the date of purchase and continuing for the expected lifetime of the DECKED Product. The DECKED Product must be registered by the original purchaser with DECKED, LLC via its website at, decked.com/register, and a copy of the original sales receipt must be supplied to the Manufacturer at the time a warranty claim is made. This warranty terminates if the original purchaser transfers the DECKED Product to any other person or vehicle.

WHAT IS COVERED

All DECKED Products identified above on or after August 1, 2021. **DECKED's Limited Lifetime Warranty applies to US and Canadian customers only. International shipments are covered by DECKED's 3 Year Limited Warranty.**

WHAT WE WILL DO TO CORRECT PROBLEMS

Subject to the limitations and exclusions described in this limited warranty, the Manufacturer will remedy defects in workmanship or materials by providing one of the following remedies at its option and without charge to the original purchaser for parts: (a) repairing the defective portion of the DECKED Product or (b) replacing the entire DECKED Product. In addition, the Manufacturer may elect at its option not to repair or replace the DECKED Product, but rather issue to the original purchaser a refund equal to the purchase price paid for the DECKED Product or a credit to be used towards the purchase of a new DECKED Product.

WHAT IS NOT COVERED

This limited warranty expressly excludes:

- Damage or defects caused by normal wear and tear, cosmetic rust, scratches, accidents, unlawful vehicle operation, installation in a non-supported vehicle or installed in a vehicle which does not match the DECKED Product's SKU-intended fitment or use, or modification of the product, or any types of repair of a DECKED Product other than those authorized or provided by the Manufacturer.
- Damage or defects resulting from conditions beyond the Manufacturer's control and specifications including, but not limited to modification, misuse, overloading, or failure to assemble, install or use the DECKED Product in accordance with the Manufacturer's written instructions or guidelines included with the DECKED Product or separately made available to the original purchaser.
- Damage to the contents of the DECKED Product or vehicle.
- TO THE EXTENT PERMITTED BY LAW, IN NO EVENT SHALL THE MANUFACTURER BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, INCLUDING ECONOMIC LOSS, WHETHER RESULTING FROM NONPERFORMANCE, USE, MISUSE, OR INABILITY TO USE THE DECKED PRODUCT OR THE MANUFACTURER'S NEGLIGENCE.

NO OTHER EXPRESS WARRANTY APPLIES

This Limited Lifetime Warranty is the sole and exclusive warranty for DECKED Products. No employee, agent, dealer, or other person is authorized to alter this warranty or make any other warranty on behalf of DECKED LLC.


NOTIFICATION PROCEDURES

If the DECKED Product does not conform with the terms of this limited warranty, the original purchaser must promptly notify the Manufacturer in writing upon discovery of the nonconformity. In order to receive remedies under this limited warranty, a warranty claim must have been registered with DECKED LLC by the original purchaser, must describe the nature of the products nonconformity, include a copy of the original sales receipt, invoice, or other proof of purchase and be accompanied with photos or video. Repairs or modifications made to the DECKED Product by other than the Manufacturer or its authorized agent will nullify this limited warranty. Coverage under this limited warranty is conditioned at all times upon the owner's compliance with these required registration, notification, and repair procedures.

Product registration may be performed at:
decked.com/register

Warranty claims must include reciprocal contact information and may be made via certified mail or email to:

DECKED Warranty and Claims
PO Box 885
Ketchum, ID 83340
warranty@decked.com
208-806-0251

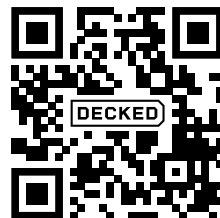

**SCAN TO REGISTER
YOUR SYSTEM**

Register your system at
decked.com/warranty

PATENTS

MIDSIZE DRAWER SYSTEM:

US10988087B2, 112017005448.6, AU2017348386A1, 3042037

FULL SIZE DRAWER SYSTEM:

US9527454-B2, USD719905 S, US9168874 B2, CA2969118A1

TOOL BOX:

US20210062581A1

For more information on our patents visit: decked.com/patents