



PROTECTIVE EYEWEAR, GLOVES AND MASK ARE RECOMMENDED DURING INSTALLATION

(AVOID INHALATION OF LOOSE FIBERS)



STEP 1: Measure desired length and mark where to cut material

STEP 2: Use electrical tape and tape over mark all the way around the sleeving (Figure 1)

STEP 3: Using scissors cut through electrical tape and material (Figure 2)

STEP 4: Leave tape on while sliding material onto wire or hose (Figure 3)

STEP 5: Remove electrical tape and slide heat shrink tubes over ends and clamps. Finish installation by heating shrink tube with heat gun so they seal the end of the sleeving. (Images 4-7)



FIGURE 1

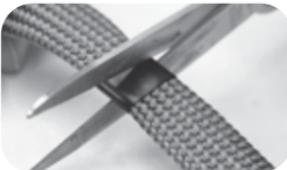


FIGURE 2



FIGURE 3



FIGURE 4



FIGURE 5



FIGURE 6



FIGURE 7