



INNOVATIVE  
**HEAT & SOUND  
CONTROL**  
SOLUTIONS



**PROTECTIVE EYEWEAR, GLOVES AND MASK ARE  
RECOMMENDED DURING INSTALLATION** (AVOID INHALATION  
OF LOOSE FIBERS)



## **TOOLS REQUIRED: SCISSORS, 1/4" SOCKET DRIVER.**

**NOTE:** It is recommended to dampen Black and Tan rolls of wrap with water prior to applying to pipe. This will facilitate the wrapping process and allow for a tighter wrap.


**STEP 1:** Begin wrapping at desired section of pipe. Pull wrap tight keeping a 1/4" overlap in mind. The tighter the better.

**STEP 2:** Apply supplied Locking Ties. Pull tight by hand. Attach Locking Tie tool to any 1/4" drive. Insert tie into slot in tool and twist away from locking mechanism to tighten tie. DO NOT OVERTIGHTEN.

**STEP 3:** Continue wrapping pipe and overlap up to 1/4". Avoid over wrapping.

**STEP 4:** When reaching the end of the desired section of pipe to be wrapped, cut wrap, fold last 1/2" and tuck under as you complete the wrap process. Apply remaining two supplied Locking Ties.

**STEP 5:** You have now completed the pipe wrap process. Check each Locking Tie to insure they are secure and holding wrap in place

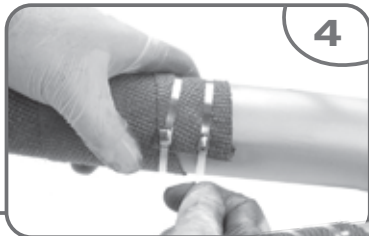

**Scan Code to  
Watch Video  
Installation**