


NOTE: Works on Mid-size box only. Mid-Size box has 7 holes across the front of the box and the Full-Size box has 9 holes across the front of the box.

STEP 1 - Attach Handle to Lid

Place Handle (1) over holes in Lid Top. Insert two Bolts #10 x 1.5" (2) through Flat Washer - #10 (3), Handle (1), and All-Terrain Lid. Secure with Flat Sealing Washer (has a rubber backing) - #10 (4) and Nylock Nut #10 (5) Use 1/8" Hex Key Wrench. Handle may already be installed.

STEP 2 - Attach Rubber T-Handles

Place Rubber T-Handle (7) over inserts in Base. Insert two Bolts #10-32 x 1.0" (8) through T-Handle (7) and use 1/8" Hex Key Wrench to tighten into the inserts, on each end, T-Handle should point outward when in the up position. Next install the Rubber T-Handle Keeper (6) on the lid, make sure the alignment knob on the back of the T-Handle Keeper lines up with the recess in the lid and secure in place with one Bolt #10-32 x 1.0" (8) by inserting through the T-Handle Keeper (6) and thread into the insert in the lid, on each end.



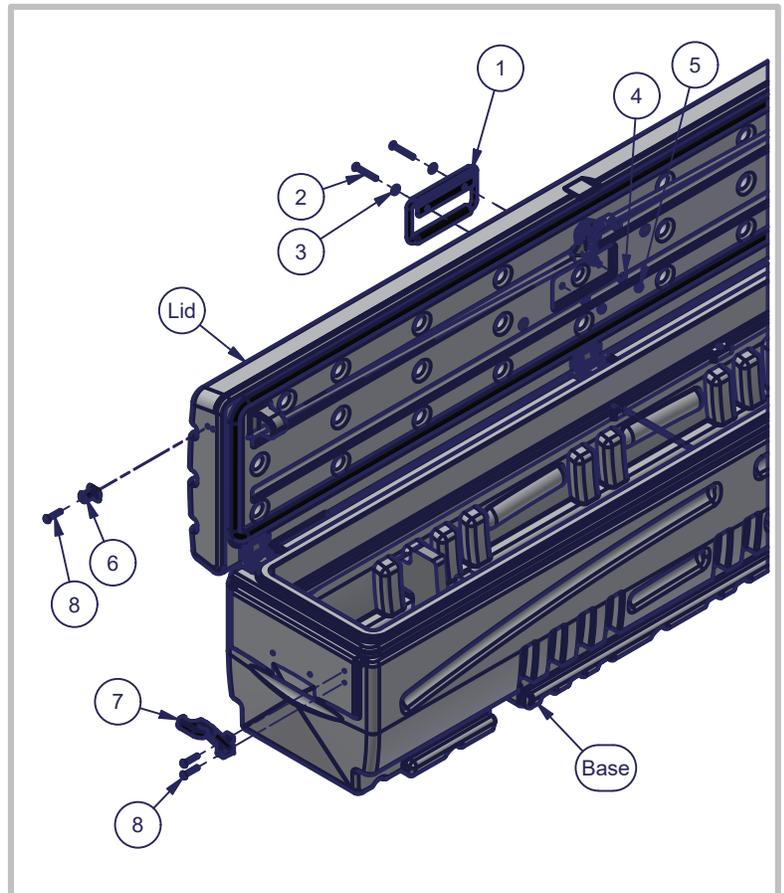


Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	1001044	Handle - 90 Degree Metal- Spring Loaded
2	2	1001006	Screw #10-24 x 1.50 SS
3	2	1001143	Washer - Flat #10 x 1/2 OD SS
4	2	1001244	Washer - Bond Sealing #10 SS
5	2	1001144	Nut Nylock #10-24 SS
6	1	1001235	Latch - Rubber T- Handle - Keeper
7	1	1001235	Latch - Ruber T- Handle
8	3	1001260	Screw BHSCS #10-32 x 1" SS

Step 3: Drill holes in bottom of Box

Determine which size of mid-size box you have by measuring the hole to hole distance center to center. The SP models are about 1-3/4" wider than the standard Mid-Size Box. The standard box should measure 48-3/4" wide hole to hole and the SP model should measure 50-1/2" hole to hole (as shown). Once you have determined which size of box you have mark out the holes on the **bottom** of the All-Terrain Box and drill out the holes with a 5/16" drill bit.

Note: See page 4 for more clarity.

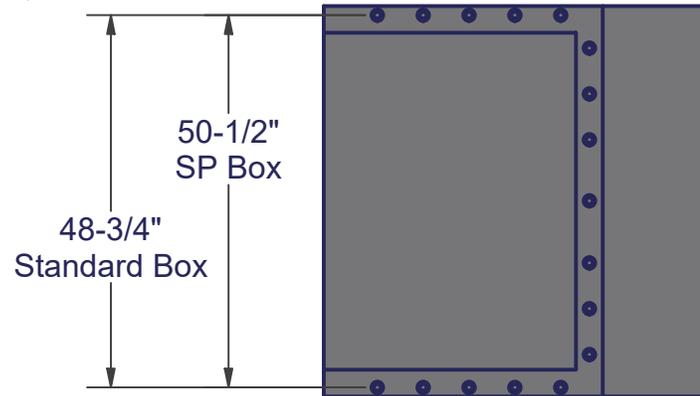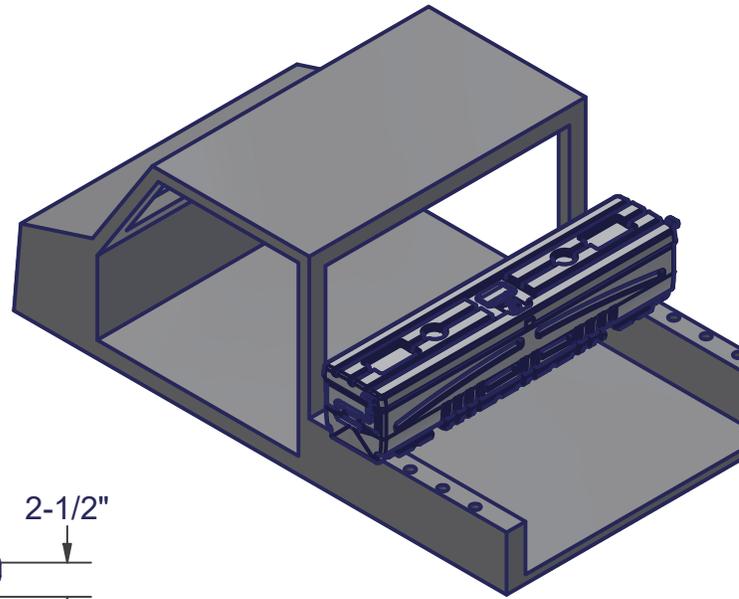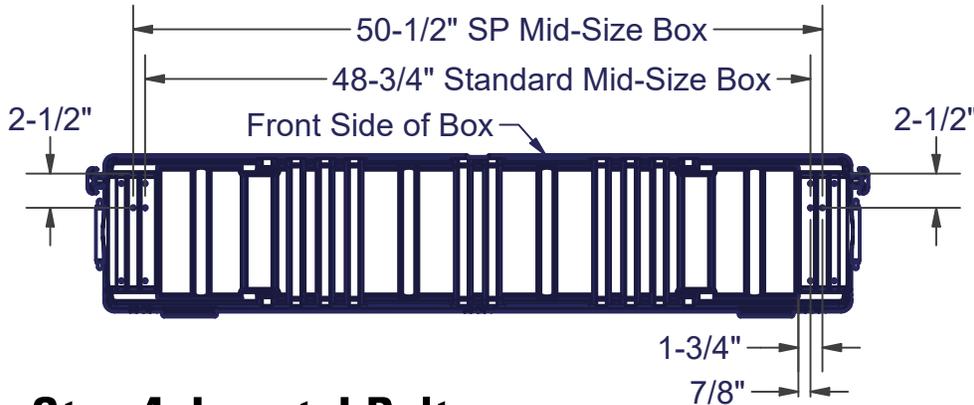

Step 4: Insert J-Bolts


From the bottom of the All-Terrain Box (2) insert the J-Bolts (3) into the holes you just drilled. From the inside of the All-Terrain Box (2) slide a 1/4" washer (6) and 1/4" lock washer (5) over each J-Bolt (3). Next thread a Star Knob (4) onto each J-Bolt (4) about 1/2".

Step 5: Set Box on UTV

Set the All-Terrain Box (2) onto the UTV Box (1) in your desired position. It is setup to use the 2nd hole along side of UTV box but can also be positioned back further if desired. Slide each J-Bolt (3) into the hole on each side of the UTV Box.

Step 6: Secure Box to UTV

From inside the UTV (1) box grab the previously installed Star Knob (4) and use it to position the J-Bolt (3) to hook onto the bottom of the round hole in the UTV Box (1), hook J-Bolt (3) towards the outside of the hole if possible. Once hooked lift up on the Star Knob (4) while tightening to make sure the J-Bolt (3) stays connected, turn Star Knob (4) clockwise to tighten, tighten securely on each side.

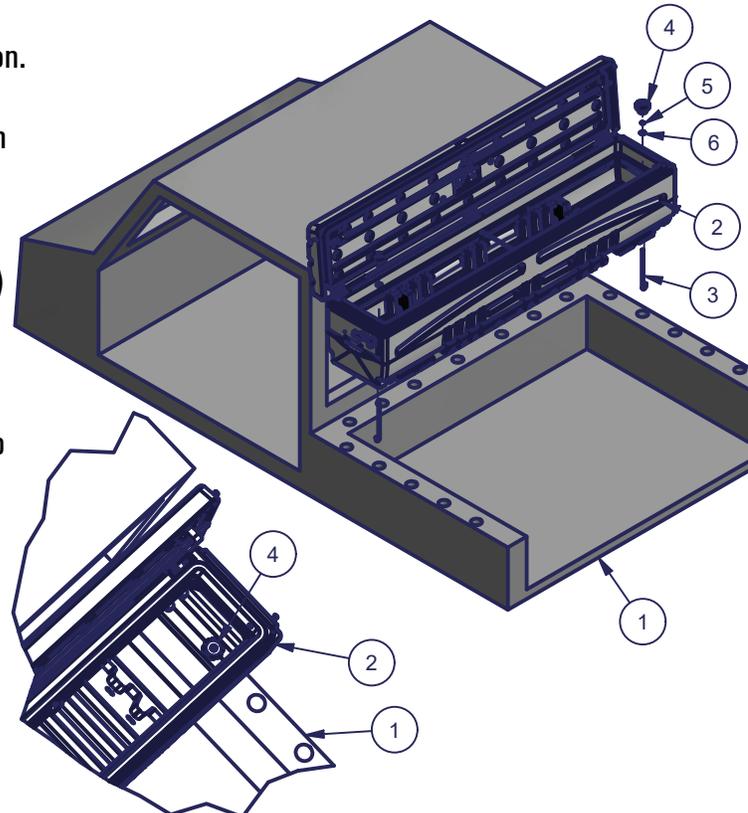

Parts List

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	--	Ranger Mid-Size Box
2	1	70820	All-Terrain Storage Box
--	1	70822	All-Terrain Mounting Kit - Ranger UTV - Mid-Size Box
3	2	1001263	J-Bolt 1/4-20 x 6.50 Zinc Plated
4	2	1001264	Knob - 7 Star with 1/4-20 Thread x 1.96" OD
5	2	1001010	Washer Lock 1/4"
6	2	1001155	Washer Flat 1/4"

DU-HA® All-Terrain

Step 7: Foam Organizer / Gun Holders



Place each Foam Organizer / Gun Holder assembly (3) into the channel slots in the side walls of the ALL-TERRAIN Box (2). They can be positioned in 3 locations on each end or in the center of the ALL-TERRAIN Box. To install rotate horizontally above slot and rotate downward and slide into slot. Stock of gun should rest in large groove; barrel should rest in small groove.

Step 8: Center Brace

To maximize strength and stability, use the Center Brace (5). Insert each end into the holes on the top lip of the ALL-TERRAIN Box (2) at the middle. To access cargo, lift front side of Center Brace out of the hole and rotate the Center Brace out of the way to the right and insert into storage hole on back side of ALL-TERRAIN Box (2). Return Center Brace to front hole when finished.

Step 9: Closing and Locking the ALL-TERRAIN BOX

To close the Humpstor shut the lid and secure end T-Handles (7) by grabbing the top of the rubber handle and pull up and secure onto the Rubber T-Handle keeper (6) on each end. Next on top of the lid (1) turn the Wing Knob 1/4 Turn Latch (4) counter clockwise to engage locking mechanism. To lock Humpstor, use the provided key. Insert key with teeth facing away from you into Wing Knob 1/4 Turn Latch (4) and turn counter clockwise to lock and clockwise to un-lock.

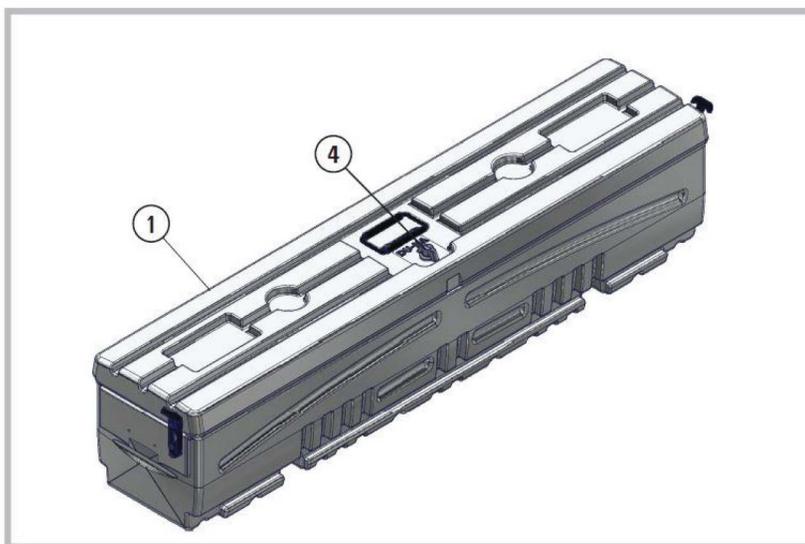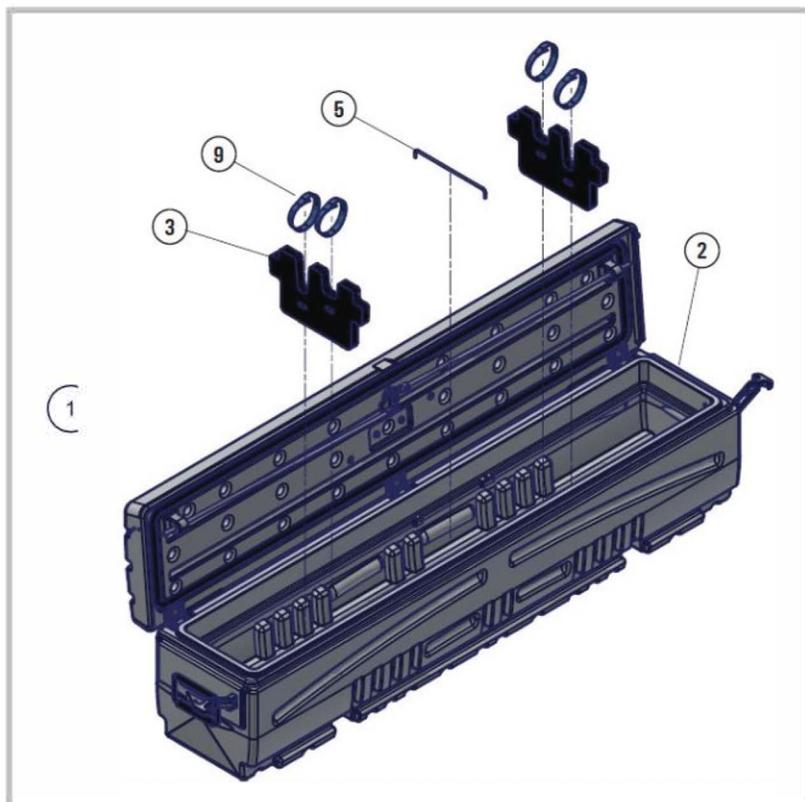

Parts List

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	70820	All-Terrain Storage Box Lid
2	1	70820	All-Terrain Main Body
3	1	Divider 70800 Assm	Divider Pkg Assm - Humpstor 2022
4	1	1001232	Wing Knob 1/4 Turn Latch
5	1	1001239	Center Wire Brace


Safety Instructions:

Warning: 75 LBS CAPACITY – DO NOT EXCEED 75 POUNDS OF CARGO IN THE ALL-TERRAIN BOX. CAUTION – Do not store explosives or hazardous materials in the ALL-TERRAIN BOX.


Do not place loaded guns in the ALL-TERRAIN BOX.

For further instructions refer to the vehicle owners manual or contact DU-HA, Inc.

70822 - DU-HA All-Terrain for Ranger UTV - Mid-Size Box

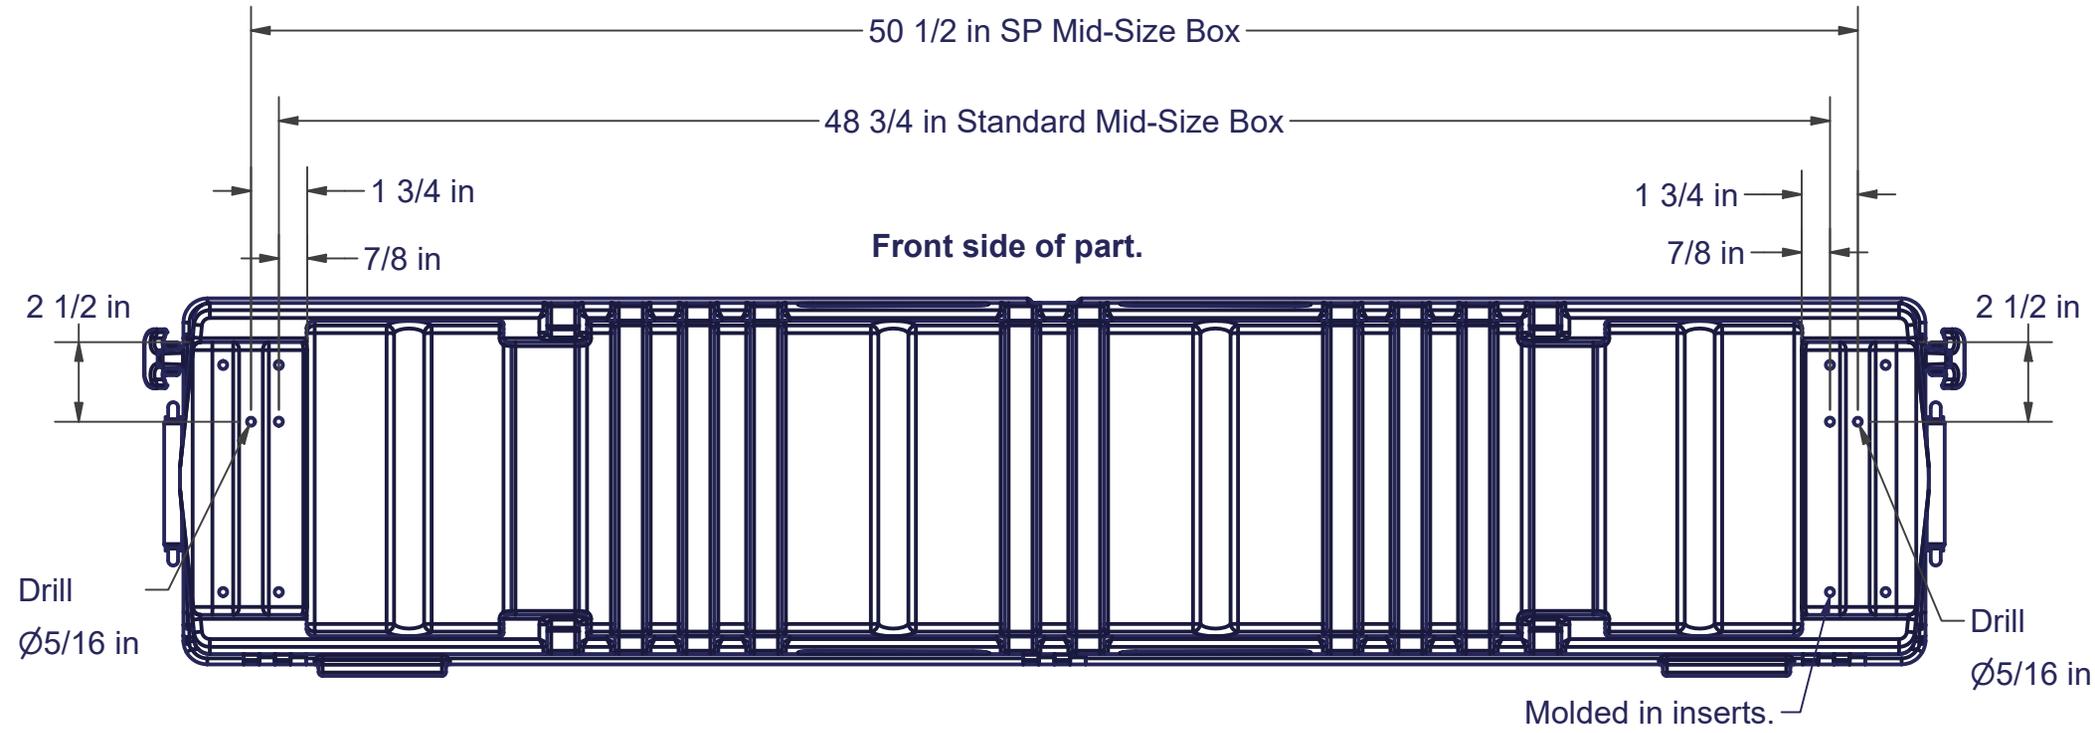

SP

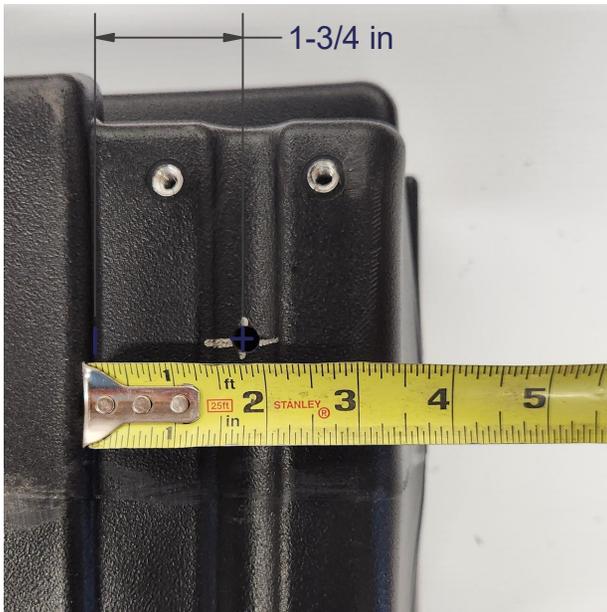

Standard



Side

