





1967-1972 MOPAR - Doors

Part # - XMO A1 D

Dodge Dart / Plymouth Barracuda (to 69) / Plymouth Valiant Coupe

Step 1: Outer Door Patches (3 per door) - Install strips on inside of outer door skin by passing through access holes on inner door structure.

Tip: Partially pre-peeling release paper backing and folding aluminum faces together makes this easier. Adhere to door. Smooth with Dynamat roller for best results.


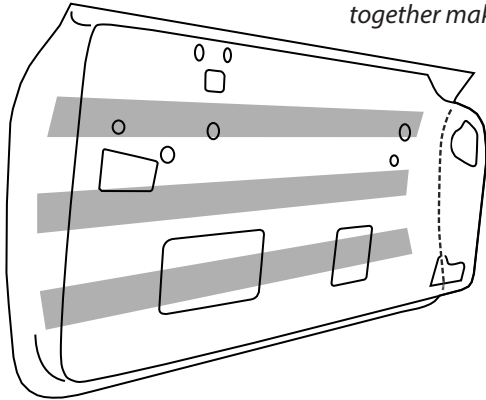


FRONT

Door diagram for demonstration and placement purposes only. May or may not represent the true shape of individual parts.

Step 2: Doors - Install on inner door structure behind trim panel. Align holes to holes in door.

Tip: Test fit first. Partially pre-peel paper backing and align, attach Dynamat where butyl is exposed and continue to slowly remove paper backing while applying to door. Smooth with Dynamat roller for best results.

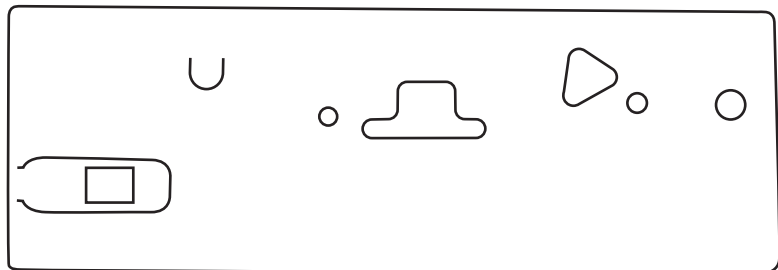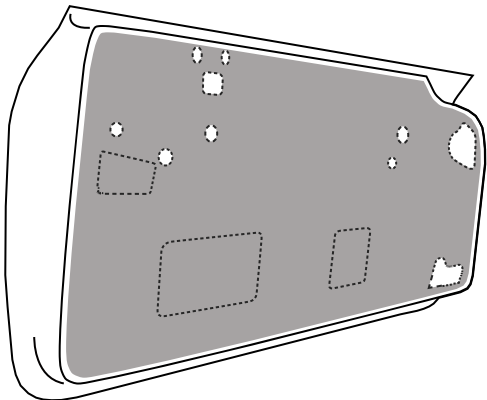

FRONT

Door diagram for demonstration and placement purposes only. May or may not represent the true shape of individual parts.

Note: Part may be used as the vapor barrier as well as sound damper. All holes in door may not be represented on Dynamat. If access is later needed, cut opening with razor knife and reseal with additional Dynamat Xtreme.

WARRANTY:

Dynamat guarantees the contents of the container only for a period of one year from the date of purchase. If product is found to be defective, replacement material will be furnished free of charge or a refund of the material cost will be given at manufacturer option. Due to the fact that Dynamat has no control over proper surface preparation, application or installation methods, no guarantee as to results is offered, expressed, or implied. Dynamat's liability for claims of any kind is strictly limited to the purchase price of the material.