




Part # - X MO A1 P - 1967-1976 Mopar A-Body Package Tray
Dodge Dart / Plymouth Barracuda (to 69) / Plymouth Valiant

Installation Map: Patterned from 1967 Dodge Dart Convertible

Install all parts as shown on rear floor of vehicle between rear seat and trunk.

Front of Vehicle

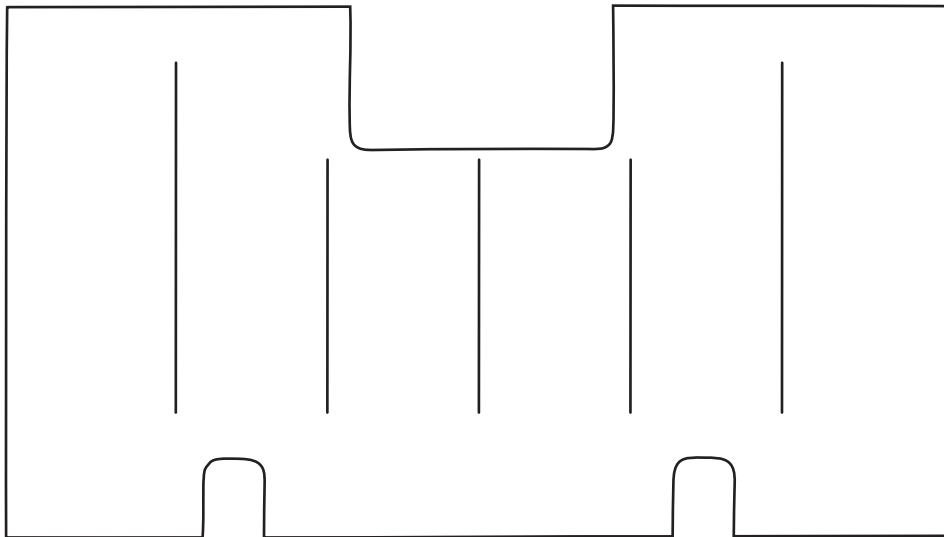

RECOMMENDED TOOLS:

Gloves - Dynamat Roller - Razor Knife

WARRANTY:

Dynamat guarantees the contents of the container only for a period of one year from the date of purchase. If product is found to be defective, replacement material will be furnished free of charge or a refund of the material cost will be given at manufacturer option. Due to the fact that Dynamat has no control over proper surface preparation, application or installation methods, no guarantee as to results is offered, expressed, or implied. Dynamat's liability for claims of any kind is strictly limited to the purchase price of the material.