

Installation Instructions

Eibach Inc. 264 Mariah Circle Corona, CA 92879
USA Tech Support 800-507-2338 ext. 114



SP90-4-38-212-01

Vehicle

Can-Am Maverick X3

Notes

Fits all Can-am vehicles with a 4x136 lug pattern and M12-1.5 studs.

Kit Contents

Description	Part Number	Quantity
Wheel Spacer	8001535.1	2
Lug Nut	H77125700	8

Installation Notes

Read all instructions before beginning installation

- Only qualified mechanics experienced in the installation and removal of suspension components should perform this installation.
- Use of a hoist and screw jack is highly recommended and will substantially reduce installation time.
- Never work on or under a vehicle unless it is properly supported by safety stands and wheels are blocked.
- Never use impact wrenches or impact guns to install or remove shock absorber piston components, shafts and Piston rod nuts.
- After Installation, inspect and adjust the following: Wheel Alignment; tire/wheel fender clearance when using aftermarket wheels or tires; brake line clearance and attachments; anti-lock-brake system sensors.


Installation Instructions

Eibach Inc. 264 Mariah Circle Corona, CA 92879
USA Tech Support 800-507-2338 ext. 114



Torque Pattern

4-Lug Torque Pattern

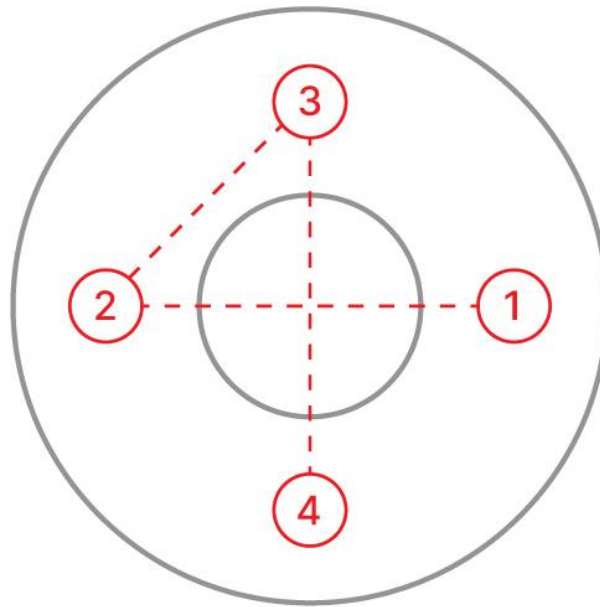

Notes

- Torque spacer and wheel to 120 ft-lbs. Ensure to follow the proper torque pattern sequence.