



This instruction is intended as a guideline for the safe installation of Energy Suspension polyurethane bushings after original equipment has been removed from the vehicle. It is recommended that you utilize a qualified service center for the replacement of these components if you are unfamiliar with vehicle chassis and suspension repair work. Reference vehicle manufacturer's service manual for component removal and replacement procedures and torque specifications. Before beginning work, read these instructions thoroughly and verify that parts received match P/N's and quantities in parts list. In the case of discrepancy, contact Energy Suspension Customer Service (949-361-3935). Because wheel alignment is altered when suspension components are removed and replaced, it is highly recommended that your vehicle be checked and adjusted by a qualified alignment shop prior to use. Energy Suspension parts are designed to work with vehicles in good state of repair. We cannot be held responsible for suspension or steering related problems occurring due to poor vehicle maintenance.

PARTS LIST

| QTY: | P/N: | DESCRIPTION: |
|------|----------|--|
| 1 | 09P09479 | POLYURETHANE HANGER, SWAY BAR DISCONNECT |

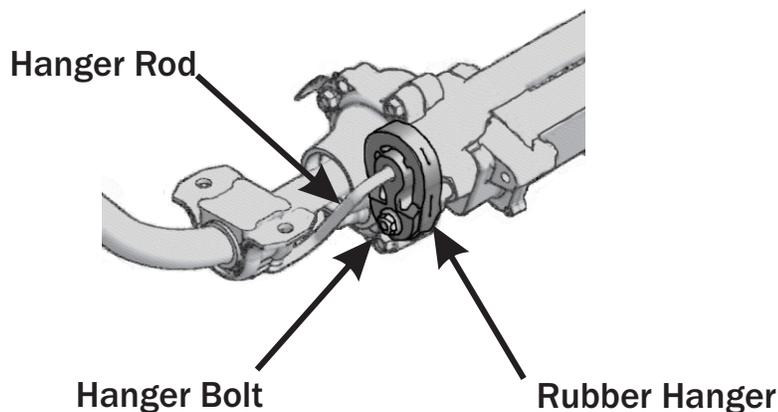

1. Remove smart bar hanger bolt.
2. Remove rubber hanger from hanger rod.

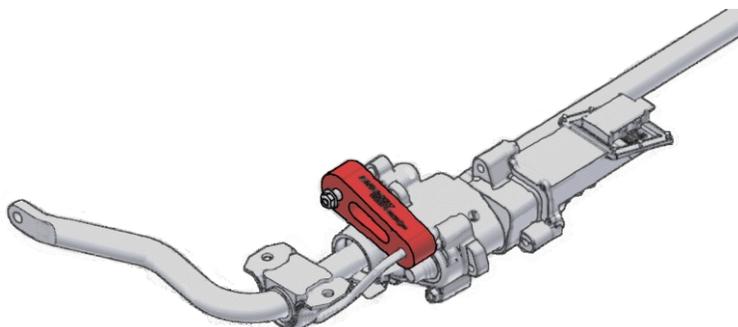

3. Rotate smart bar assembly up into new position.
4. Install new polyurethane hanger onto hanger rod.
5. Line-up and install smart bar hanger bolt.
6. Torque bolt to specification.
7. Check harness clearances for potential chaffing. Reroute and/or insulate and secure with zip-ties as needed.