




# INSTRUCTION MANUAL CAT-BACK SINGLE EXHAUST

FORD F150 TRUCK 5.0L 2/4WD  
SUPERCREW, SHORT BED

**PART # 619639**

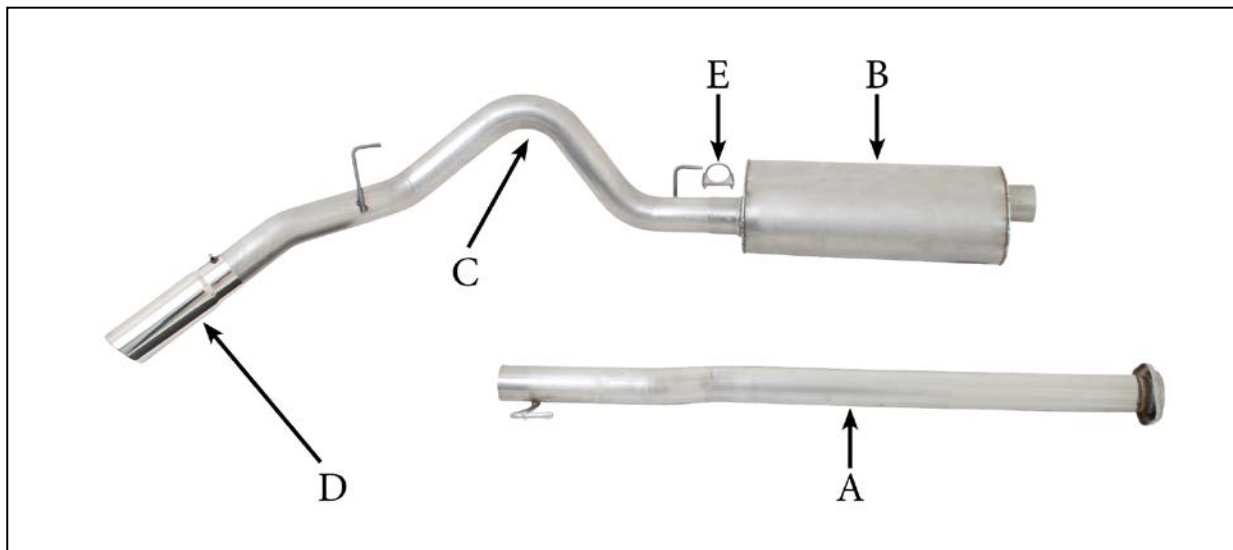

ITEM	PART #	QUANTITY	DESCRIPTION
A	999700838S	1	3" HEADPIPE W/HANGER WITH WELEDED FLANGE
B	421887	1	SUPERFLOW MUFFLER
C	1298-701066S	1	3" OVERAXLE TAILPIPE W/HANGER
D	500641	1	3.5" ROLLED STAINLESS TIP
E	OHD300	2	3" CLAMP
F	BO-1020	1	BOLT KIT

**Will not fit SVT Raptor or Harley Davidson Edition**

Thank you for purchasing our GIBSON EXHAUST SYSTEM for your vehicle. If you need any further assistance, please do not hesitate to call our Technical Department at 1-800-528-3044 Monday through Friday, 8:00 AM to 5:00 PM P.S.T

# EXHAUST INSTALLATION #619639

When installing this exhaust system make sure to use proper safety precautions. Use jack stands when under the truck, set parking brake, block tires and use safety glasses and gloves.

**DO NOT WORK WITH HOT PIPES!**

## SUGGESTED TOOLS:

½" , 9/16" , 15mm Socket & Wrench, WD-40, Jack Stand



TO REMOVE YOUR STOCK EXHAUST, REMOVE IT FROM THE 2 BOLT FLANGE LOCATED JUST IN FRONT OF THE MUFFLER AND REMOVE HANGERS FROM RUBBER GROMMETS BY PULLING EXHAUST TOWARDS THE REAR OF THE VEHICLE, USE WD-40 TO AID IN REMOVAL, LEAVE GROMMETS IN PLACE.



INSTALL OVERAXLE TAILPIPE #C INTO MUFFLER 1 ½" TO 2". INSERT HANGERS INTO RUBBER GROMMETS. USE CLAMP #E TO SECURE PIPE TO MUFFLER. DO NOT TIGHTEN.



INSTALL HEADPIPE # A INTO STOCK PIPE. USING BOLT KIT PROVIDED INSERT WELDED HANGERS INTO RUBBER GROMMET.. DO NOT TIGHTEN.



INSTALL YOUR STAINLESS TIP TO YOUR DESIRED LOOK. NOW GO BACK AND TIGHTEN ALL CLAMPS STARTING FROM THE FRONT AND WORKING YOUR WAY BACK.



INSTALL MUFFLER # B ONTO HEADPIPE 1 ½" TO 2". USE CLAMP # E TO SECURE MUFFLER TO HEADPIPE. DO NOT TIGHTEN. USE A JACK STAND TO HOLD UP THE MUFFLER. MUFFLER INLET IS LOOKING INTO THE LOUVERS. OUTLET SHOULD BE AT THE 10 O'CLOCK POSITION.



**MAKE SURE YOU HAVE A 1" CLEARANCE ON ALL RUBBER BRAKE LINES, SHOCK BOOTS, TIRES, FUEL LINES, ETC..**