




INSTALLATION INSTRUCTIONS CAT BACK STAINLESS SINGLE EXHAUST

**FORD ESCAPE 2.0L-2.3L -3.0L 2/4WD
FORD ESCAPE HYBRID 2.3L 2WD
MAZDA TRIBUTE 2.3L-3.0L 2/4WD**

PART #619871

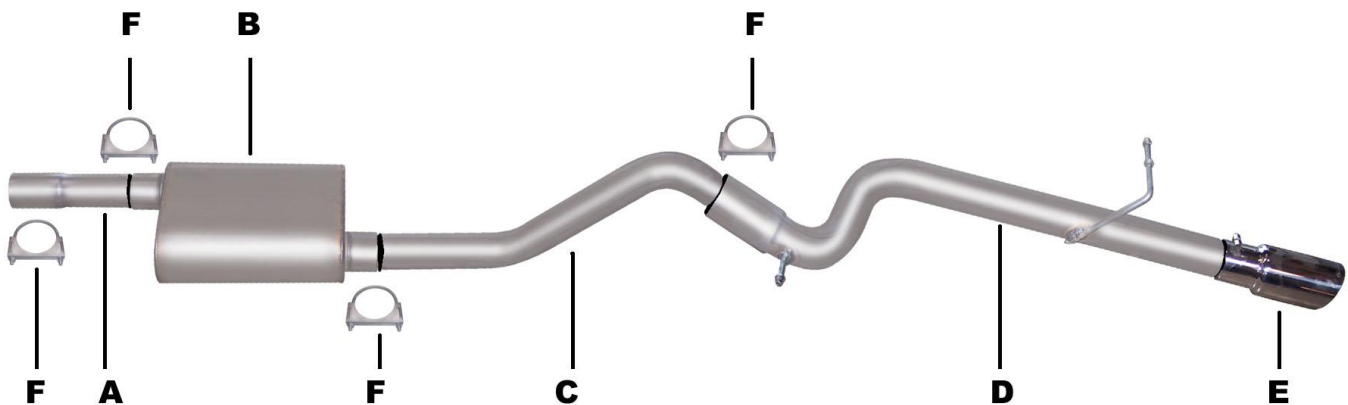

ITEM	PART #	QUANTITY	DESCRIPTION
A	1055-700837S	1	2¼" Stainless Headpipe
B	13215S-1	1	Superflow Stainless muffler
C	1056-700838S	1	2-¼" Stainless Overaxle Tailpipe
D	1057-700839S	1	2-¼" Stainless Exitpipe
E	500370	1	3" Stainless tip
F	5756	4	2¼" Clamp

Thank you for purchasing our Gibson exhaust system for your vehicle. If you need further assistance, please do not hesitate to call our technical dept at (800) 528-3044 Monday through Friday, 8:00 am to 5:00 pm.

INSTALLATION INSTRUCTIONS #619871

CAREFULLY READ INSTRUCTIONS BEFORE STARTING INSTALLATION.

When installing this exhaust system make sure to use proper safety precautions. Use jack stands when working under the vehicle, set parking brake, block tires and use safety glasses and gloves. Allow exhaust to cool before attempting installation. Severe injury or burns could occur if safety measures are not taken.

SUGGESTED TOOLS: 1/2", 9/16" 15mm wrenches & sockets, WD-40, hacksaw, jack stands.

.....
• **Disconnect the negative battery cable before removal of OEM exhaust. This will allow the computer to reset and recognize the new exhaust. Lay out the exhaust on the floor so it looks like the drawing and compare parts with manual.**
•
.....



1. To remove the stock exhaust remove it from clamp located in front of the stock muffler. Disengage the welded hangers using WD-40 from the OEM rubber grommets. Do not damage or remove the rubber grommets as you will re-use them to mount your new system. Now, un-bolt tailpipe and remove exhaust.



4. Install tailpipe #C into the muffler 1½-2" secure with clamp #F. DO NOT TIGHTEN.



2. Install head pipe #A onto your existing stock front pipe and attach with clamp #F. Use a jack stand to support the converter. DO NOT TIGHTEN.



5. Next, install the exit pipe #D. Use clamp #F to secure to the tailpipe. DO NOT TIGHTEN. Insert welded hanger into rubber grommet.



3. Install muffler #B onto head pipe 1½-2" with the louvers facing towards the converter. Use a jack stand to support the muffler. Use clamp #F to secure the muffler to the headpipe. DO NOT TIGHTEN.



6. Install stainless steel tips #E. Clamp down. When you have everything in place, firmly tighten all bolts and clamps down securely. Use stainless steel cleaner and a Scotch Brite pad weekly to prevent tip from discoloration.