




INSTRUCTION MANUAL CAT-BACK SPLIT REAR EXHAUST

FORD F150 TRUCK 3.7L-5.0L 2/4WD
STANDARD CAB, 6.0' SHORT BED

PART # 69544

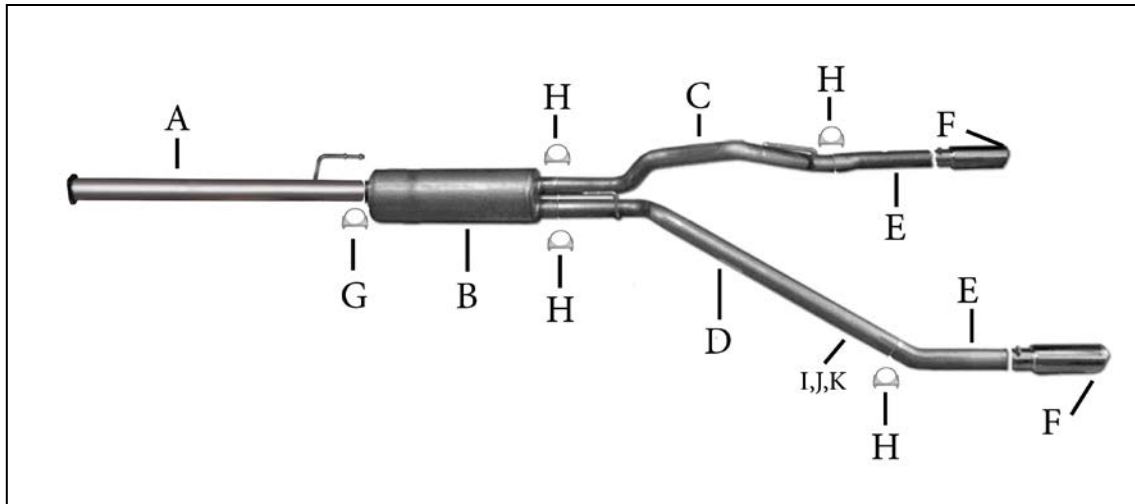

ITEM	PART#	QUANTITY	DESCRIPTION
A	999700764S	1	3" SS HEADPIPE WITH WELDED HANGER
B	758219S	1	STAINLESS SUPERFLOW MUFFLER
C	999700765S	1	2.5" PIPE OVERAXLE TAILPIPE
D	999700766S	1	2.5" PIPE UNDERAXLE TAILPIPE
E	253-500626S	2	2.5" EXHAUST I, J, K
F	500374	2	3 1/2" STAINLESS TIPS
G	OHD300	1	3" CLAMP
H	5757	4	2.5" CLAMP
I	4364	1	DRIVERSIDE REAR TAILPIPE HANGER
J	4240	1	RUBBER GROMMET
K	*BO-1045	1	REAR TAILPIPE HANGER BOLT KIT *

"WILL FIT WITH 18" SPARE TIRE"

BOX - 54 X 12 X 20

Thank you for purchasing our GIBSON PERFORMANCE EXHAUST SYSTEM for your vehicle. If you need further assistance, please do not hesitate to call our Technical department at 1-800-528-3044 Monday through Friday, 8:00 am to 5:00 pm.

EXHAUST INSTALLATION #69544

WHEN INSTALLING THIS EXHAUST SYSTEM MAKE SURE YOU USE ALL THE PROPER SAFETY PRECAUTIONS. USE JACK STAND TO SUPPORT THE TRUCK WHILE OFF THE GROUND. SET PARKING BRAKE, BLOCK THE TIRES AND USE SAFETY GLASSES AND GLOVES. DO NOT WORK WITH HOT PIPES!

SUGGESTED TOOLS:

HACKSAW, JACKSTAND, 1/2" WRENCH & SOCKET, 9/16" SOCKET & WRENCH, 15MM WRENCH & SOCKET WD-40, MEASURING TAPE



TO REMOVE YOUR STOCK REMOVE IT FROM THE CLIP LOCATED JUST IN FRONT OF MUFFLER REMOVE HANGER RUBBER GROMMETS BY PULLING EXHAUST TOWARDS THE REAR OF THE VEHICLE, USE WD-40 REMOVAL, LEAVE GROMMET PLACE.



INSTALL DRIVERS SIDE TAILPIPE # D INTO MUFFLER 1 1/2" TO 2". INSERT WELDED HANGERS INTO RUBBER GROMMETS. USE CLAMP # H TO SECURE PIPE TO MUFFLER, DO NOT TIGHTEN.



INSTALL HEADPIPE # A 1 PIPE. THE END OF THE PIPE AT THE 12 O'CLOCK POSITION ATTACH WITH FACTORY HANGER INTO RUBBER GROMMET.



INSTALL PASSENGER SIDE TAILPIPE # C INTO MUFFLER 1 1/2" TO 2". INSERT WELDED HANGER INTO RUBBER GROMMET, USE CLAMP # H TO SECURE PIPE TO MUFFLER. DO NOT TIGHTEN. ROTATE PIPE TOWARDS DRIVERSIDE.



INSTALL MUFFLER # B ONTO HEADPIPE 1 1/2" TO 2". USE CLAMP # G TO SECURE MUFFLER TO HEADPIPE. DO NOT TIGHTEN. USE A JACK STAND TO HOLD UP THE MUFFLER. OUTLETS SHOULD BE LEVEL.



INSTALL EXIT PIPES # E ONTO TAILPIPES. ROTATE UNTIL LEVEL, USE CLAMP # H TO SECURE PIPES TOGETHER. DO NOT TIGHTEN.



ON DRIVER SIDE: ATTACH REAR TAILPIPE HANGER #I TO FRAME BY REMOVING THE 18MM HITCH BOLT. THEN REINSTALL BOLT WITH HANGER (IF YOU DO NOT HAVE A FACTORY HITCH USE BOLT KIT #K TO ATTACH HANGER #I & #J TO THE FRAME RAIL.



INSTALL YOUR STAINLESS TIPS TO YOUR DESIRED LOOK, THEN GO BACK AND TIGHTEN ALL CLAMPS. ROTATE SYSTEM FOR BEST CLEARANCE BEFORE TIGHTENING.



MAKE SURE YOU AT LEAST A 1" CLEARANCE ON ALL BRAKE LINES, FUEL LINES, SHOCKS, TIRES, ETC. USE ZIP TIES TO TIE THE BRAKE LINES OUT OF THE WAY.