



Performance Silicone Air Intake Kit

Part Number: 57-2123

2011-2016 Toyota Sienna 3.5L
2010-2015 Lexus RX350 3.5L

Installation Instructions

For technical inquiries please email us at tech@hpsperformanceproducts.com

In the email, please include the following information for faster response:

- Year / Make / Model / Engine of your vehicle.
- If it is a fitment issue, please include pictures showing the fitment problem.
- If there are missing parts, please list the part number(s) from the bill of materials on the 2nd page.
- Optional but recommended – Your contact phone number and preferred call back time.

You can also give us a call via 626-747-9200 for tech support Monday-Friday, 9:00am-5:00pm Pacific Time.

Bill of Materials

Part Number: 57-2123

Description	Prep	Part Number	Qty	Check
Silicone Tube	1	57-2123	1	
Embossed Hose Clamp	2	EMSC-16-27	1	
Embossed Hose Clamp	2	EMSC-70-90	2	



- Before installing any parts of this intake system, please read the instructions thoroughly.
- Verify the contents of this intake kit before disassembling your vehicle.
- Report any defective or missing parts to HPS directly. The HPS dealer you purchased this product from might not have the replacement parts you need.
- Installation requires moderate mechanical skills. A qualified mechanic is highly recommended.
- Do not attempt to install the intake system while the engine is hot.
- For technical inquiries, please email us at tech@hpsperformanceproducts.com

PLEASE READ CAREFULLY BEFORE INSTALLATION!

This installation is not for the novice customer. Install this product with EXTREME caution! Misuse of this product can destroy your engine! If you are not mechanically inclined, please have a professional automotive mechanic install this kit.

NOTE: HPS holds no responsibility for any engine damage that results from misuse of this product.


GETTING STARTED

1. Turn the ignition OFF and disconnect the vehicle's negative battery cable. If the engine has run within the past two hours let it cool down.

NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner's manual. In the event your vehicles' anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code. We also highly recommend NOT discarding any stock parts after the installation.




1. Remove the engine cover.

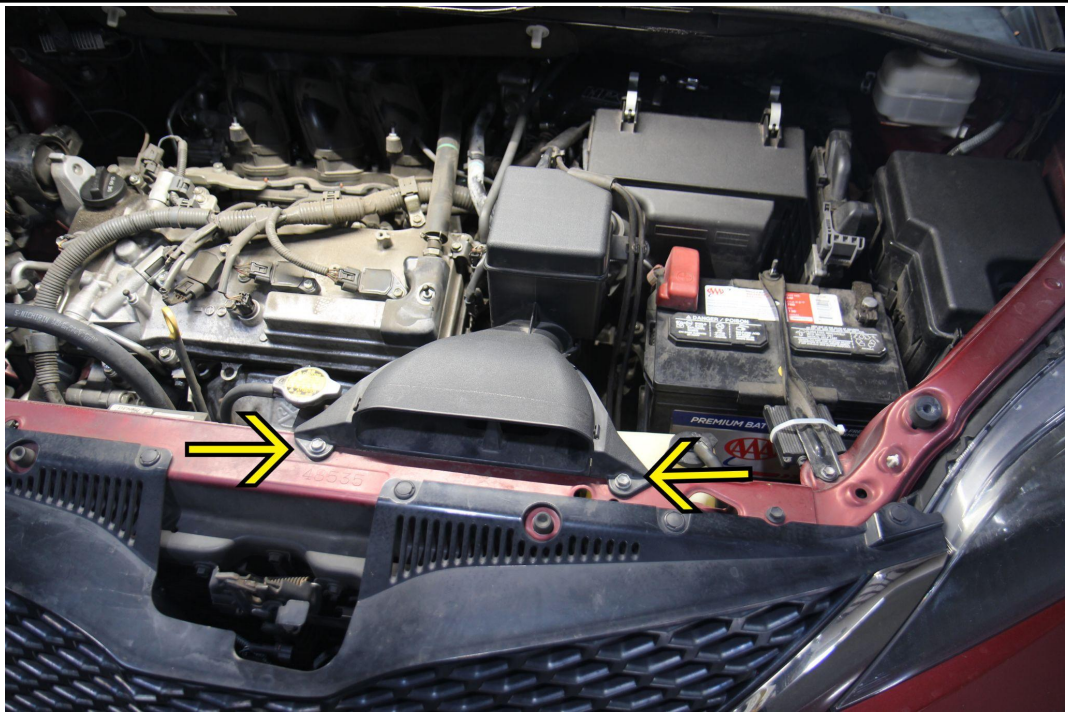

2. Remove the two bolts holding down the intake resonator.




3. Unclip the two vacuum hoses from the intake resonator.

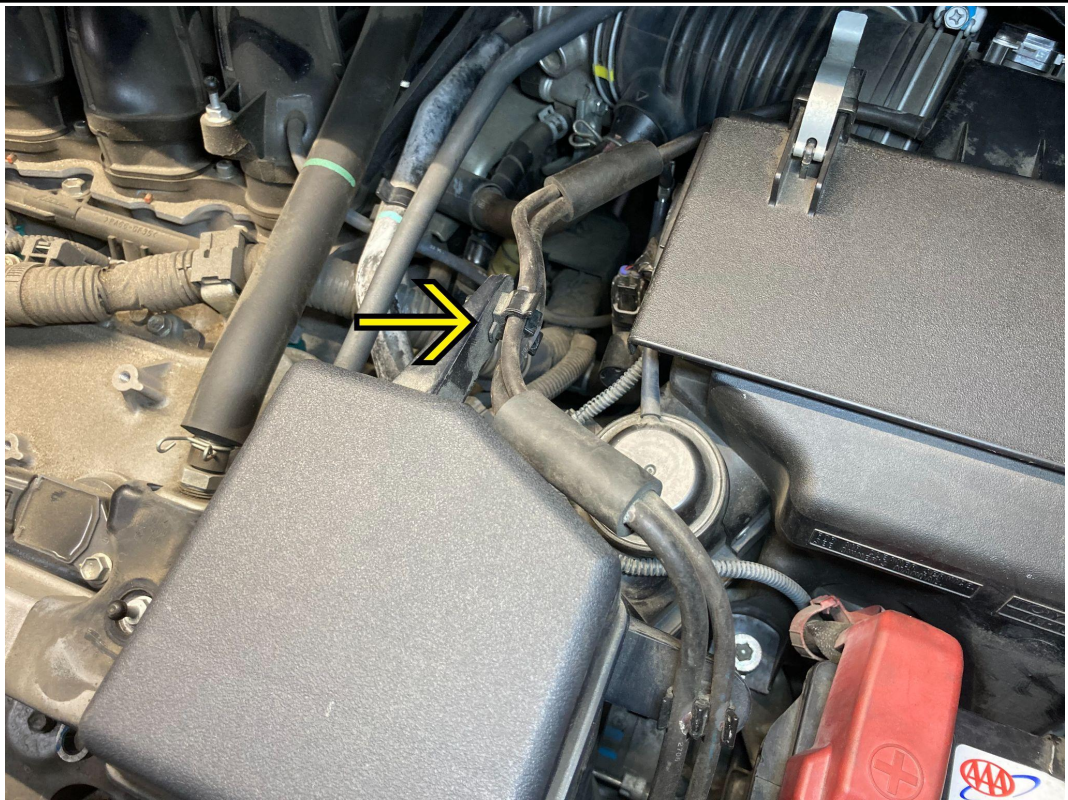


4. Unclip the two vacuum hoses from the intake resonator.




5. Remove the intake airbox mounting bolts. Behind the air box there is a press fit mount. Pull the rear airbox up and towards the front of the car to remove the airbox from the press fit mount.

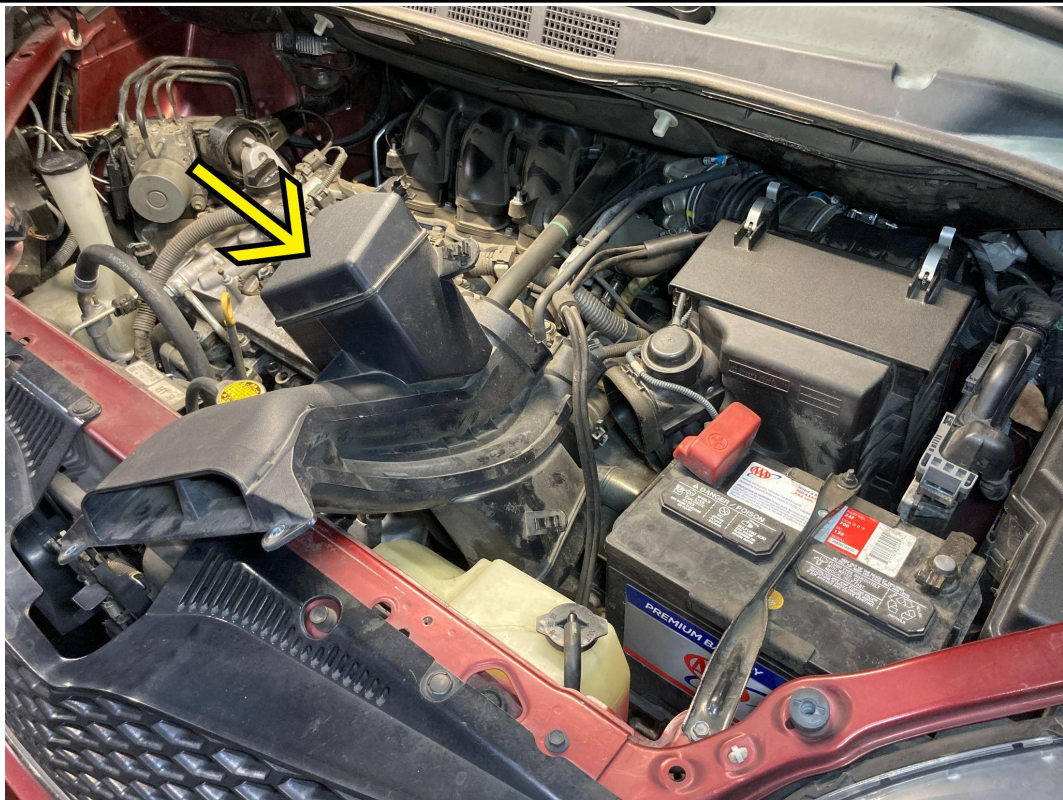


6. Move the intake airbox away from the engine and separate the airbox and intake resonator. Remove the resonator.

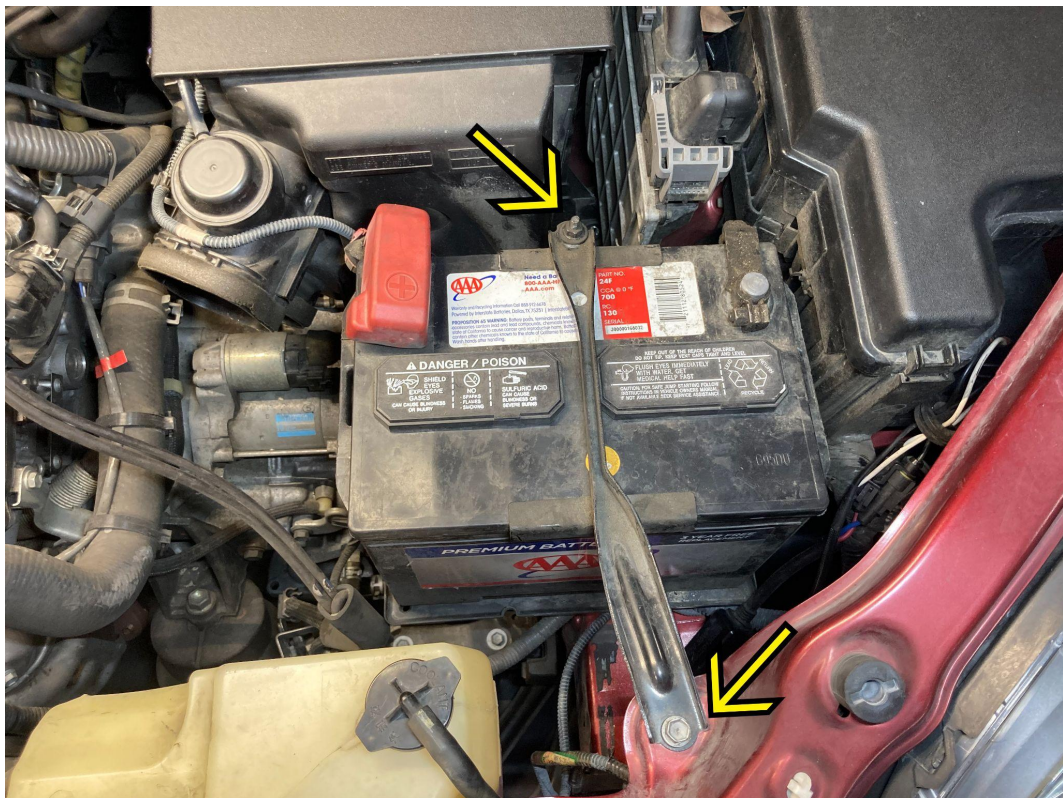

7. Remove the battery bracket.

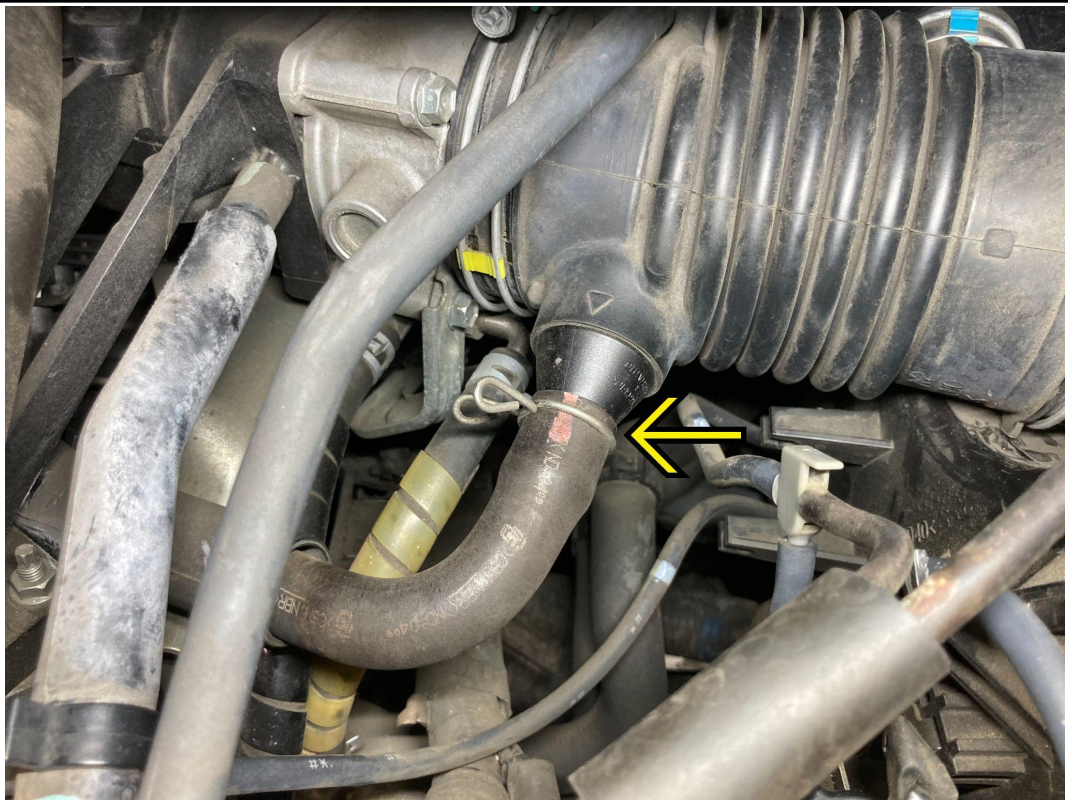

8. Disconnect the breather hose from the intake hose.

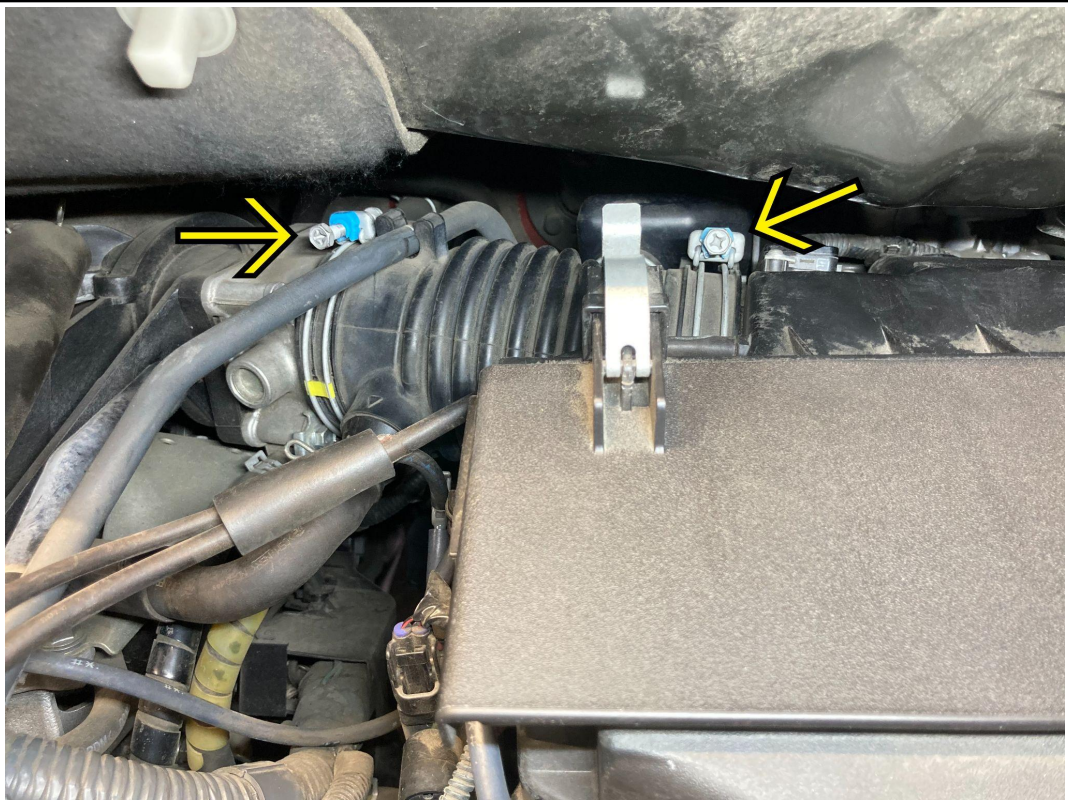


9. Loosen the intake hose clamps.



10. Move the air box away from the engine for more room to remove the intake hose from the throttle body and the air box.


Caution: Be careful not to damage the small vacuum hose near the intake tube on the air box while removing the intake tube.

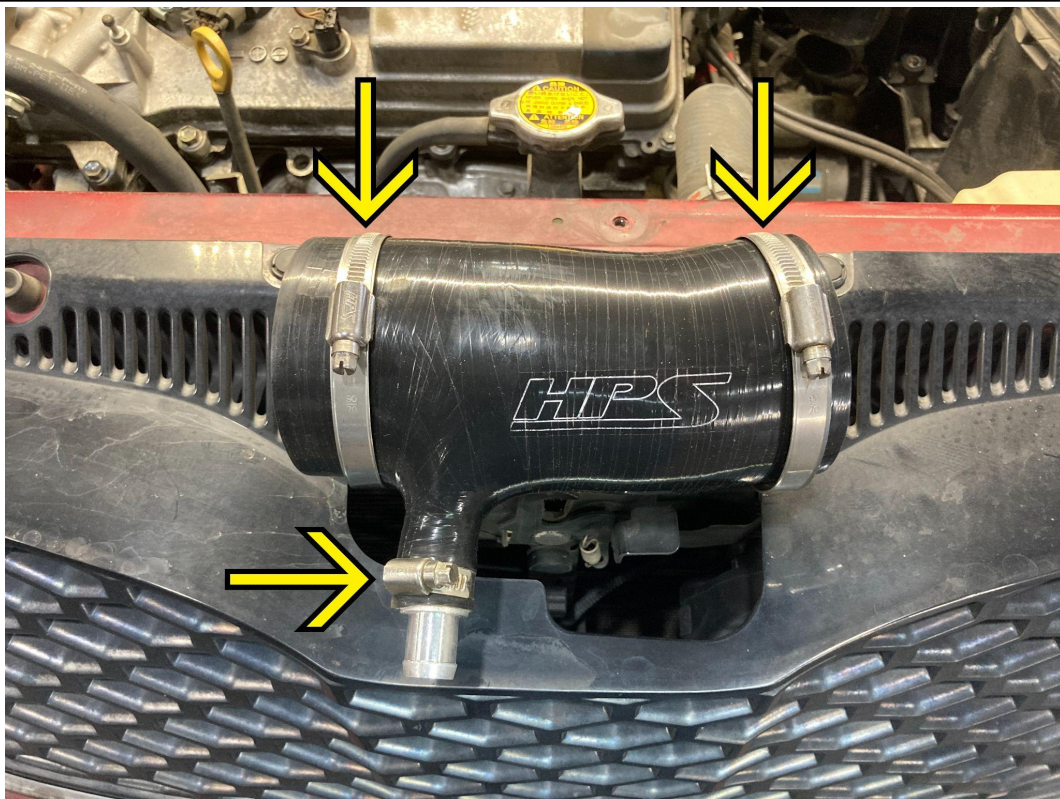


11. Install the provided clamp EMSC-16-27 to the HPS intake where the breather hose connects. Then loosely install the two provided EMSC-70-90 clamps to the intake before installing.



12. Install HPS intake with the provided clamps in place. Be sure the clamps are oriented in a way you can still tighten down the clamps when the intake is fully installed.

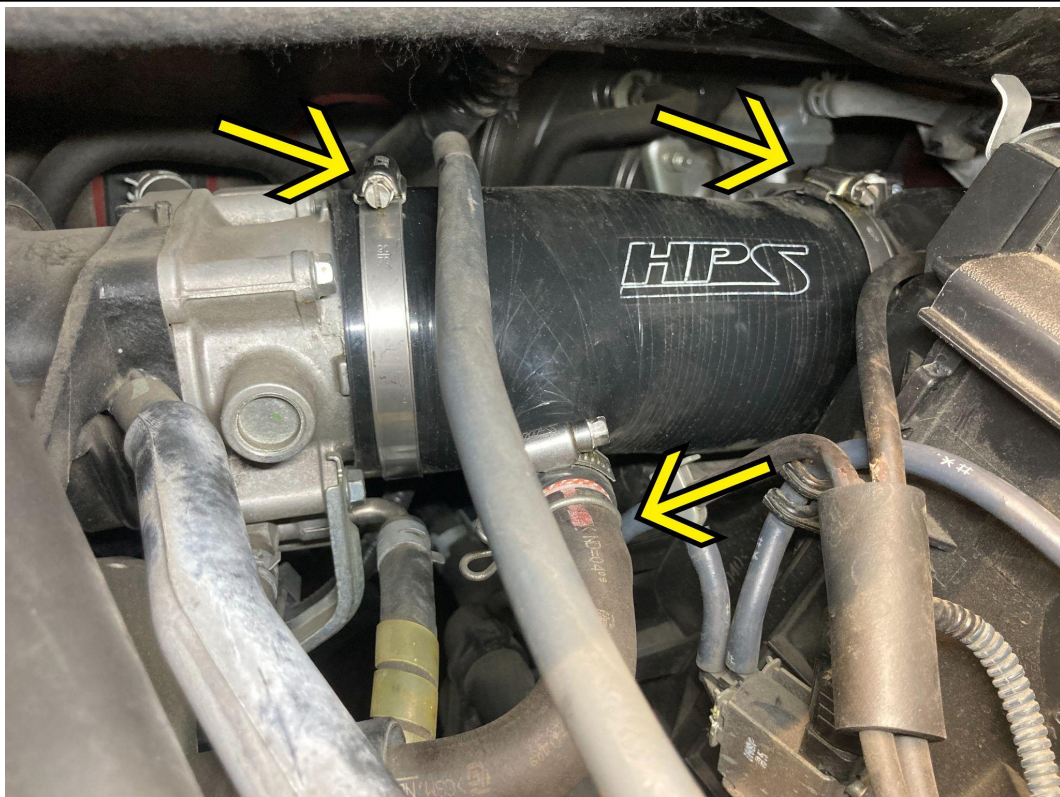

13. Tighten down the hose clamps to secure the HPS intake hose. Make sure the air box is in place before tightening down the intake clamps. Reconnect the breather hose.

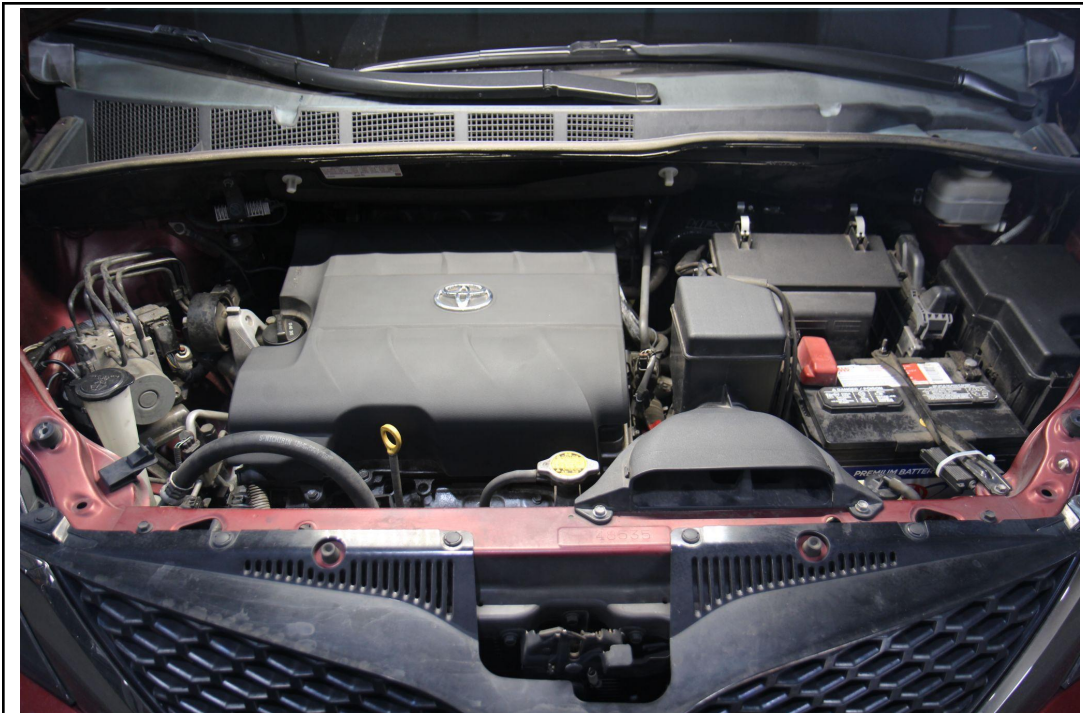

14. Reinstall intake airbox, resonator, battery bracket, and engine cover.

Final Steps

Once the intake has been positioned, tighten all the clamps and secure all the parts.

Upon completion of the installation, reconnect the negative battery terminal before you start the engine. Double check to make sure everything is tight and properly positioned before starting the vehicle.

Start the engine. Let the car idle for 3 minutes. Perform a final inspection before driving. Listen carefully for any odd noises, rattles and/or air leaks prior to taking it for a test drive. If any problems arise go back and check the vacuum lines, hoses and clamps that may be causing leaks or rattles and correct the problem.

Periodically, recheck the alignment of the intake system and make sure there is proper clearance around and along the length of the intake. Failure to follow proper maintenance procedures may cause damage to the intake and will void the warranty.



Also available for 2011-2016 Toyota Sienna V6

HPS Silicone Radiator Hose Kit



Part Number: 57-2101 - MSRP: \$110

HPS Performance Stainless Steel Magnetic Oil Drain Plug Bolt



Part Number: MDP-M12x125 - MSRP: \$23.00

**Contact an authorized HPS Performance Products dealer or visit us at
www.hpsperformanceproducts.com for more details**