


Hellwig

SUSPENSION PRODUCTS

559-734-7451 800-367-5480 TechSupport@HellwigProducts.com

INSTALLATION INSTRUCTIONS Front Stabilizer Bar 7718


Thank you for purchasing a quality Hellwig Product.
PLEASE READ THIS INSTRUCTION SHEET COMPLETELY BEFORE STARTING YOUR
INSTALLATION

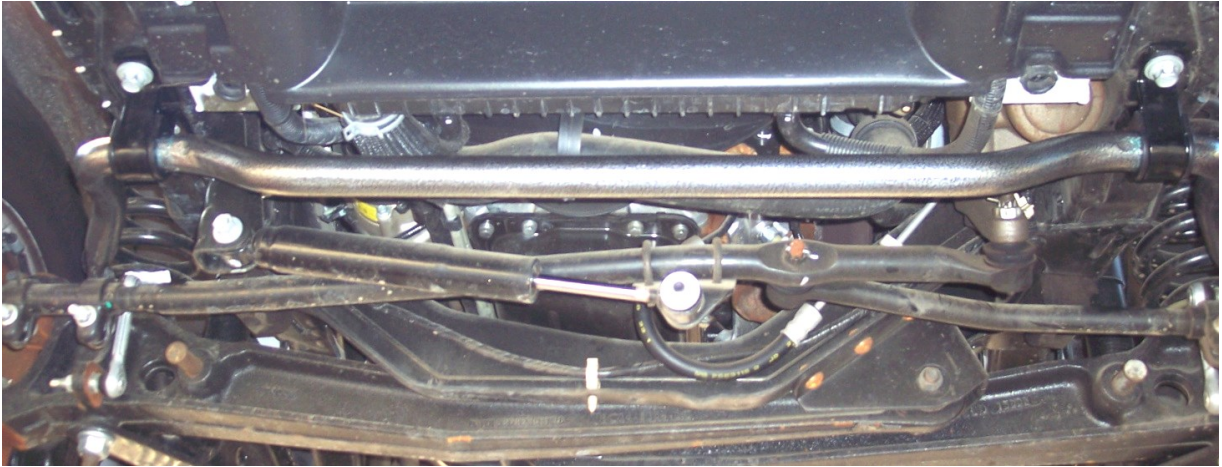

SAFETY: BEFORE BEGINNING INSTALLATION BE SURE TO SET THE PARKING BRAKE AND CHOCK THE WHEELS.

NOTE: TO EASE INSTALLATION AND PROPERLY ADJUST THE BAR, THE WEIGHT OF THE VEHICLE MUST BE ON THE SUSPENSION AS IF DRIVING DOWN THE ROAD. DO NOT RAISE THE VEHICLE BY THE FRAME

1. Remove the factory front sway, leaving the end links attached to the frame of the vehicle. Save the factory hardware as most of it will be re-used.
2. Lubricate the inside of the D-bushings and place them on the sway bar in the same locations as the factory bushings.
3. Slide the larger U-plate over the D-bushings and place the smaller U-plate behind it to hold the bushing in place as shown in Picture 2. The larger holes in the U-plates face away from the arms when the hump is hanging down.
4. Loosely attach the new sway to the frame in the stock location using the factory large bolts, supplied longer small bolts, and thread lock. Make sure the arms of the sway bar are positioned over the steering linkage.
5. Rotate the arms up and attach them to the factory end link using the factory nuts as shown in Picture 3.
6. Make sure the bar has clearance between the ends and the coil and then torque all the bolts and nuts to factory spec.
5. Bounce the vehicle with wheels straight and turned to full lock in both directions checking for clearance on all under carriage components: fuel tank, shocks, differential, brake and fuel lines, etc. Test drive the vehicle and recheck all clearances and the installation alignment. Adjust as needed. Re-check your installation after one week of driving and periodically on a regular basis thereafter.

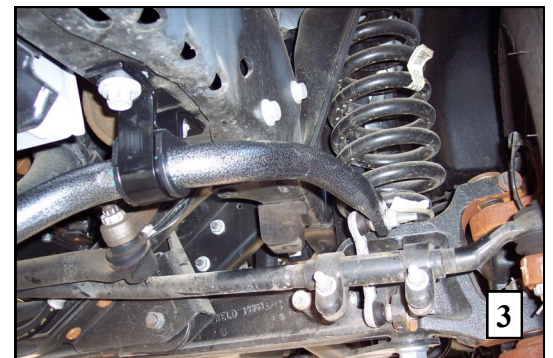

Hellwig

SUSPENSION PRODUCTS

559-734-7451 800-367-5480 TechSupport@HellwigProducts.com

Hellwig Products Company, located in Visalia, California was founded in 1946 with solutions for load control of loaded passenger cars. The family operated company produces components for trucks, RVs, muscle cars and military vehicles. Hellwig is ISO9001 certified and is proud to develop, test and manufacture products in the USA.

MAINTENANCE AND INSPECTION:

Your Hellwig Suspension Product is built to last, however it requires routine inspection. Inspect your Hellwig installation by looking for secure hardware, fittings and snug brackets/bushings. If you do not perform this inspection, have your professional mechanic inspect as described.

ATTENTION INSTALLER: BE SURE THAT THE CUSTOMER RECEIVES THIS INSTRUCTION SHEET, ALL IMPORTANT NOTE CARDS AND THE WARRANTY FORM