



## CUSTOMIZATION

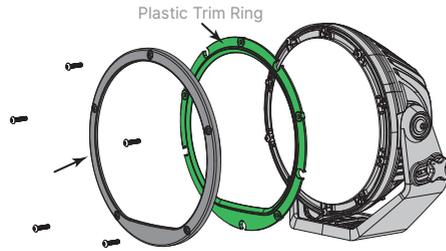


### TRIM PIECE COLOR CHANGE

To change the color of the plastic trim ring, remove 5 x screws and metal bezel. Re-assemble in reverse order

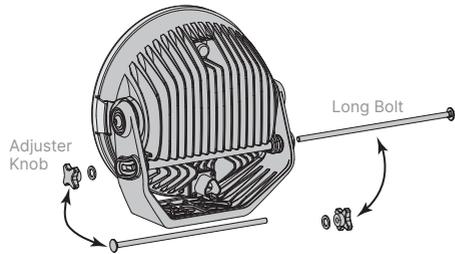


### ADJUSTER KNOB

Adjuster Knob can be reversed from left hand to right hand side.

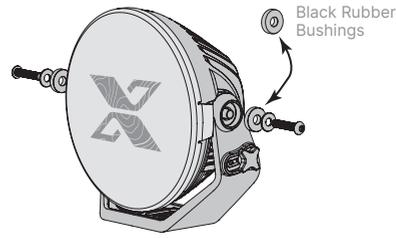

### RUBBER BUSH COLOR CHANGE

Remove the side M8 bolts, washers and blue rubber bushings. Replace with black rubber bushings. Re-assemble in reverse order.

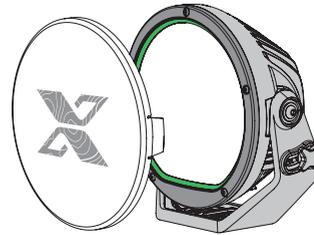


### LENS PROTECTOR REMOVAL

Remove lens protector by unclipping the side wings.

## COMPONENTS

| Item | Description                  | Torque (Nm) |
|------|------------------------------|-------------|
| A    | M6 CUSTOM COACH BOLT         | -           |
| B    | M6 CUSTOM KNOB               | -           |
| C    | M6 X 14 X 2mm FLAT WASHER    | -           |
| D    | M8 X 25mm SHCS               | 3.7         |
| E    | M8 X 17 X 1.6mm FLAT WASHER  | -           |
| F    | M4 X 18mm SHCS               | 1.5         |
| G    | M8 X 1.25 X 40mm HEX         | -           |
| H    | M10 X 1.5 X 40mm HEX         | -           |
| I    | M8 X 24 X 2mm FLAT WASHER    | -           |
| J    | M10 X 30 X 2.5mm FLAT WASHER | -           |
| K    | M8 SPRING LOCK WASHER        | -           |
| L    | M10 SPRING LOCK WASHER       | -           |
| M    | M10 SPRING LOCK WASHER       | 11.0        |
| N    | M10 FLANGE NUT               | 22.0        |

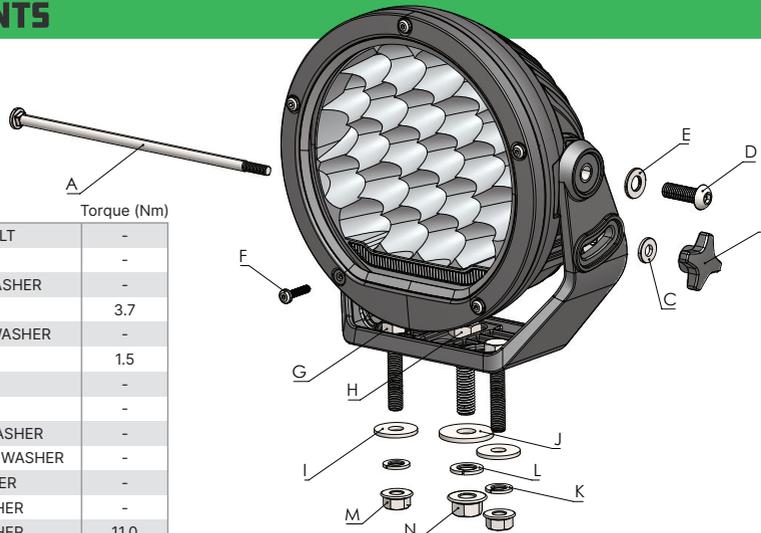

# SERIES X HP.70

## INSTRUCTIONS & SPECIFICATIONS

Model No. AL538804 Combo



## IMPORTANT SAFETY INFORMATION

- Remove negative battery cable before installation.
- Ensure lights are fitted using the appropriate wiring harness or an equivalent auxiliary wiring system.
- Ensure the lights are mounted securely to a solid surface on the vehicle.
- Cables connected to the light must not be subjected to wear or other damage.
- Do not operate device in proximity to flammable or combustible objects.



info@projectxoffroad.com

(866) 294-9244

Mon-Sat 8am-5pm PST

## TECHNICAL SPECIFICATIONS

**Voltage:** 9-33V

**LEDs:** 24 x 5 Watt Osram® L.E.Ds

**Housing & Bracket:** Pressure die-cast aluminum housing and bracket

**Beam Type:** Combo Beam Pattern


**Lenses:** Polycarbonate

**Color Temperature:** 5700°K

**Current Draw:** 8.9A at 12V per light

## WIRING


Every Install is unique and we provide simple installation information but professional installation is highly recommended.

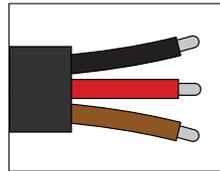

**Ground (-)  
Black Wire**

**Driving Beam (+)  
Red Wire**

**Park (+)  
Brown Wire**

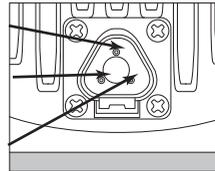

A Horizon Brands Company  
2975 Red Hill Ave, Ste. 100, Costa Mesa, CA 92626  
Copyright © 2022 ADC Solutions Auto, LLC. All rights reserved.

Follow manufacturer's instructions to ensure the product is properly & safely installed. The manufacturer and seller are not responsible or liable for consequential, incidental, or indirect damages, whether to person or property, resulting from the installation or improper use of this product.

- Before installing, please make sure the Driving Lights are free from damage, fracture and no impurities.
- Considering the high intensity of light, DO NOT stare at the light when it is switched on.
- The surface of the LED will reach very high temperature when it is turned on.  
DO NOT touch the surface directly to avoid severe burns.
- Do not install or use product if it, in any way, impairs the safe operation of your vehicle.

**▲ WARNING:** This product can expose you to chemicals including DEHP and DINP, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).


## WARRANTY

This PROJECT X product carries a Limited Lifetime warranty against defects in workmanship and materials subject to the conditions and additional warranty information available at:

[www.projectxoffroad.com/pages/returns-warranty](http://www.projectxoffroad.com/pages/returns-warranty)

DISCLAIMER OF WARRANTIES, INCLUDING WARRANTY OF MERCHANTABILITY AND WARRANTY OF FITNESS FOR PARTICULAR PURPOSE: EXCEPT AS SPECIFICALLY SET FORTH HEREIN, NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, IS MADE AS TO THE LED CEILING LIGHT. PROJECT X AND/OR ITS AFFILIATES EXPRESSLY DISCLAIMS, WITHOUT LIMITATION, ANY STATUTORY WARRANTIES AND ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

## MOUNTING

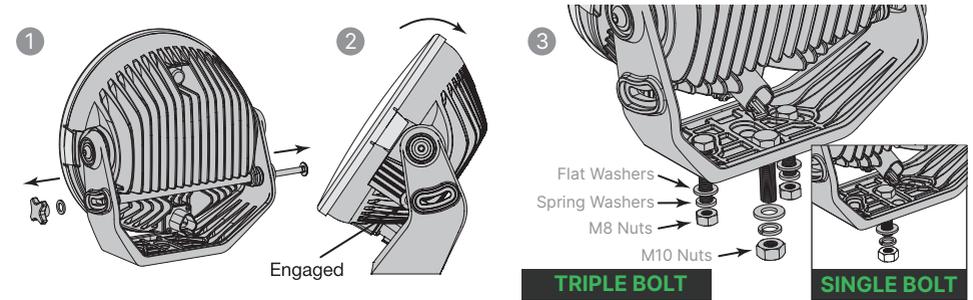

- 1 Remove Adjuster Knob, Flat Washer and Long Bolt.
- 2 Tilt lamp backwards to allow access to insert the mounting bolts (Ensure the lamp is still engaged with the bracket).
- 3 Place the mounting bolts through the holes in bracket. Note, 3 Bolts are advised, if single bolt only, mount in centre hole.
- 4 Re-assemble the Adjuster Knob, Flat Washer and Long Bolt in reverse order.
- 5 Choose a solid surface on the vehicle to mount the driving lights and secure the lamp by using flat washers, spring washers with M10 & M8 nuts.
- 5 Ensure the Adjuster Knob is done up tight

