



# WEATHERBEATER<sup>®</sup> FLOOR LINERS

PT #1825

## CARE AND USE INSTRUCTIONS

---

Thank you for selecting an WeatherBeater<sup>™</sup> Floor Liners from Husky Liners Inc. Your new liners are custom molded to fit your specific vehicle's floor board. The liners are made to take the place of your factory floor mats. ***For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners. However, do not remove the factory-installed carpeting.***

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge and soap and water. Windex<sup>®</sup>, 409<sup>®</sup> and ArmorAll<sup>®</sup> type cleaners work as well.

## INSTALLATION INSTRUCTIONS FOR YOUR FRONT FLOOR LINERS



LEFT OR DRIVER'S



RIGHT OR PASSENGER'S

TO EASE INSTALLATION OF YOUR NEW FRONT LINERS, MOVE BOTH FRONT ROW SEATS TO THEIR MOST REARWARD POSITION. WITH THIS DONE, INSTALL THE LINERS AS SHOWN ABOVE. THE DRIVER SIDE LINER WILL ATTACH TO THE HUSKY FLOOR MAT RETAINING POSTS. ONCE YOU HAVE INSTALLED YOUR LINERS, REPOSITION THE SEATS AS DESIRED.



# WEATHERBEATER<sup>®</sup> FLOOR LINERS

PT #1825




## HUSKY FLOOR LINER RETAINING CLIP INSTALLATION INSTRUCTIONS

---

YOUR NEW LINER SET INCLUDES OUR NEW FLOOR LINER RETAINING CLIP SYSTEM. THIS RETAINING CLIP GIVES THE EXTRA SECURITY WHILE KEEPING SPILLS AND DEBRIS TRAPPED INSIDE THE LINERS.

TO INSTALL THE HUSKY LINER<sup>®</sup> RETAINING CLIPS, SIMPLY FOLLOW THE INSTRUCTIONS BELOW:

- 1) Pre fit your new Xact Contour floor liner in your vehicle.
- 2) Insert the screw-in carpet retention screw into the bottom of the liner (Image 1).
- 3) Reinstall the liner.
- 4) Screw the carpet screw into the carpet with a flat blade screwdriver (Image 2).

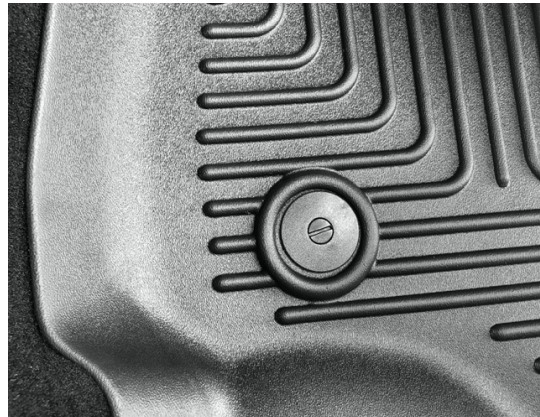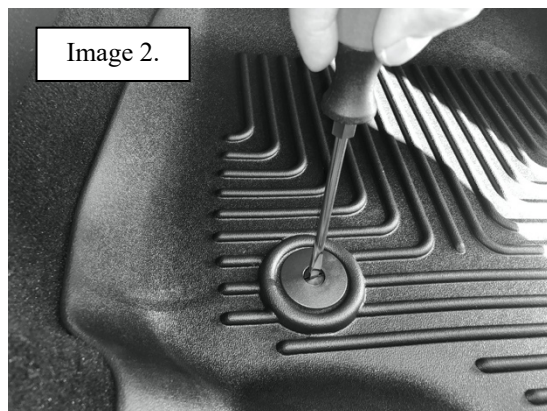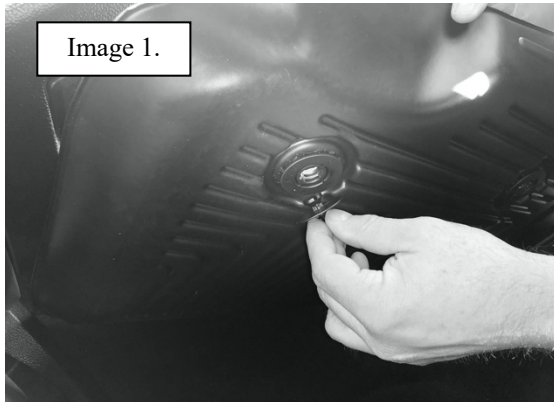

**To remove the liner, simply pop it off the added post. To reinstall, snap over the post again.**