

# **HUSKY** **WeatherBEATER™** **Custom Vehicle Floor Protection**


## CARE AND USE INSTRUCTIONS

---

Thank you for selecting a WeatherBeater™ Floor Liner from Winfield Consumer Products. Your new third seat liner is custom molded to fit your Escalade / Tahoe / Yukon with 2<sup>nd</sup> row bench seats. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Using Armor All®, Son-of-a-Gun® or like items is discouraged as these products make the liner slick.

### **INSTALLATION INSTRUCTIONS FOR YOUR ESCALADE, TAHOE OR YUKON 3RD SEAT LINER (WITH 2<sup>ND</sup> ROW BENCH SEATS)**

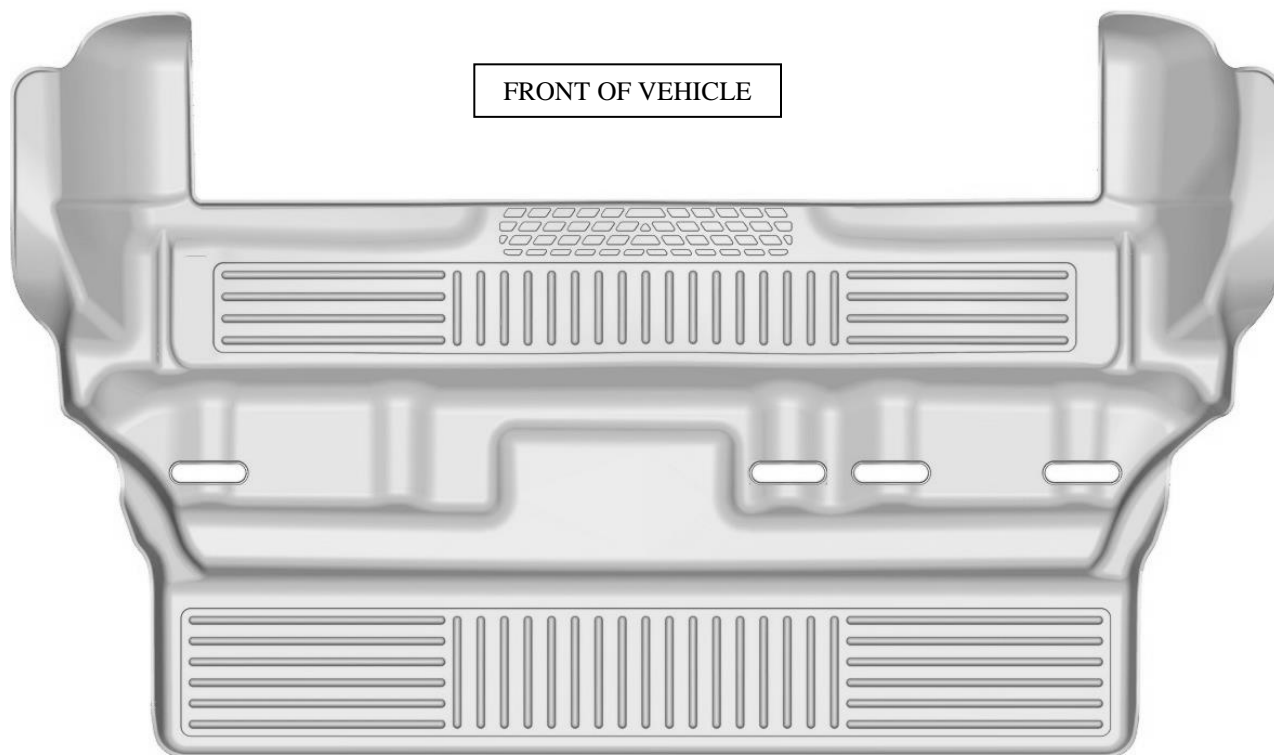

BEFORE ATTEMPTING TO INSTALL YOUR LINER, FIRST FLIP/FOLD YOUR SECOND ROW BENCH SEATS FORWARD TO EXPOSE THE 3<sup>RD</sup> ROW FLOOR PAN. WITH THIS DONE YOU CAN POSITION THE LINER IN THE FLOOR ORIENTED AS SHOWN ABOVE. **NOTE THAT THE 2<sup>ND</sup> SEAT LINER OVERLAPS THE FRONT EDGES OF THE 3<sup>RD</sup> SEAT LINER. YOU WILL NEED TO REMOVE THE 2<sup>ND</sup> SEAT TO INSTALL THE 3<sup>RD</sup> SEAT.**

NOTE THAT THE FOUR TRIMMED AREAS IN THE LINER ALLOW THE SECOND ROW SEATS TO FASTEN THROUGH THE LINER. IF YOUR LINER DOES NOT HAVE THESE FOUR AREAS TRIMMED, DO NOT INSTALL THE LINER AS THE 2<sup>ND</sup> ROW SEATS WILL NOT FASTEN SECURELY IN PLACE. INSTEAD, PLEASE CALL HUSKY LINERS AT 800-344-8759 TO GET THE CORRECT LINER.

**PART #1931 SHOWN INSTALLED—NOTE 2<sup>ND</sup> ROW SEATS MUST BE FLIPPED/FOLDED FORWARD TO ALLOW INSTALLATION OF LINER.**

