




## WEATHERBEATER™ FLOOR LINERS

PT #26691

### USE AND INSTALLATION INSTRUCTIONS FOR YOUR CARGO LINER

Thank you for selecting a Weatherbeater™ Cargo Liner from Husky Liners. Your new cargo liner is custom molded to fit your specific vehicle. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the cargo area of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this “relaxing” may take longer; moving the liner to a heated area and letting it lay face-down in a flat position will speed the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Do not use Armor All®, Son-of-a-Gun® or similar items as these products make the liner slick.

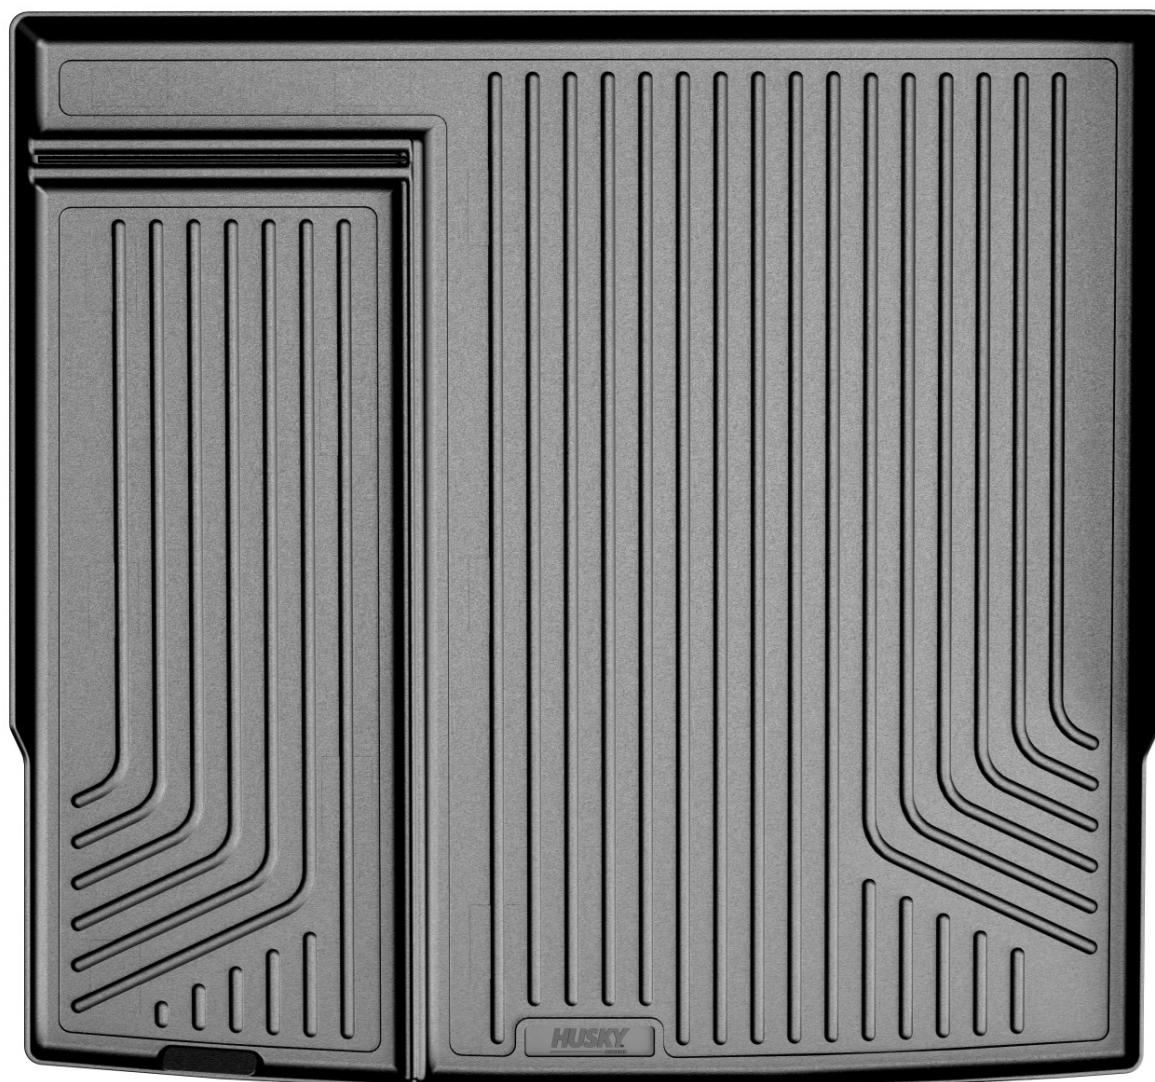



# WEATHERBEATER™ FLOOR LINERS

PT #26691

## CARE AND USE INSTRUCTIONS

AN OPTIONAL TRIM GROOVE IS MOLDED INTO THE CARGO LINER. THIS WILL ALLOW FOR EASIER ACCESS TO THE UNDER-FLOOR STORAGE AREA. ONCE THE CARGO LINER IS ADEQUATLEY POSITIONED IN THE CARGO AREA, YOU MAY NEED TO PRESS DOWN ON THE CARGO LINER TO PROPERLY SEAT THE VELCRO PADS IN PLACE.

