



# Dodge Street Flares™ Fender Flares Set of 4

Set Part #2805905  
Rev-7 08/25/2022

## STEP 1 – PRIOR TO INSTALLATION

- A) Husky®** only approves installing the flares according to these written instructions with the hardware provided. **WARNING:** Failure to install according to these instructions will invalidate the warranty. This includes, but is not limited to using alternative installation methods, hardware, or materials. **DO NOT USE:** Loctite, SuperGlue, or similar products on the hardware or the flares.
- B) Fit:** Verify the fit of the flares to vehicle. (Some filing, sanding, or cutting may be necessary to ensure proper fit).
- C) Painting:** (Optional) if paint is desired it must be done prior to installing flares on vehicle. Clean outer surface with a good grade degreaser. **DO NOT USE LACQUER THINNER OR ENAMEL REDUCER AS A DEGREASER.** Wipe outer surface thoroughly with a tack rag prior to paint. Application of plastic adhesion promoter for ABS plastic as per your paint system manufacturer's recommendations is required. Paint flares using a high quality enamel, or polyurethane automotive paint. If painting edge trim (not recommended), use a flex additive.
- D) Performance:** Using larger Tires may increase the area required to turn the vehicle. Some Tire/Rim combinations may require lowering bump stops and or installing steering stops to prevent tire from contacting flare.
- E) Exhaust System:** Modifications may be necessary to maintain a minimum 4" clearance between flares and exhaust pipes. (Exhaust gases should not vent directly onto flares)
- F) Metal Protection:** All exposed fasteners and bare metal should be treated with rust resistant paint **BEFORE** installing flares. Spray inner fender wells with undercoating **AFTER** flare attachments have been completed.
- G) Decals:** Flares may interfere with existing decals on vehicle. If you wish, remove decals prior to installation of flares.
- H) Care & Cleaning:** Husky fender flares are built to last; any detergent you use to wash your vehicle is sufficient to clean the flare. Do not use any harsh abrasive detergents.

## TOOLS FOR EASY INSTALLATION:

- #2 Phillips Screwdriver
- Socket Wrench
- 8 mm Socket

**PLEASE READ:** Dirt and debris can become lodged between the fender flares and the vehicle's fenders, causing scratching and paint wear from vibration. Husky Liners is not responsible for any damage, and the installation of our fender flares is done with the buyer's understanding that this scratching and paint wear may occur.

## LIMITED LIFETIME WARRANTY AGAINST ANY MANUFACTURING DEFECTS

- To claim a warranty, you must provide Proof of Purchase.



The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.



## Included in Hardware Kit:

1.



CL1-0009,  
Long "U" Clip,  
Magni 565  
4 pcs

2.




CL1-0011,  
10A-4 Magni  
Black Clip,  
4 pcs

3.



ET1-0002,  
Edge Trim Tool,  
1 pc

4.



GP1-0025,  
EX4008 Wiper  
Style Edge Trim,  
304 inches

5.




SW1-0056,  
#8 x 3/4"  
PH Screw,  
8 pcs

## STEP 2 - EDGE TRIM INSTALLATION

A. Peel two to three inches of red vinyl backing away from Wiper Style Edge Trim tape (GP1-0025). Applying the adhesive side of the edge trim to the inner side of the flare, affix the edge trim to the top edge of the flare (the portion that comes in contact with the vehicle).

B. Press edge trim into place along the top edge of the flare in one-foot increments, pulling red vinyl backing free as you continue to work your way around the top edge of the flare.

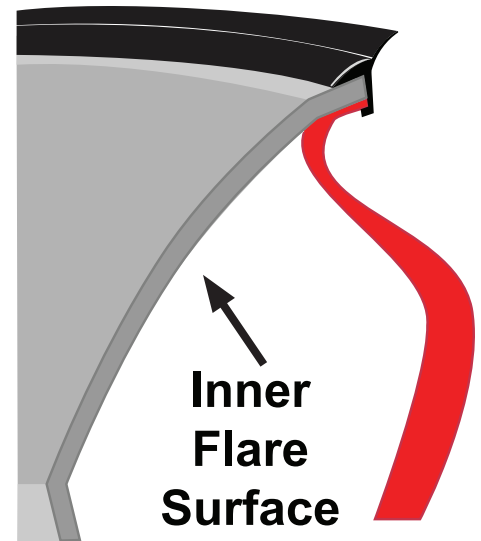

## Front Flare Installation Procedures (Driver's Side):



Using an 8mm socket, remove three factory screws from wheel well. Retain for future use.



Holding flare in position on fender, reinstall screws removed in Step 1.



Make sure flare is correctly positioned on vehicle. Tighten all screws.



## Rear Flare Installation Procedures (Driver's Side):



Take one 1"x1.5" Black Tab and bend it at an approximately 90 degree angle.



Holding flare in position on fender, reinstall screws removed in Step 5. Do not tighten. (An awl may be used to align the threaded clip with holes in flare and fender lip) Note: Make sure screws engage in splash shield.



Slide a supplied Small Clip over fender lip at front of wheel well, aligning with existing holes in fender (2 places).




Small Clip locations.



Slide a supplied Long Clip onto top of fender well, aligning with holes in the flare (2 places). (There are no factory holes at these locations.)



Long Clip locations. Note: Clips will be offset of fender to allow for screw to tighten.

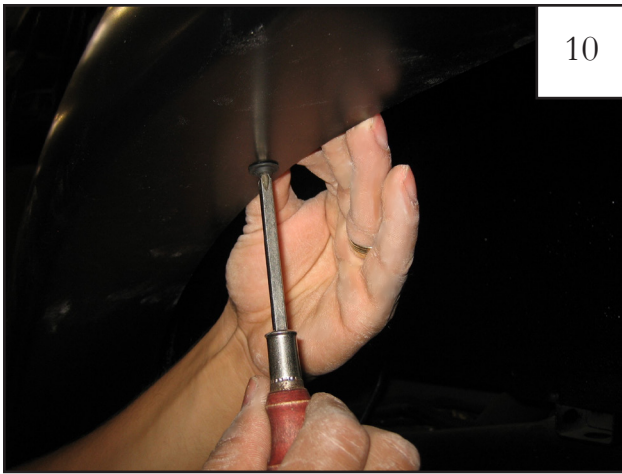

Using a #2 Phillips Screwdriver, insert a supplied Truss-Head Screw through existing holes in flare and into holes in clips (4 places).



Make sure flare is positioned correctly on vehicle. Tighten all screws.

## Edge Trim Tool Procedures:



Using supplied Edge Trim Tool, seat Wiper Style Edge Trim against vehicle by hooking curved end under edge trim at one end of flare. Next, slide around outer edge of flare to the other end.



Using flat end of supplied Edge Trim Tool, seat edge trim against flare by inserting straight end between edge trim and flare at one end. Next, slide around entire edge to the other end.