

DODGE DURANGO FRONT MUD GUARD INSTALLATION INSTRUCTIONS

Please read instructions thoroughly before installation.

Tools Required:


- Short Phillips screwdriver or drill attachment
- Flat Blade screwdriver
- Drill / 1/8 Drill bit

Package Contents

- Driver & passenger side mud guard
- #10 SEM Screws (qty. 6)
- U-clip (qty. 6)
- Instruction sheet

NOTE: Turn the front wheels all the way to the left or right for mud guard installation. However, it may be necessary to remove the wheels depending on the tools being used for installation.

1. Clean and degrease the mud guard location area on the fender before installation.
2. Remove existing fasteners from locations A and B.
3. Pull fender liner back and install a U-clip over sheet metal behind fender liner at locations A and B (Figure 1).
4. Attach mud guard to front fender with #10 SEM screw, at locations A and B thru mud guard, fender liner, and into U-clip. Check fit and parallel and adjust accordingly before tightening (Figure 1).
5. Using the mud guard as a template, drill an 1/8 hole thru the fender cladding and install a #10 SEM screw thru the mud guard and cladding and into a u-clip on the backside of the cladding at location C. (U-clip does not clip over fender cladding)
6. (Figure 2).

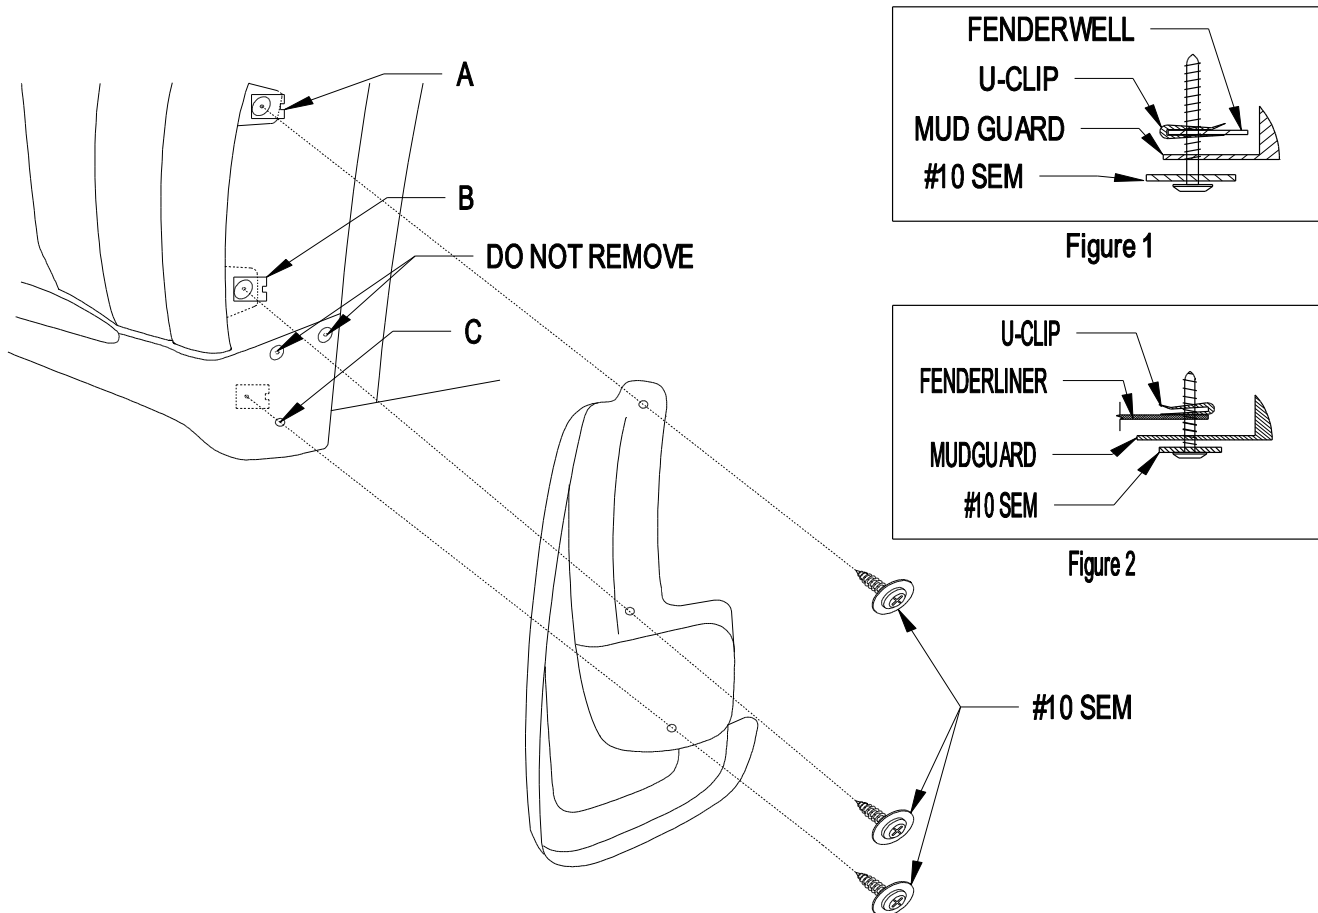

PAINTING INSTRUCTIONS

NOTE: *If painting mud guards, perform a mud guard test fit to ensure correct fit and application prior to painting.*

1. Clean mud guard with a soap and water solution to remove dirt and other contaminants.
2. Sand painting surface with 320 grit sand paper.
3. Apply a coating of flexible primer-adhesion promoter.
4. Apply a flexible paint as directed by the paint manufacturer.