

# THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


## CARE AND USE INSTRUCTIONS

---

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

## INSTALLATION INSTRUCTIONS FOR YOUR JEEP CHEROKEE SECOND SEAT FLOOR LINERS

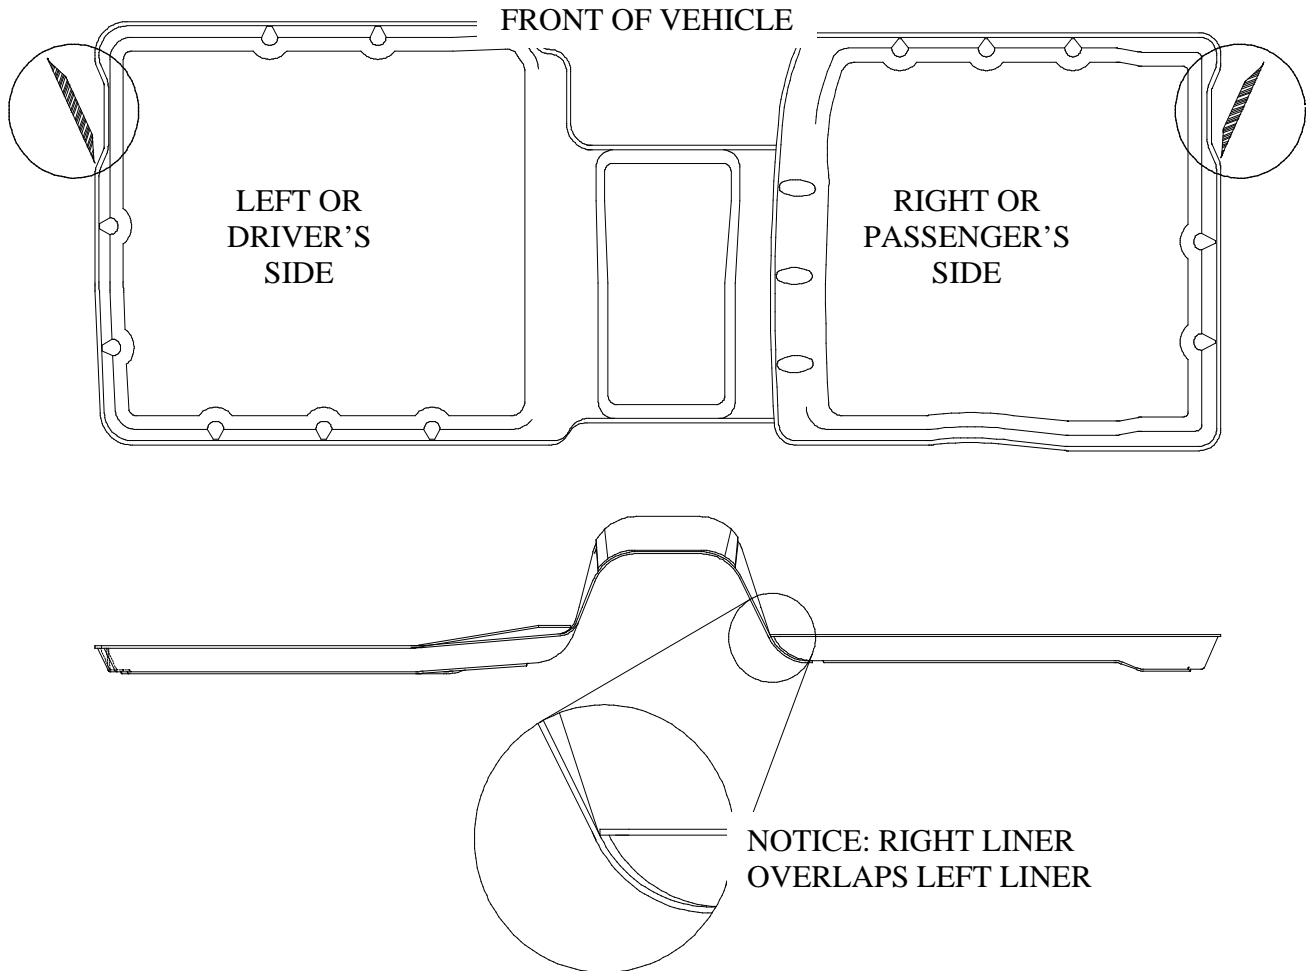

JEEP CHEROKEE OWNERS WITH THE 2-DOOR MODEL WILL NEED TO TRIM THEIR LINERS AS SHOWN CIRCLED ABOVE TO ACCOMMODATE THE FRONT SEAT BELT ATTACHMENT POINTS. A UTILITY KNIFE OR HEAVY SCISSORS WORK WELL FOR TRIMMING YOUR LINERS.