

HUSKY **WeatherBEATER™** **Custom Vehicle Floor Protection**

CARE AND USE INSTRUCTIONS


Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new front floor liners are custom molded to fit your Ford Flex & Lincoln MKT. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD FLEX & LINCOLN MKT FRONT FLOOR LINERS



LEFT OR DRIVER'S

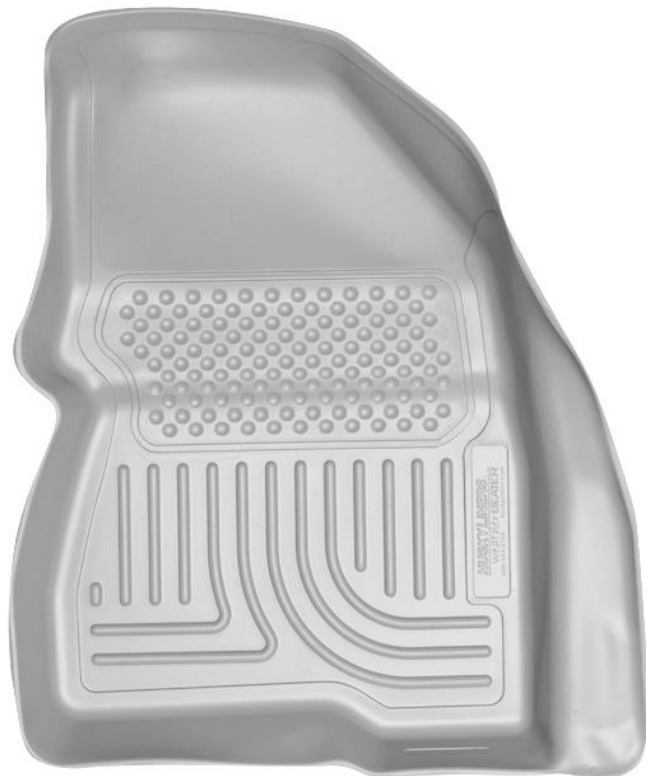

RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR FLEX / MKT FRONT LINERS, MOVE BOTH FRONT SEATS TO THEIR MOST REARWARD POSITION. ONCE YOU HAVE INSTALLED YOUR LINERS, REPOSITION THE SEATS AS DESIRED.

HUSKY **WeatherBEATER™** **Custom Vehicle Floor Protection**


CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new rear floor liners are custom molded to fit your Ford Flex & Lincoln MKT . The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD FLEX & LINCOLN MKT SECOND SEAT FLOOR LINERS

FRONT OF VEHICLE

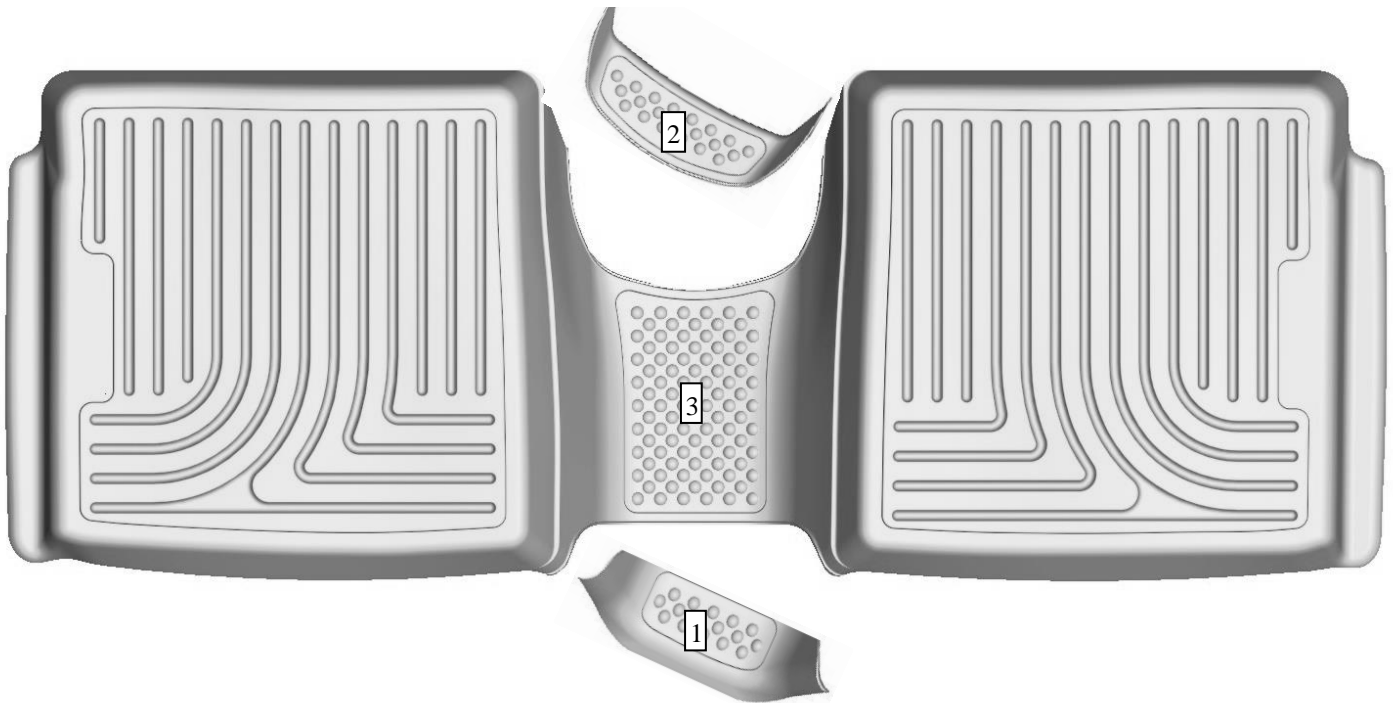

YOUR FLEX & MKT CAN BE EQUIPPED WITH OPTIONS THAT AFFECT THE FIT OF YOUR LINER. YOUR LINER IS DESIGNED TO ACCOMMODATE ALL OPTIONS BUT MAY REQUIRE TRIMMING TO DO SO. PLEASE READ ALL DETAILS THAT FOLLOW TO DETERMINE WHAT OPTIONS ON YOUR VEHICLE MIGHT AFFECT LINER INSTALLATION. ONCE YOU HAVE DETERMINED THIS AND MADE ANY NECESSARY TRIMS, BEGIN THE INSTALLATION BY MOVING THE FRONT SEATS FULLY FORWARD TO GAIN FULL REAR FLOOR ACCESS. ONCE THE LINER IS INSTALLED, REPOSITION THE FRONT SEATS AS DESIRED.

OPTION TRIM 1: IF YOUR VEHICLE HAS A SECOND ROW CONSOLE YOU WILL NEED TO TRIM YOUR LINER TO ACCOMMODATE THIS FEATURE--SEE AREA 1 ABOVE AND PHOTOS ATTACHED ON THE BACK

OF THIS SHEET). USE THE MOLDED IN GROOVE AS YOUR TRIMMING GUIDE. A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING.

OPTION TRIM 2: IF YOUR VEHICLE HAS A CONSOLE BETWEEN THE FRONT SEATS YOU WILL NEED TO TRIM AWAY “AREA 2” OF THE LINER AS SHOWN ABOVE. TO TRIM , FOLLOW THE MOLDED IN TRIM GROOVE. A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING.

OPTION TRIM 3: IF YOUR VEHICLE HAS THE FULL CONSOLE WITH REFRIGERATOR (COVERS ENTIRE CENTER HUMP AREA IN THE SECOND ROW OF SEATS), YOU WILL NEED TO TRIM AWAY THE ENTIRE CENTER SECTION OF THE LINER—AREAS ONE (1), TWO (2) AND THREE (3). IF YOU TRIM AREA 3, YOU WILL BE REMOVING AREAS ONE (1) AND TWO (2) AT THE SAME TIME. TO TRIM AREA 3, USE THE INTERSECTION CREATED WHERE THE “FLAT FLOOR” AREAS INTERSECT THE CENTER HUMP COVERAGE. BELOW IS AN EXAMPLE OF THE TRIM REQUIRED FOR THE CONSOLE REFRIGERATOR.

