

Installation Instructions

I - Sheet Number INS-HSBF71 Rev.D



Hood Shield

**For proper installation and best possible fit, please read all instructions BEFORE you begin.
For technical assistance or to obtain missing parts, please call Customer Relations at 1-800-344-8759.**

Important Safety Information



- CAUTION - Before driving, ensure that the hood shield is properly anchored to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

Contents **NOTE:** Actual product may vary from illustration.



Hood shield



Screw x2



Bump On x4




Surface prep



Tools Required



Car Wash Supplies

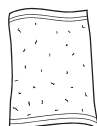

Clean Towel

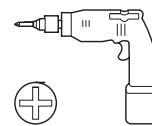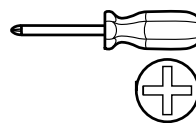

Phillips screw-
driver

Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.


Installation Steps **NOTE:** Actual application may vary slightly from illustrations.



Clean the top grill area and leading edge
of hood with a soft cloth.

Grill


1

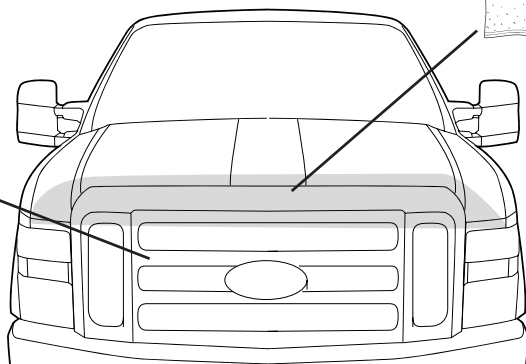

Apply a light coating of Surface prep to the underside
of the top opening in the vehicle grill.

Grill

2

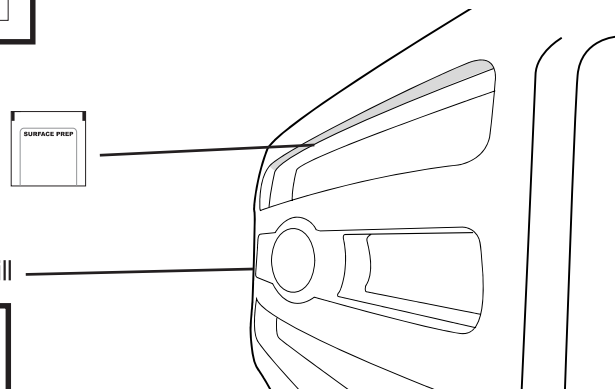


Installation Steps


NOTE: Actual application may vary slightly from illustrations.

Raise hood.

3

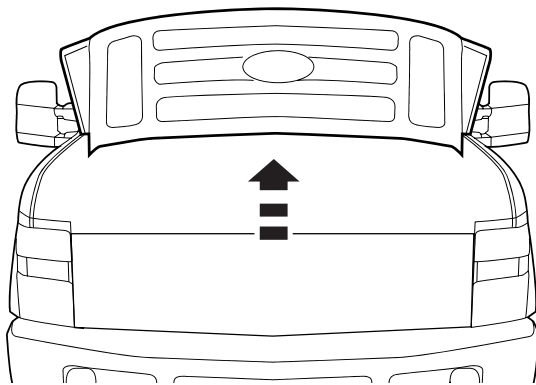


Peel back 2" (5 cm) of tape liner from each flange.

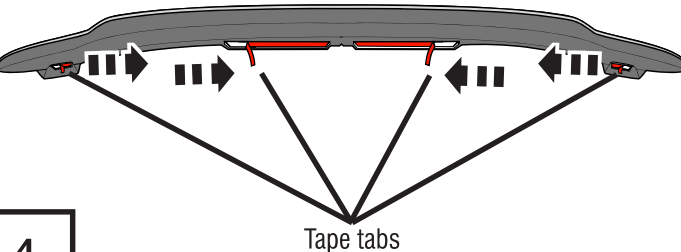



4

Align hood shield with hood edge.

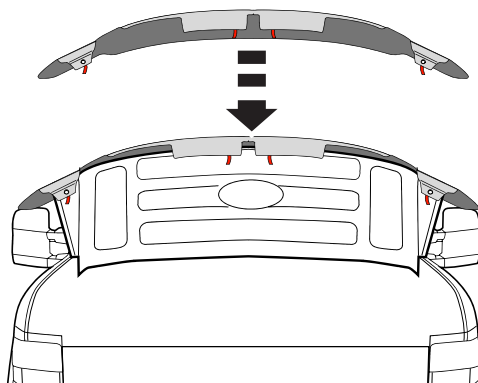

5


Ensure that center flanges wrap **UNDER** the top opening in the grill, and that tape tabs are accessible.

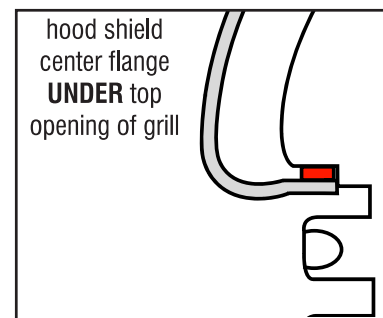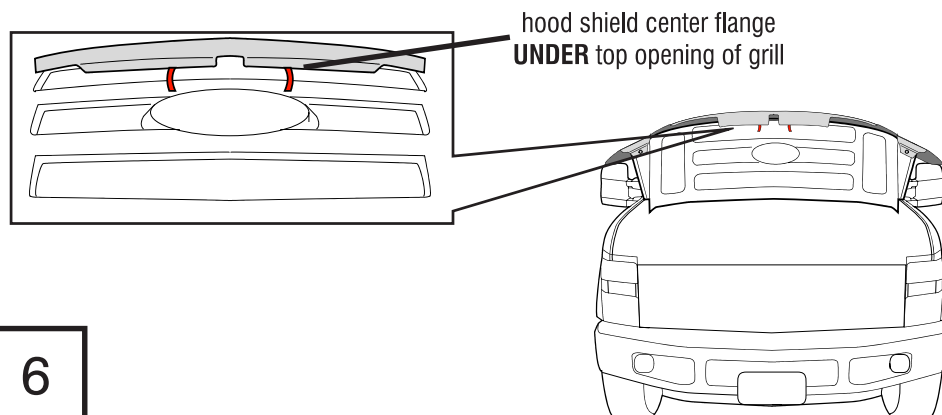


CROSS SECTION

6

Remove remaining tape liner by pulling on tape tabs.

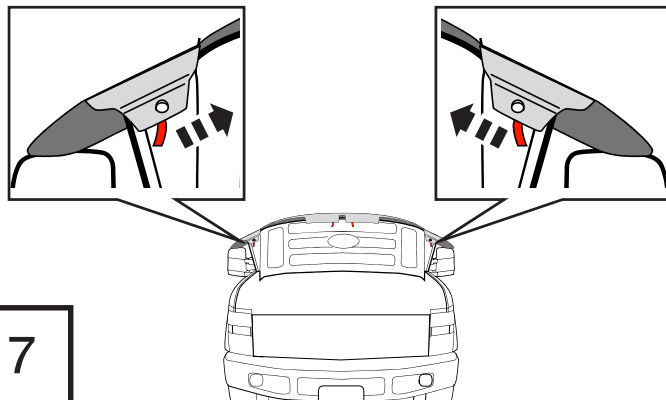


7

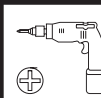

8


Install (1) screw in each side flange. Do not over-tighten.

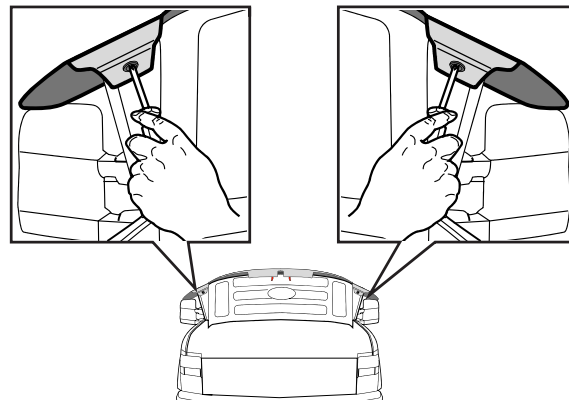


Installation Steps

NOTE: Actual application may vary slightly from illustrations.


Remove remaining tape liner by pulling on tape tabs.

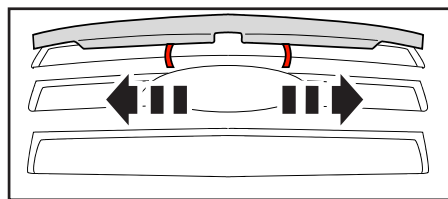

9

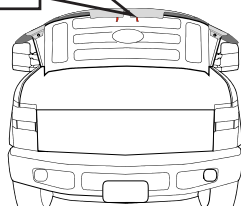


Apply pressure to tape flanges to ensure adhesion.

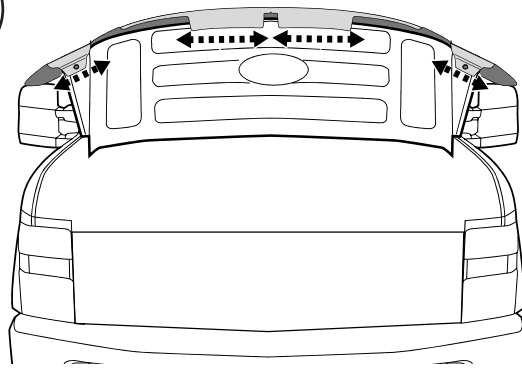


10

Close hood.

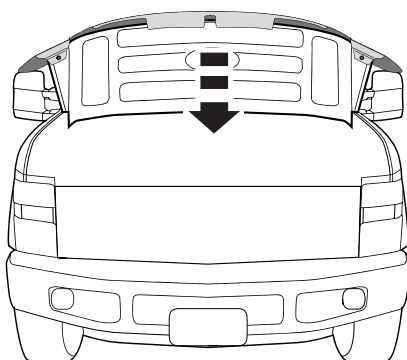

11

Apply (4) Bump ons to hood surface.

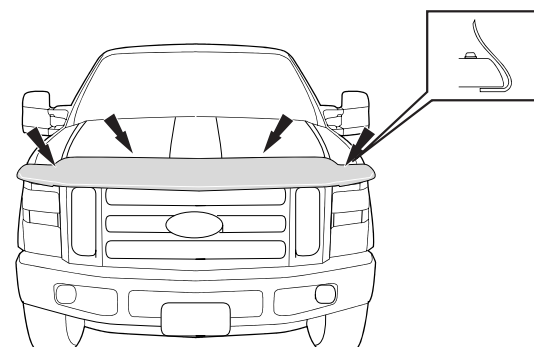

12

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.



The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.



Congratulations!

You have purchased one of the many quality Husky® branded products. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.



1-800-344-8759 • Visit us at huskyliners.com

© 2024 Husky Liners, Inc. All rights reserved.

Husky® and the Husky logo are trademarks of Husky Liners, Inc.