



WEATHERBEATER™ FLOOR LINERS


PT #1305

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® Floor Liner from Husky Liners. Your new front floor liners are custom molded to fit your Ram Crew or Mega Cab 2500/3500 truck. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR RAM 2500/3500 CREW CAB & MEGA CAB TRUCK FRONT FLOOR LINERS

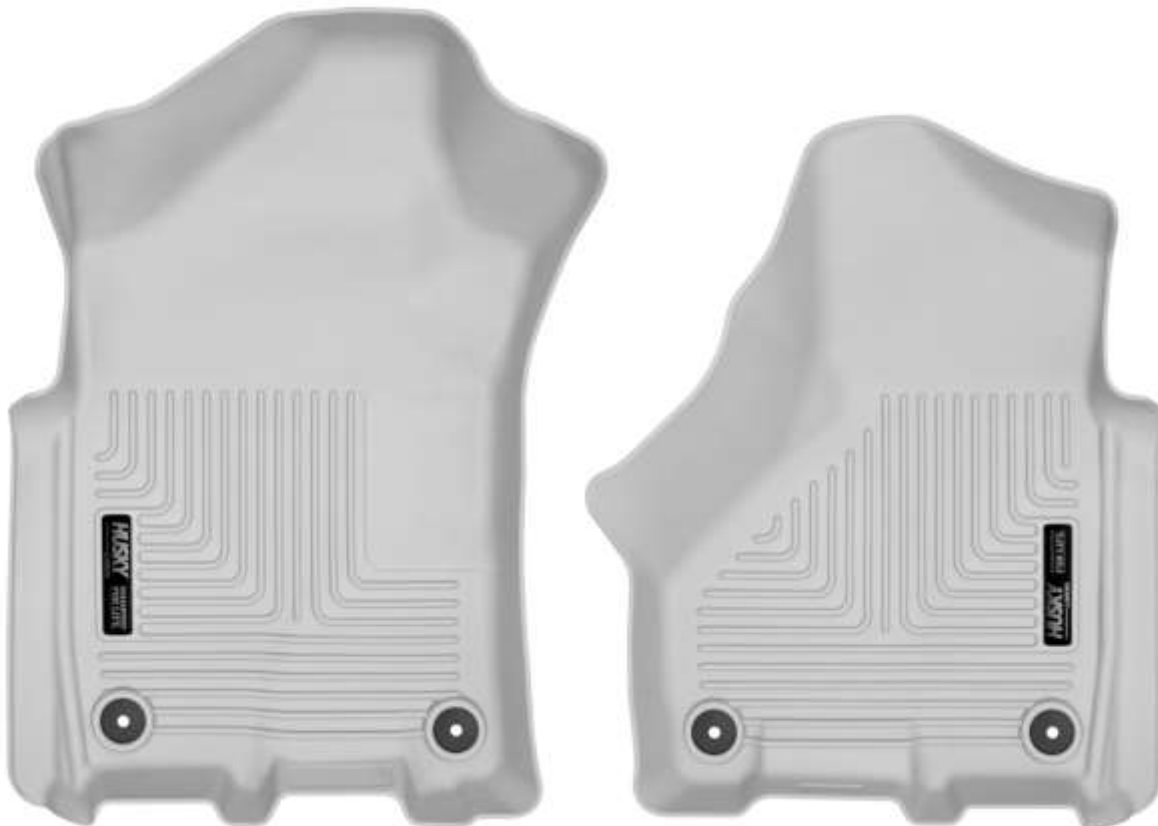

LEFT OR DRIVER'S SIDE

RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR NEW FRONT LINERS, MOVE BOTH FRONT ROW SEATS TO THEIR MOST REARWARD POSITION. WITH THIS DONE, INSTALL THE LINERS AS SHOWN ABOVE. THE LINERS SNAP OVER / ATTACH TO THE FACTORY MAT RETAINERS. ONCE YOU HAVE INSTALLED YOUR LINERS, REPOSITION THE SEATS AS DESIRED.