


## CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater™ Trunk Liner from Winfield Consumer Products. Your new liner is custom molded to fit your Ford Fusion (non-Hybrid). Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the trunk of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this "relaxing" may take longer; moving the liner to a heated area will accelerate the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner,  $409^{\text{(B)}}$  or Glass Plus<sup>(B)</sup> work well. Use of Armor All<sup>(B)</sup>, Son-of-a-Gun<sup>(B)</sup> or similar items is discouraged as these products make the liner slick.

## INSTALLATION INSTRUCTIONS FOR YOUR FORD FUSION TRUNK LINER (NON-HYBRID MODELS)

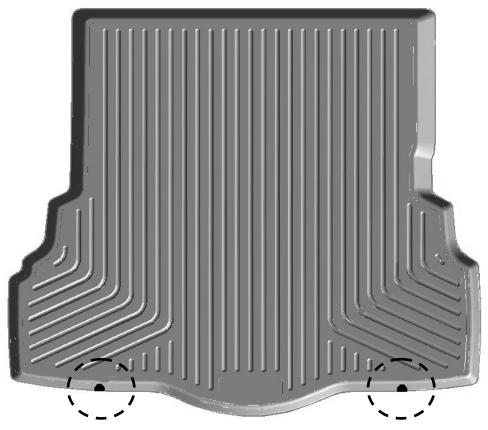

YOUR TRUNK LINER IS DESIGNED TO ALLOW ACCESS TO THE FACTORY CARGO NET ATTACHMENT POINTS LOCATED ALONG THE BACK WALL OF THE TRUNK AREA. TO ACCESS THESE LOCATIONS, YOU WILL NEED TO TRIM AWAY THE TWO LOWERED AREAS ON YOUR LINER THAT COVER THE ATTACHMENT POINTS (SHOWN CIRCLED ABOVE). TO TRIM, SIMPLY USE A PAIR OF HEAVY SHEARS OF A UTILITY KNIFE AND REMOVE THE LOWERED AREAS FROM THE LINER. YOUR TRUNK LINER WILL NOT FIT HYBRID FUSION MODELS.