



X-ACT CONTOUR


FLOOR LINERS

CARE AND USE INSTRUCTIONS – PN:52371

Thank you for selecting an X-act Contour™ 2nd Seat Floor Liner from Husky Liners Inc. Your new floor liner is custom molded to fit your specific vehicle's floor board. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge and soap and water. Windex®, 409® and ArmorAll® type cleaners work as well.

FRONT OF VEHICLE

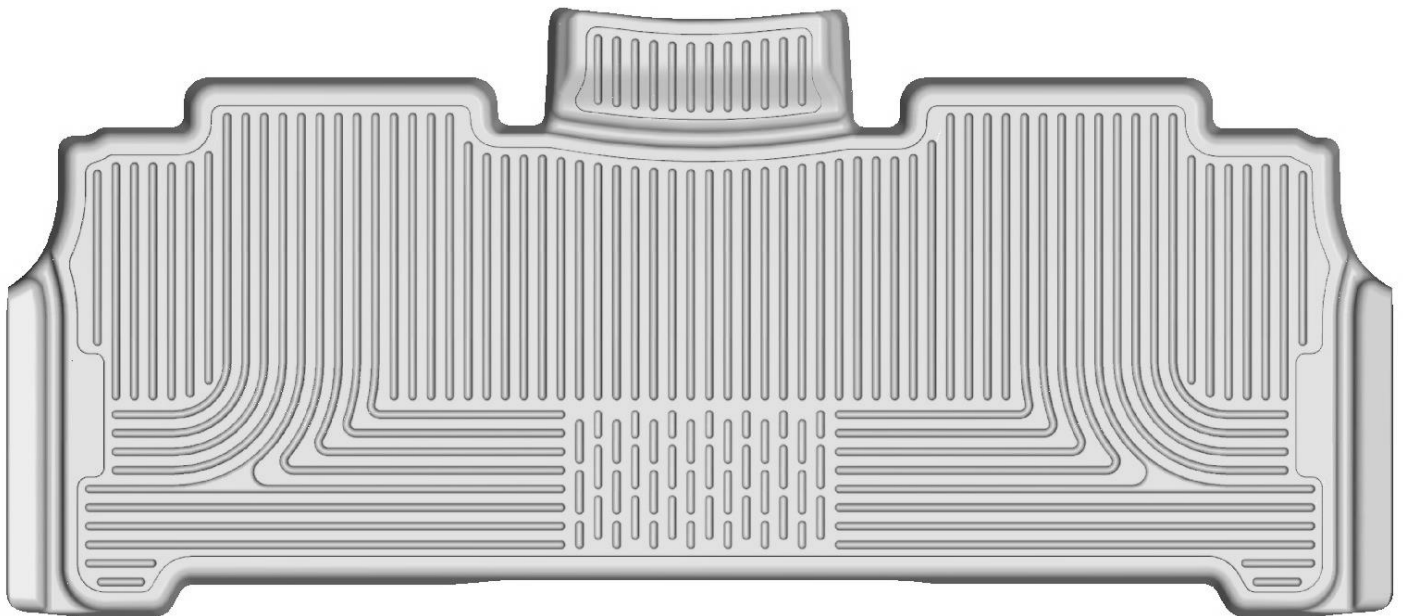

TO INSTALL YOUR LINER, FIRST SLIDE BOTH FRONT ROW SEATS FORWARD TO ALLOW EASIER ACCESS TO THE 2ND ROW FLOOR PAN. WITH THE FRONT SEATS MOVED FORWARD, INSTALL THE LINER POSITIONED AS SHOWN ABOVE. NOTE THAT THIS LINER ONLY WORKS WITH 2ND ROW STOW-N-GO SEATS.