

**HUMMER H2
REAR MUD GUARDS
INSTALLATION INSTRUCTIONS**

Please read instructions thoroughly before installation.

Tools Required

- Short Phillips screwdriver
- Center punch / Hammer
- Drill / 1/8" drill bit

Package Contents

- Driver (LH) & passenger (RH) side rear mud guard
- #10 screw (qty. 6)
- Washer (qty. 6)
- U-Clips (qty. 6)
- Instruction sheet

NOTE: It may be necessary to remove the wheels depending on the tools being used for installation.

1. Clean and degrease the mud guard location area on the fender before installation.
2. Remove factory fasteners from locations A and B (Figure 1).
3. Place mud guard against fender and install #10 screws and washers at locations A and B, through mud guard, through existing fender holes and into u-clips. NOTE: The u-clips are to be used as a nut and not to be clipped over fender. Check fit and level before tightening.
4. Using mud guard as a template, drill an 1/8" hole at location C and install a #10 screw and washer into u-clip as in step 3.

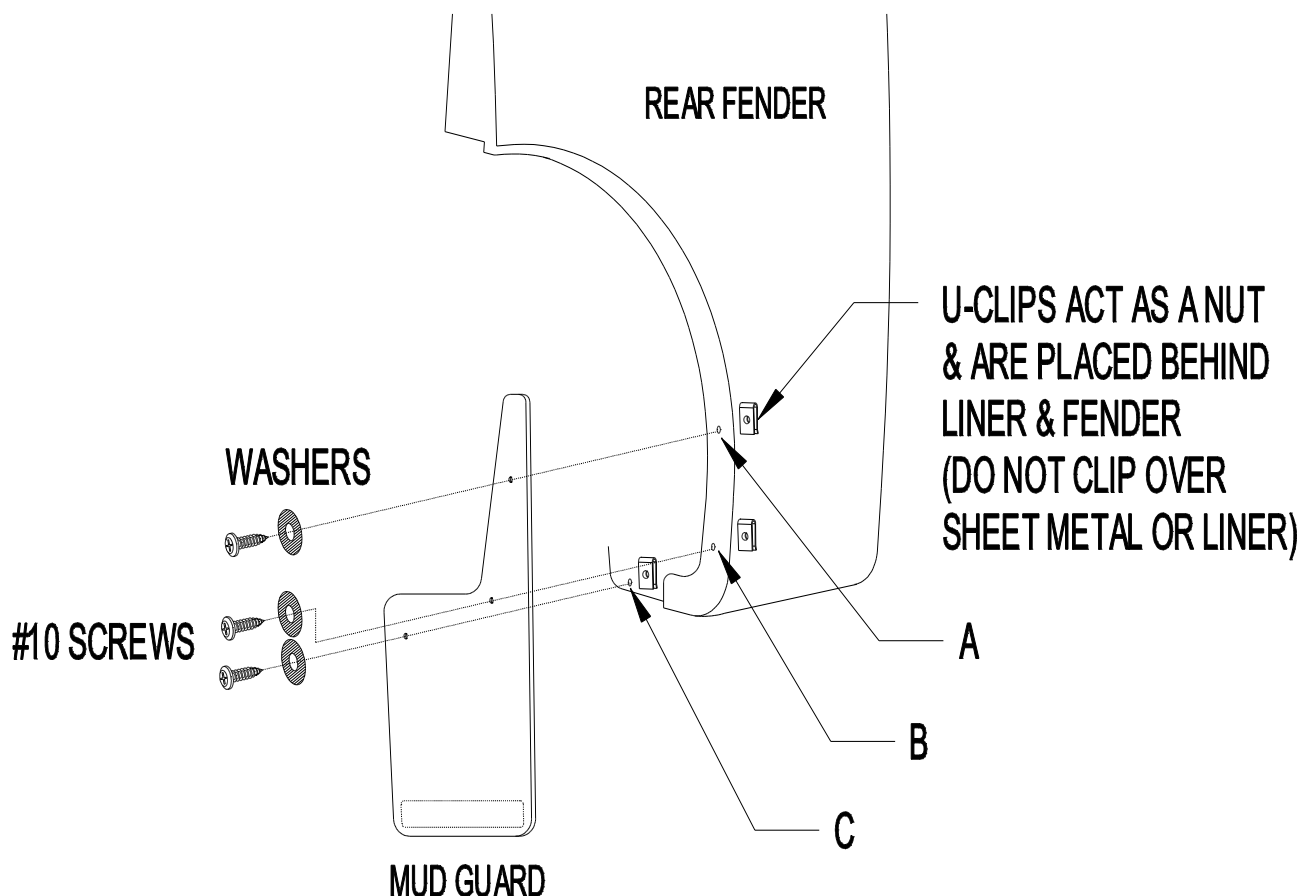


Figure 1