

## FORD SUPER DUTY DUAL REAR FLAT MUD GUARD

### INSTALLATION INSTRUCTIONS

*Please read instructions thoroughly before installation.*

#### Tools Required

- Short Phillips screwdriver
- Cutting tool - for removal of existing plastic fasteners

#### Package Contents

- Driver & passenger side rear mud guard
- #10 screw (qty. 10)
- Washer (qty. 10)
- U-clip (qty. 10)
- Instruction sheet

**NOTE:** It may be necessary to remove the wheels depending on the tools being used for installation.

1. Clean the mud guard location area on the fender before installation.
2. Remove existing plastic fasteners from locations A, C, D, and E by cutting off the heads of the fasteners and pushing the remaining piece through the fender tab hole (Figure 1).
3. Remove the existing screw and washer from location B with a short phillips screwdriver.
4. Pull back fender liner to expose fender tabs and install a U-clip at locations A, B, C, D, and E.
5. Place mud guard between fender and fender liner and install a #10 screw and washer through fender liner, mud guard, U-clip and fender tab at locations A, B, C, D, and E.

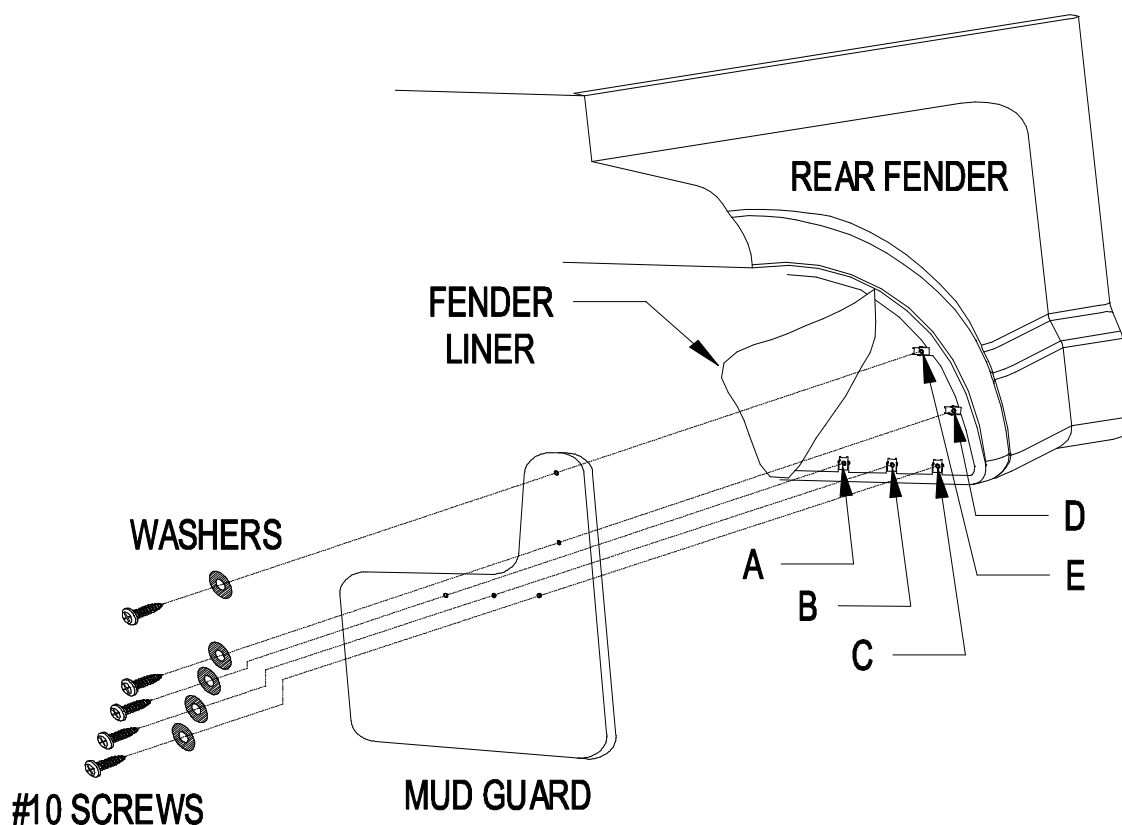


Figure 1

**NEED A LOGO FOR YOUR NEW MUD GUARD? TRY AN INTERNET SEARCH FOR "EMBLEM" ON E-BAY, AMAZON OR YOUR FAVORITE AUTOMOTIVE SITE.**