

## GMC/CHEVROLET DUALY LOGO READY REAR MUD GUARD

### INSTALLATION INSTRUCTIONS

*Please read instructions thoroughly before installation.*

#### Tools Required

- Short Phillips screwdriver
- Center punch
- Drill / 1/8" drill bit
- 13 mm wrench

#### Package Contents

- Driver & passenger side rear mud guard
- #10 screw (qty. 6)
- Washer (qty. 6)
- Instruction sheet

**NOTE:** It may be necessary to remove the rear wheels depending on the tools being used for installation.

1. Clean the mud guard location area on the fender before installation.
2. Remove existing bracket fastener from locations D using a 13 mm wrench or socket (Figure 1).
3. Attach mud guard by installing an existing bracket fastener at location D - through mud guard, fender, and into fender bracket (Figures 1 and 2).
4. Using mud guard as a template, center punch and drill 1/8" holes at locations A, B, and C (Figure 1).
5. Install #10 screws and washers at locations A, B, and C.

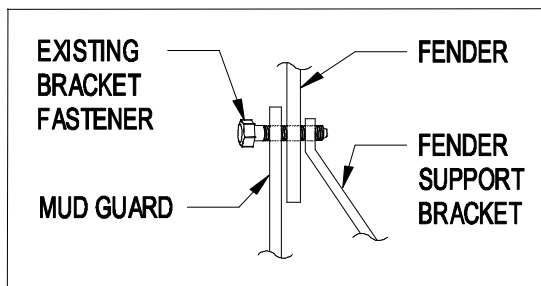


Figure 2

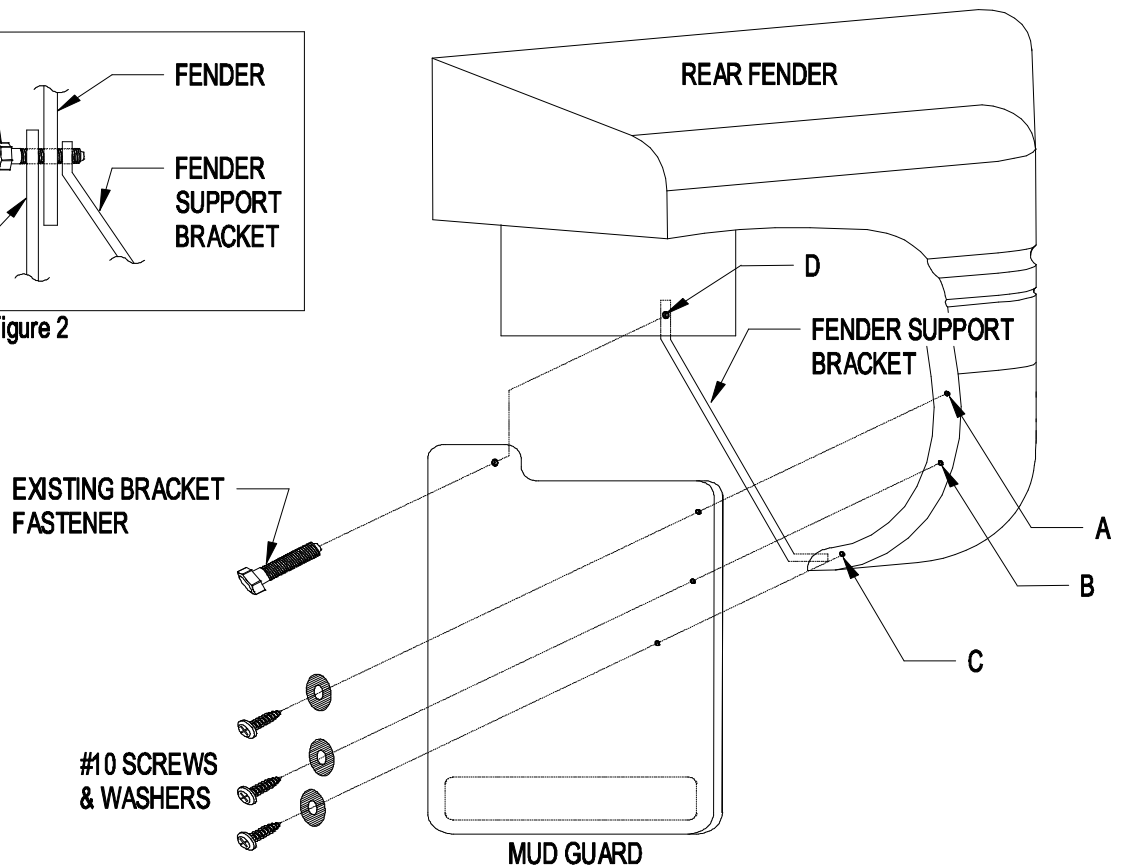


Figure 1

**NEED A LOGO FOR YOUR NEW MUD GUARD? TRY AN INTERNET SEARCH FOR "EMBLEM" ON E-BAY, AMAZON OR YOUR FAVORITE AUTOMOTIVE SITE.**