


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR SUBARU FORESTER & IMPREZA SECOND SEAT FLOOR LINER

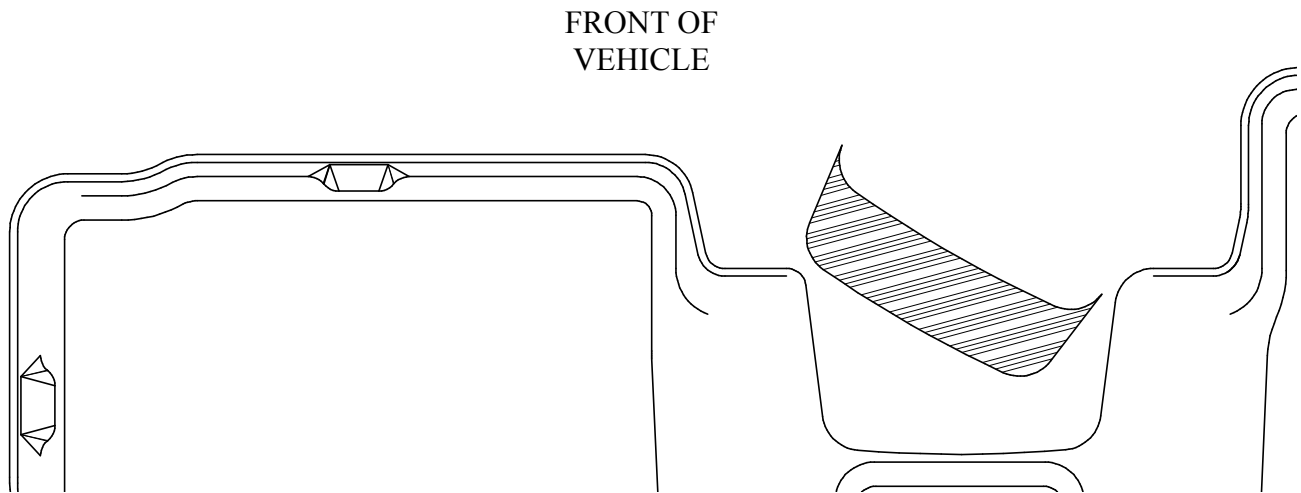

IF YOUR SUBARU IMPREZA HAS A FACTORY CONSOLE BETWEEN THE FRONT ROW SEATS, YOU WILL NEED TO TRIM YOUR LINER AS SHOWN ABOVE BEFORE INSTALLATION. TO TRIM, SIMPLY REMOVE THE AREA ON THE FRONT EDGE OF THE CENTER HUMP COVERAGE AREA USING A UTILITY KNIFE OR HEAVY SHEARS. FOLLOW THE MOLDED IN STEP IN THE LINER AS A TRIM GUIDE

TO EASE INSTALLATION OF YOUR LINER, MOVE BOTH FRONT SEATS TO THEIR MOST FORWARD POSITION BEFORE INSTALLING LINER. ONCE LINER IS IN PLACE, REPOSITION SEATS AS DESIRED.