



# WEATHERBEATER™ FLOOR LINERS

PT #9507

## CARE AND USE INSTRUCTIONS

---

Thank you for selecting a WeatherBeater® Floor Liner from Husky Liners. Your new front floor liners are custom molded to fit your Ford Mustang Mach-E. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

## INSTALLATION INSTRUCTIONS FOR YOUR FORD MUSTANG MACH-E FRONT FLOOR LINERS



LEFT OR DRIVER'S SIDE



RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR FRONT LINERS, MOVE BOTH FRONT SEATS TO THEIR MOST REARWARD POSITION. NEXT, INSTALL THE LINERS POSITIONING THEM AS SHOWN ABOVE. NOTE THAT THE LINERS ATTACH TO THE FACTORY FLOOR MAT RETENTION POSTS. ONCE THE LINERS ARE INSTALLED, REPOSITION THE FRONT SEATS AS DESIRED.



## WEATHERBEATER™ FLOOR LINERS

PT #9507


### CARE AND USE INSTRUCTIONS

---

Thank you for selecting a WeatherBeater® Floor Liner from Husky Liners. Your new rear floor liner is custom molded to fit your Tesla 3. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

### INSTALLATION INSTRUCTIONS FOR YOUR FORD MUSTANG MACH-E SECOND SEAT FLOOR LINER

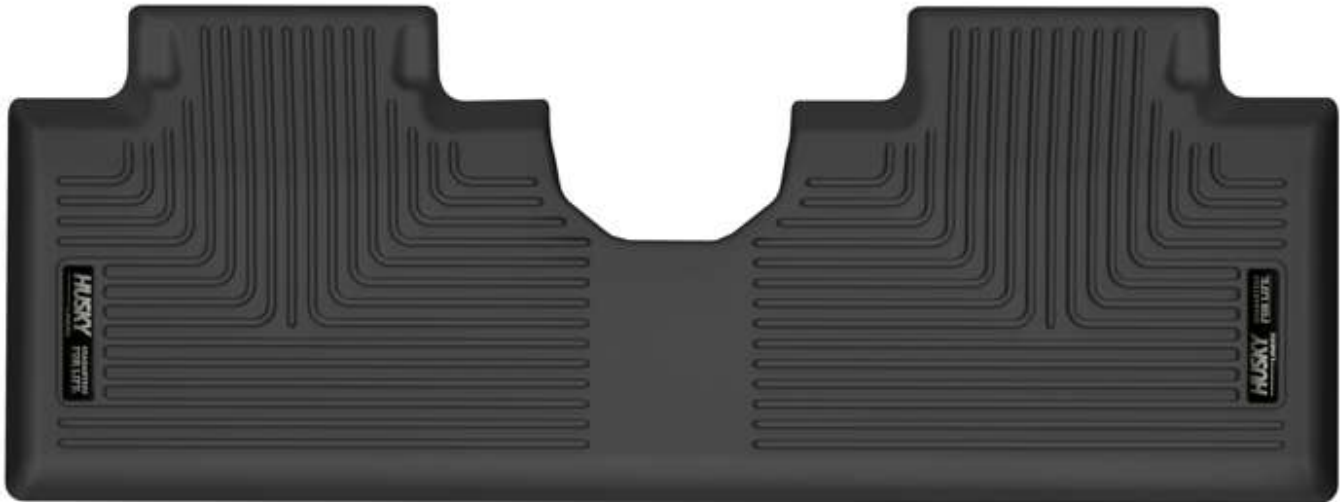

TO EASE INSTALLATION OF YOUR NEW 2<sup>ND</sup> SEAT LINER, MOVE BOTH FRONT ROW SEATS TO THEIR MOST FORWARD POSITION. WITH THAT DONE, INSTALL THE LINER AS SHOWN ABOVE. ONCE THE LINER IS IN PLACE, REPOSITION THE FRONT SEATS AS DESIRED.