

## Marker Light and Wiring Components

- |   |  |  |  |
|---|--|--|--|
| 1. <br>LT1-0011<br>Marker Light  | 2. <br>EC1-0010<br>Butt Connector               | 3. <br>EC1-0009<br>Posi-Tap<br>Connector | 4. <br>BR1-0011<br>Marker Light<br>Lens Cover |
| 5. <br>BR1-0003<br>Blackout Film | 6. <br>BR1-0002<br>Marker Light<br>Gasket       | 7. <br>WA1-0011<br>Washer                | 8. <br>SW1-0011<br>Screw                      |
| 9. <br>BS-0009<br>Wire Stay     | 10. <br>EC1-0011<br>Connection<br>Wire (30 ft) | 11. <br>R98022<br>ALCOHOL PREP<br>PAD   |  |















### Components and Hardware:

|                                  |          |
|----------------------------------|----------|
| 1. Marker Light.....             | (4)      |
| 2. Butt Connector.....           | (8)      |
| 3. Posi-Tap Connector .....      | (8)      |
| 4. Marker Light Lens Cover ..... | (5)      |
| 5. Blackout Film .....           | (4)      |
| 6. Gasket .....                  | (4)      |
| 7. Washer .....                  | (8)      |
| 8. Screw.....                    | (8)      |
| 9. Wire Stay .....               | (8)      |
| 10. Connection Wire .....        | (30 ft.) |
| 11. Alcohol Prep Pad .....       | (2)      |

### Tools for Installation:

- Utility Knife
- #2 Phillips Screwdriver
- Wire Crimp Tool

## Fender Flare Components and Hardware:

1.   
SW1-0058,  
#10 x 5/8" Phillips  
SS Truss Screw,
2.   
SW1-0050,  
10 x 5/16 Phillips  
Truss Screw,
3.   
CL1-0005,  
Dacromet "S"  
Spring Clip,
4.   
MT1-0034,  
1" x 1.5" x .06"  
Blk 3M Foam Tab,
5.   
ET1-0002,  
Edge Trim Tool,
6.   
GP1-0025  
Edge Trim
7.   
CL1-0022,  
#10 "U" Clip,
8.   
CL1-0009,  
Long "U" Clip,  
Magni 565
9.   
RV1-P001,  
1/4" Black Nylon  
Retainer,
10.   
R98022  
ALCOHOL PREP  
PAD,
11.   
Front  
Fender Flare
12.   
Rear  
Fender Flare
13.   
Front  
Fender Flare  
Bracket
14.   
Rear  
Fender Flare  
Bracket

## Components and Hardware:

|  |        |
|--|--------|
| 1. (SW1-0058) #10x5/8" Phillips SS Truss Screw.....          | (16)   |
| 2. (SW1-0050) #10x5/16" Phillips Truss Screw .....           | (4)    |
| 3. (CL1-0005) Dacromet "S" Spring Clip.....                  | (4)    |
| 4. (MT1-0034) 1"x1.5"x.06" Blk 3M Foam Tab .....             | (12)   |
| 5. (ET1-0002) Edge Trim Tool.....                            | (1)    |
| 6. (GP1-0025) Wiper Style Edge Trim .....                    | (320") |
| 7. (CL1-0022) #10 "U" Clip (Additional 8 pre-installed)..... | (8)    |
| 8. (CL1-0009) Long "U" Clip.....                             | (8)    |
| 9. (RV1-P001) Black Nylon Retainer.....                      | (2)    |
| 10. (AD1-0008) Alcohol Prep Pad .....                        | (4)    |
| 11. Front Fender Flares (LH & RH).....                       | (2)    |
| 12. Rear Fender Flares (LH & RH) .....                       | (2)    |
| 13. Front Fender Flare Bracket (LH & RH) .....               | (2)    |
| 14. Rear Fender Flare Bracket .....                          | (2)    |

## Tools for Installation:

- #2 Phillips Screwdriver
- Socket Wrench
- 10mm Socket
- T-15 Torx Bit
- Grease Pencil

## Chevrolet Fender Flares

### PRIOR TO INSTALLATION

1

- A. Husky® only approves installing the flares according to these written instructions with the hardware provided. **WARNING:** Failure to install according to these instructions will invalidate the warranty. This includes, but is not limited to using alternative installation methods, hardware, or materials. **DO NOT USE:** Loctite, SuperGlue, or similar products on the hardware or the flares.
- B. **Fit:** Verify the fit of the flares to vehicle. (Some filing, sanding, or cutting may be necessary to ensure proper fit).
- C. **Painting:** (Optional) if paint is desired it must be done prior to installing flares on vehicle. Clean outer surface with a good grade degreaser. **DO NOT USE LACQUER THINNER OR ENAMEL REDUCER AS A DEGREASER.** Wipe outer surface thoroughly with a tack rag prior to paint. Application of plastic adhesion promoter for ABS plastic as per your paint system manufacturer's recommendations is required. Paint flares using a high quality enamel, or polyurethane automotive paint. If painting edge trim (not recommended), use a flex additive.
- D. **Performance:** Using larger Tires may increase the area required to turn the vehicle. Some Tire/Rim combinations may require lowering bump stops and or installing steering stops to prevent tire from contacting flare.
- E. **Exhaust System:** Modifications may be necessary to maintain a minimum 4" clearance between flares and exhaust pipes. (Exhaust gases should not vent directly onto flares)
- F. **Metal Protection:** All exposed fasteners and bare metal should be treated with rust resistant paint **BEFORE** installing flares. Spray inner fender wells with undercoating **AFTER** flare attachments have been completed.
- G. **Decals:** Flares may interfere with existing decals on vehicle. If you wish, remove decals prior to installation of flares.
- H. **Care & Cleaning:** Husky® fender flares are built to last; any detergent you use to wash your vehicle is sufficient to clean the flare. Do not use any harsh abrasive detergents.

---

**PLEASE READ:** Dirt and debris can become lodged between the fender flares and the vehicle's fenders, causing scratching and paint wear from vibration. Husky® is not responsible for any damage, and the installation of our fender flares is done with the buyer's understanding that this scratching and paint wear may occur.

#### 3 YEAR LIMITED WARRANTY AGAINST ANY MANUFACTURING DEFECTS


- To claim a warranty, you must provide Proof of Purchase.

## Chevrolet Fender Flares

### Light Assembly Installation

2

- A) Clean the top surface of the cover (indicated by blue arrow) with the alcohol pad.
- B) Install the Blackout Film to the top surface Cover by first aligning the two dashed red edges as shown.
- C) Assemble Light assembly to fender flare as shown. Route marker light wire through the center hole in the gasket and fender flare. **DO NOT** overtighten screws as this could crack the cover. Tighten enough that the light assembly does not move.

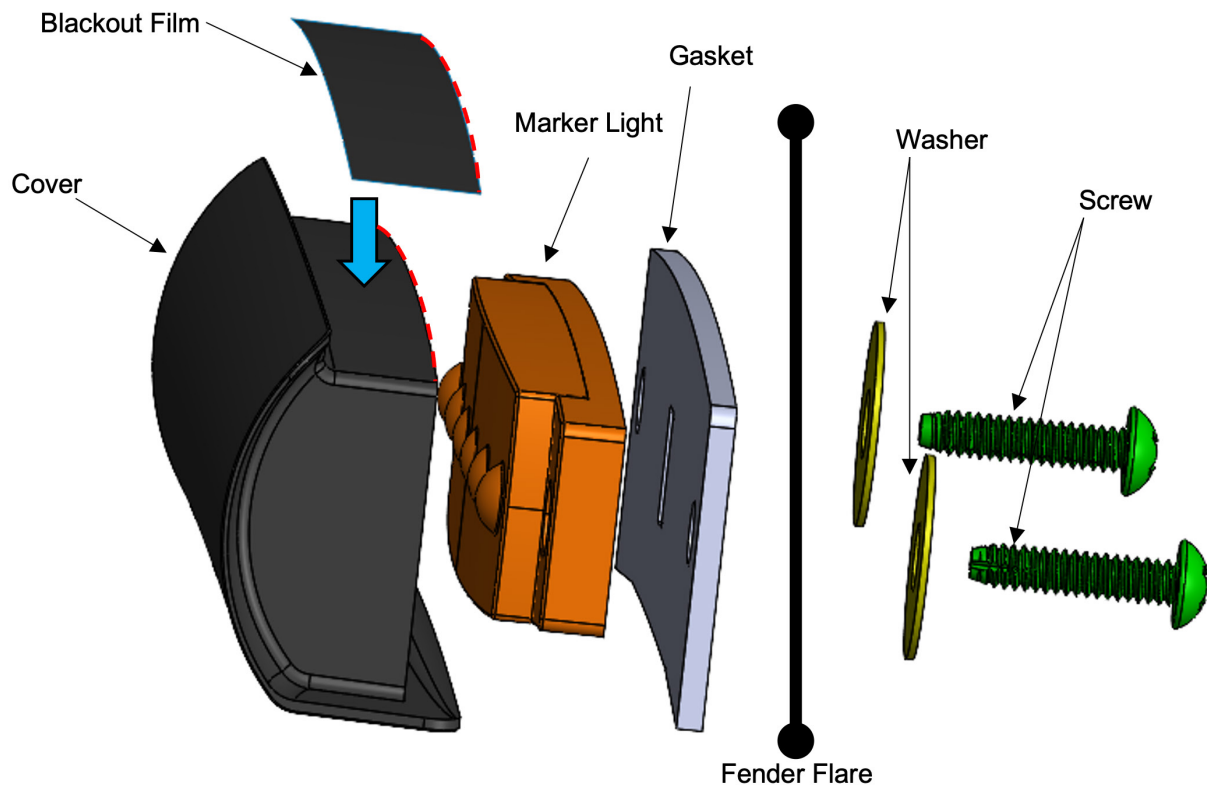

# Chevrolet Fender Flares

## Edge Trim Installation


3

- A)** Peel two to three inches of red vinyl backing away from Edge Trim tape. Applying the adhesive side of the edge trim to the inner side of the flare, affix the edge trim to the top edge of the flare (the portion that comes in contact with the vehicle).
- B)** Press edge trim into place along the top edge of the flare in one-foot increments, pulling red vinyl backing free as you continue to work your way around the top edge of the flare.



## Marker Light Wiring Detail

4

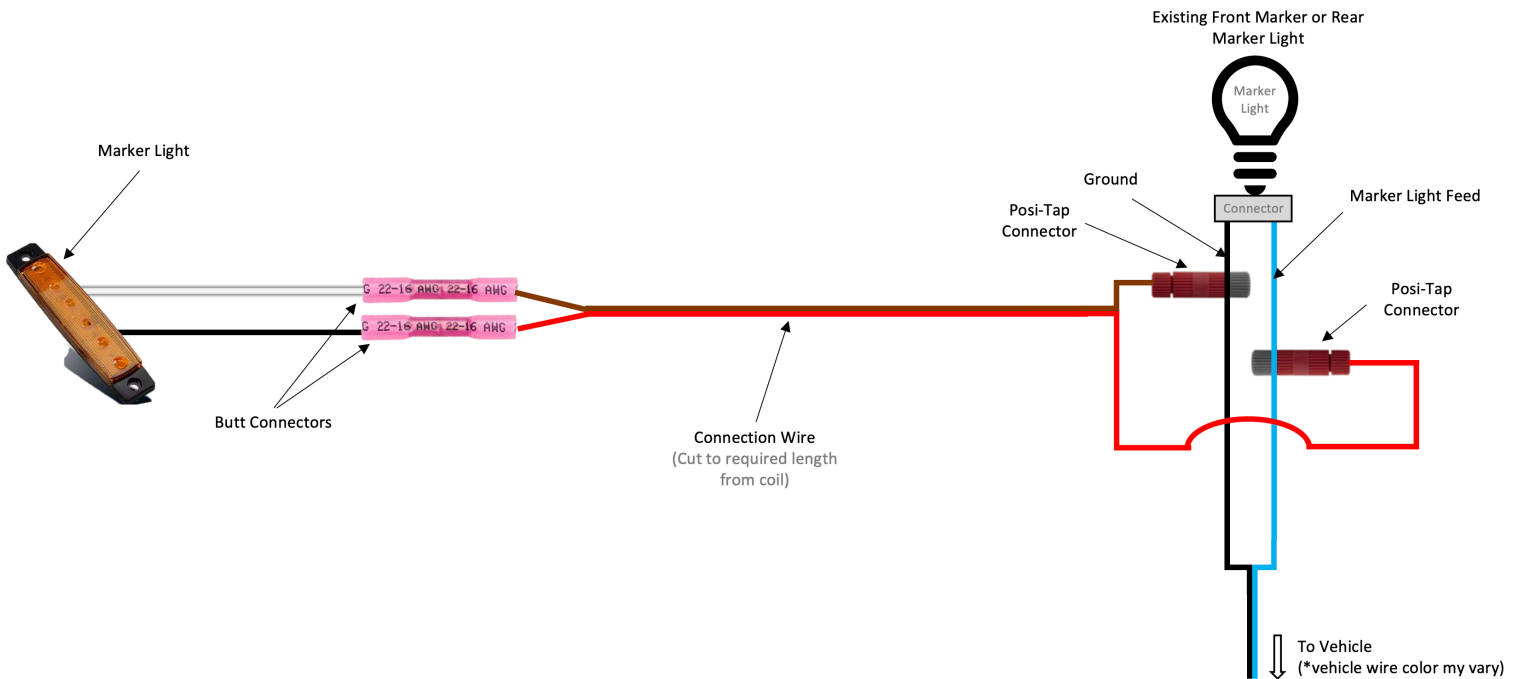


## Chevrolet Fender Flares

### Front Flare Installation Procedures (Driver's Side):

5

**\*Reference Step 4 Image**

- A) Find and access the wiring harness for your front or rear marker light. \*Note that the marker light is often integrated into the headlight and taillight assemblies.
- B) Using two Posi-Tap connectors and the connection wire, connect the red lead to the marker light feed and the brown lead to a ground.
- C) Route the connection wire to the top center of the fender area. Use Wire Stays as appropriate to help manage wires.
- D) Cut the connection wire, leaving 1 foot of extra wire extended down from the top center of the fender area.
- E) Repeat Steps A-D at the other three flare locations.

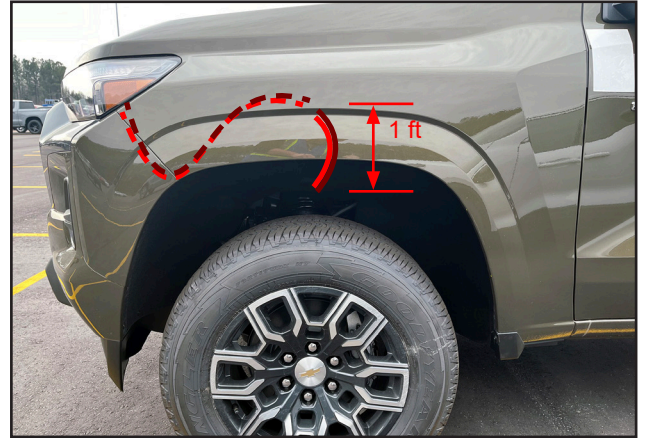


6

Remove (2) factory screws with a T-15 Torx bit screwdriver. Save screws for reinstallation.



7

Remove (2) screws and (2) plastic fasteners. Remove and discard rock guard.

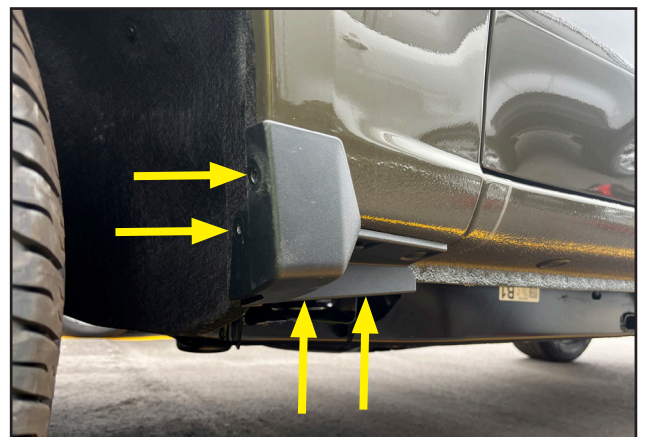



## Chevrolet Fender Flares

### Front Flare Installation Procedures (Driver's Side):

8


Hold flare to vehicle and mark (2) flare hole locations with a grease pencil. Set flare aside.



9

Wrap a Black Foam Tab around the wheel well sheet metal, centered over the mark made in Step 8.

Install a Dacromet "S" Spring Clip over the Black Tab.

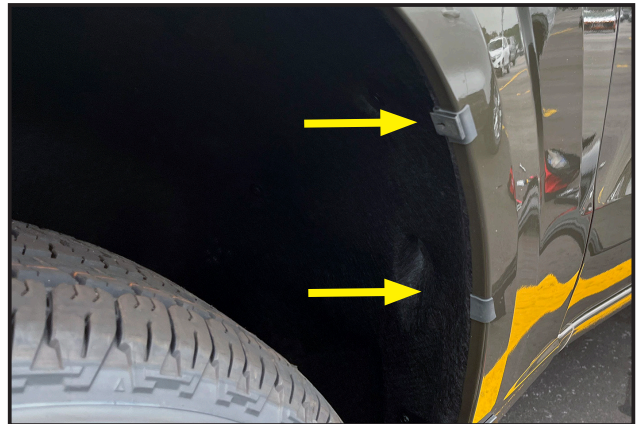

10

Verify presence of #10 U-clip on inner brackets.




## Chevrolet Fender Flares

11

Line up the holes in the inner bracket with the (2) uppermost factory holes. *NOTE: Both inner brackets are universal.*

Using a T-15 torx, reinstall the factory screws through the inner bracket.

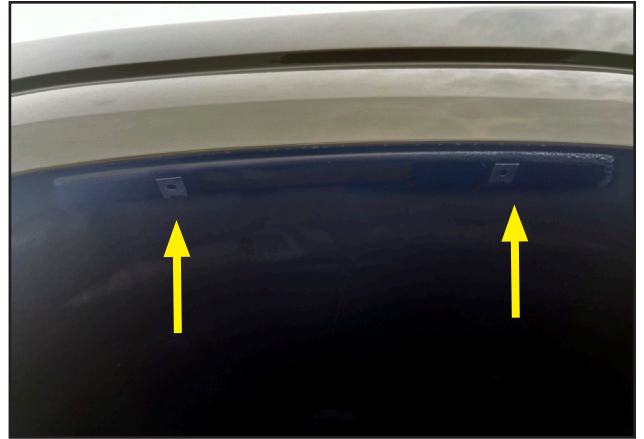

12


Using an alcohol pad, clean the front of the fender flare area that is indicated.



13

Peel back 2" of red tape liner from front fender extension, and place on vehicle as shown. *NOTE: Align upper part with fascia and bumper seam.*

Once in place, remove remaining tape liner by pulling on free ends. Apply firm pressure along tape edge to ensure proper adhesion of part to fender.

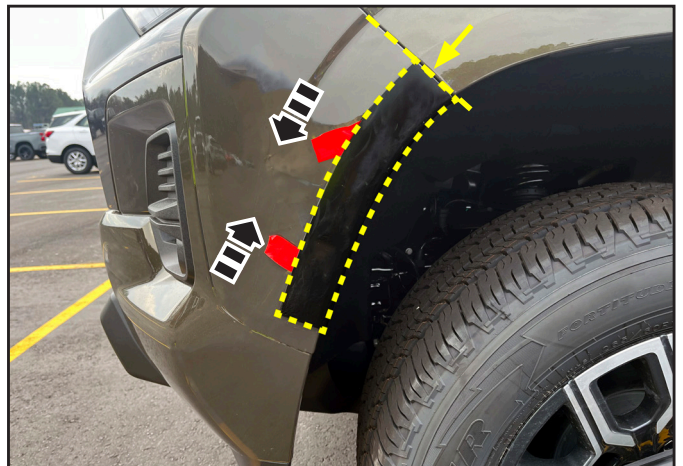



## Chevrolet Fender Flares

14

A) Before final installation of the flare, connect the marker light to the connection wire using two Butt Connectors. Connect black to red and white to brown. Reference Step 4 image.

B) Properly heat shrink the connection.

Position flare on fender, pressing inward on the flare, line up the flare mounting holes with the mounting clips on the inner bracket. Install (2) SW1-0058 Phillips Head screws through the flare and into the clips on the inner piece, and tighten.



15

Hold flare to fender, re-install (1) factory screw into clip installed in Step 6 using sockets and wrench.



16

Install (2) SW1-0058 screws and (2) SW1-0050 screw. Tighten all screws

Tuck the exposed wiring up between the lower flange of the flare and the fender so that no wiring is exposed. Use Wire Stays as appropriate to help manage wires.

Completed front flare installation.



## Chevrolet Fender Flares

### Rear Flare Installation Procedures (Driver's Side):

17

Remove and discard factory mudflap in front and behind of wheel well opening. Retain screws for reinstallation.



18

Clean the lower panel behind the wheel well with an alcohol pad.



19

Hold flare to vehicle and mark (4) flare hole locations with a grease pencil.





## Chevrolet Fender Flares

20

Wrap a Black Foam Tab around the wheel well sheet metal, centered over the mark made in Step 16.

Install a Long "U" Clip Magni 565 over the Black Foam Tab.



21

A) Before final installation of the flare, connect the marker light to the connection wire using two Butt Connectors. Connect black to red and white to brown. Reference Step 4 image.

B) Properly heat shrink the connection.

Press flares firmly onto the vehicle. Align with holes. Install (4) SW1-0058 screws.



22

Peel back 2" of red tape liner from front fender extension, and place on vehicle as shown. Once in place, remove remaining tape liner by pulling on free ends. Apply firm pressure along tape edge to ensure proper adhesion of part to fender.

Install (1) RV1-P0009 fastener.



## Chevrolet Fender Flares

23

Reinstall (4) factory screws and tighten.

Tuck the exposed wiring up between the lower flange of the flare and the fender so that no wiring is exposed. Use Wire Stays as appropriate to help manage wires.

Completed rear flare installation.



24

Using supplied Edge Trim Tool, seat edge trim against vehicle by hooking curved end under edge trim at one end of flare. Next, slide around outer edge of flare to the other end.



25

Using flat end of supplied Edge Trim Tool, seat edge trim against flare by inserting straight end between edge trim and flare at one end. Next, slide around entire edge to the other end.



## Chevrolet Fender Flares

---

### Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.



The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.

---

### Congratulations!

We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.

[www.huskyliners.com](http://www.huskyliners.com)

Phone: 800-344-8759

Email: [customerservice@huskyliners.com](mailto:customerservice@huskyliners.com)

The Husky Liners logo, featuring the word "HUSKY" in a large, bold, italicized sans-serif font, with a registered trademark symbol (®) to its upper right. Below "HUSKY" is a horizontal line, and under that line is the word "LINERS" in a bold, sans-serif font.