

IAG I-Line 2pc Window Switch Panel Cover Kit Gloss Carbon for 2021+ Ford Bronco



IAG-ACC-F3090 IAG I-Line 2pc Window Switch Panel Cover Kit Gloss Carbon for 2021+ Ford Bronco

Part#

IAG-ACC-F3090

Congratulations on the purchase of your IAG I-Line 2pc Window Switch Panel Cover Kit Gloss Carbon, and thank you for choosing IAG Off Road. These instructions are intended for users with basic mechanical skills. Professional installation is not required. The average installation time is approximately 5-10 minutes.

Video instructions can be found at the link below.

<https://youtu.be/3P5yF5gmfxo>

Step 1/17



Step 2/17

IAG-ACC-F3090 IAG I-Line 2pc Window Switch Panel Cover Kit Gloss Carbon for 2021+ Ford Bronco

Part# IAG-ACC-F3090

Tools Required For Installation:

Clean Rag

Step 3/17

Numbered annotations (2)

- 1** Front Carbon Cover
- 2** Rear Carbon Cover






Step 4/17

Numbered annotations (1)

- 1 Locate front switch pael

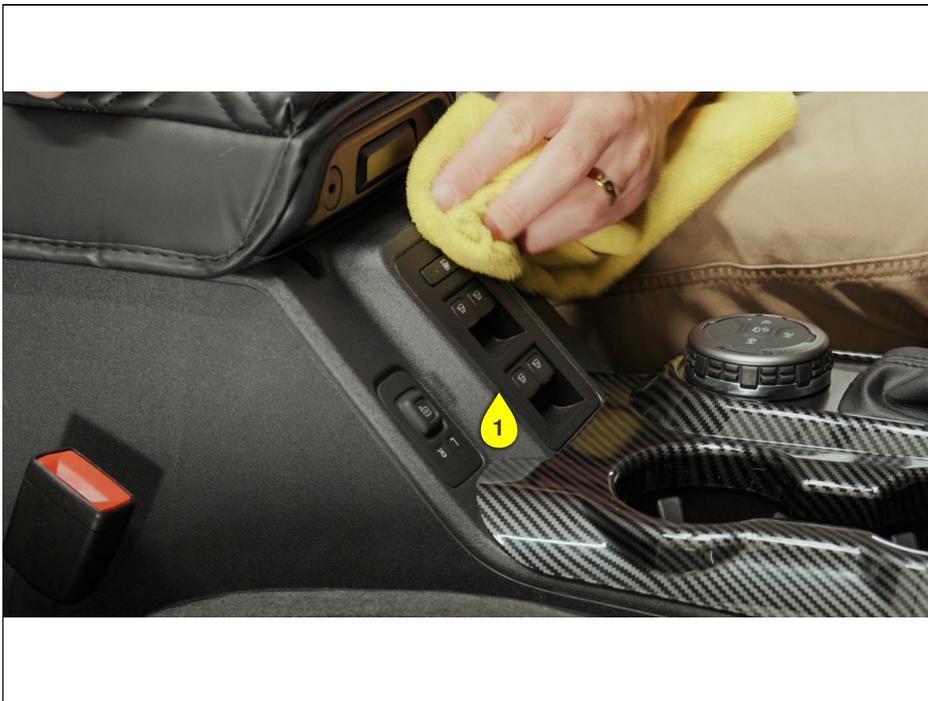

Step 5/17

Numbered annotations (1)

- 1 Wipe surface with a clean rag

Step 6/17



Numbered annotations (1)

- 1 Use adhesion promoter on the surface

Step 7/17



Numbered annotations (1)


- 1 Peel the backing of the two sided tape



Step 8/17

Numbered annotations (1)

- 1 Carefully align with the switch panel

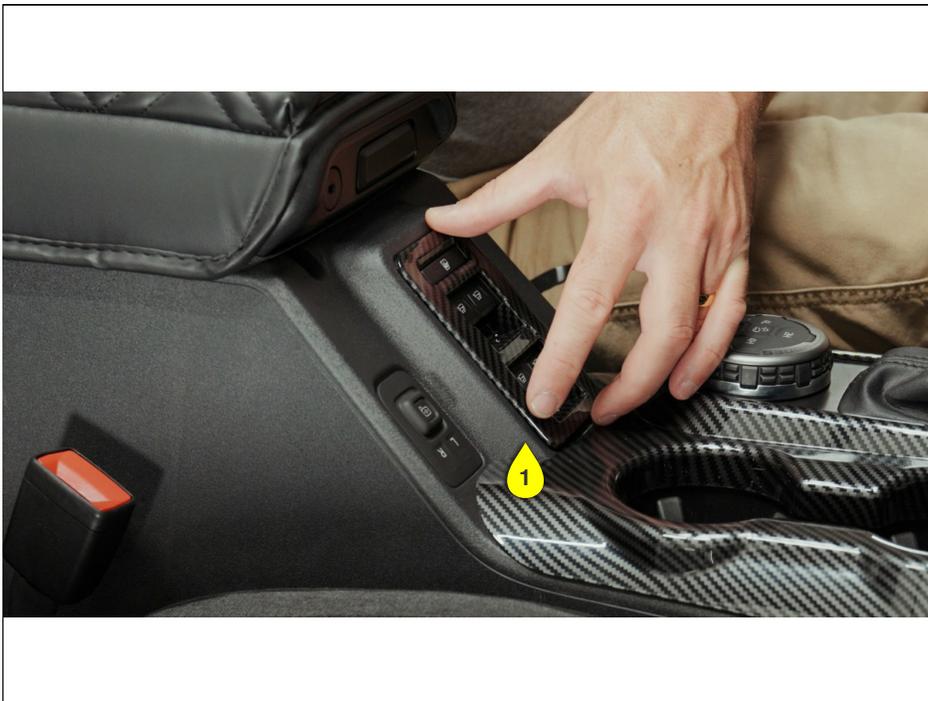

Step 9/17

Numbered annotations (1)


- 1 Press firmly to ensure adhesion



Step 10/17

Numbered annotations (1)

- 1 Finished front cover

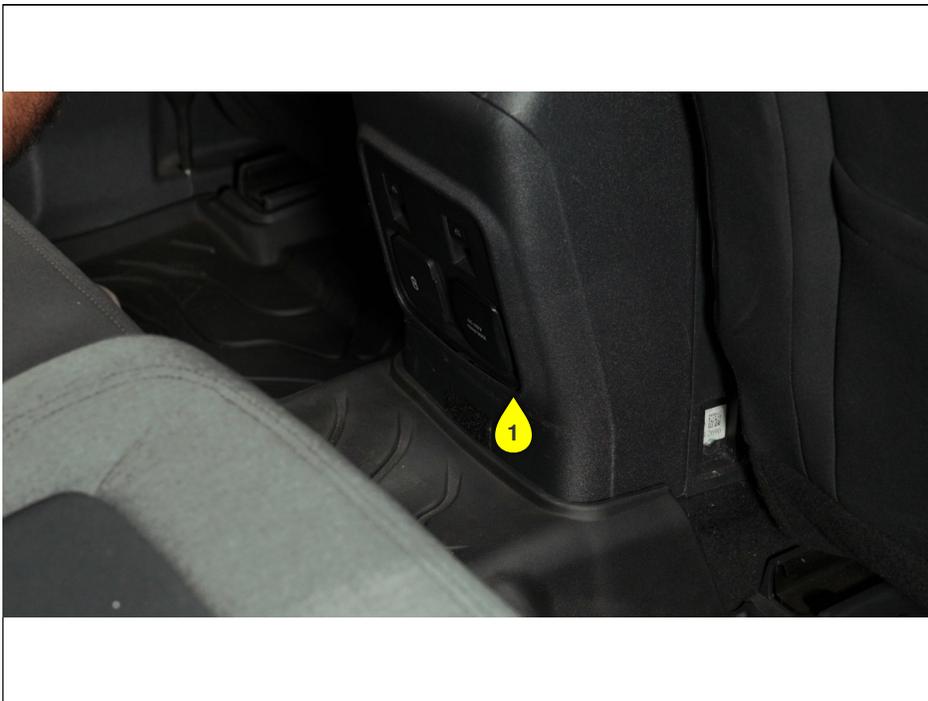

Step 11/17

Numbered annotations (1)

- 1 Locate rear switch panel

Step 12/17

Numbered annotations (1)

- 1 Wipe surface with a clean rag



Step 13/17

Numbered annotations (1)

- 1 Use adhesive promoter on the surface of the panel



Step 14/17



Numbered annotations (1)

- 1 Peel back the two sided tape

Step 15/17



Numbered annotations (1)

- 1 Line up your cover with the panel

Step 16/17



Numbered annotations (1)

- 1 Press firmly to ensure adherence has occurred

Step 17/17



Numbered annotations (1)

- 1 Finished rear panel