

IAG I-Line Tailgate Table with Integrated Cutting Board for 2021+ Ford Bronco



IAG-ACC-F3142 - IAG I-Line Tailgate Table with Integrated Cutting Board 2021+ Ford Bronco

Part# IAG-ACC-F3142

Congratulations on the purchase of your IAG I-Line Tailgate Table with Integrated Cutting Board, and thank you for choosing IAG Off-Road. These instructions are intended for users with basic mechanical skills. Professional installation is not required. The average installation time is 20-25 minutes.

Video Instructions can be found here:

<https://youtu.be/UaqPQitGOpKc>

Step 1/24



IAG-ACC-F3142 - IAG I-Line Tailgate Table with Integrated Cutting Board 2021+ Ford Bronco

Part# IAG-ACC-F3142

Tools Required For Installation:

1/4" Drive Ratchet
8MM Socket
10MM Socket
10MM Wrench

Step 2/24



IAG-ACC-F3142 - IAG I-Line Tailgate Table with Integrated Cutting Board 2021+ Ford Bronco

**NOT ALL HARDWARE INCLUDED WILL BE USED. EXTRA
HARDWARE IS PROVIDED IN CASE OF LOSS AND FOR
OTHER APPLICATIONS.**

Step 3/24

Step 4/24

Numbered annotations (5)

- 1 Tailgate Table with Integrated Cutting Board
- 2 M4 Allen bolts
- 3 M4 Socket Nuts
- 4 Black Washer
- 5 Aluminum Washer



Step 5/24

Numbered annotations (5)

- 1 8MM & 10MM Wrenches
- 2 T-Bolts and T-Studs
- 3 IAG Logo Color Plates
- 4 Black 8MM Nuts
- 5 10MM Nuts






Step 6/24

Numbered annotations (1)

- 1 Remove the rear tailgate cover by pulling straight toward you to release the clips.

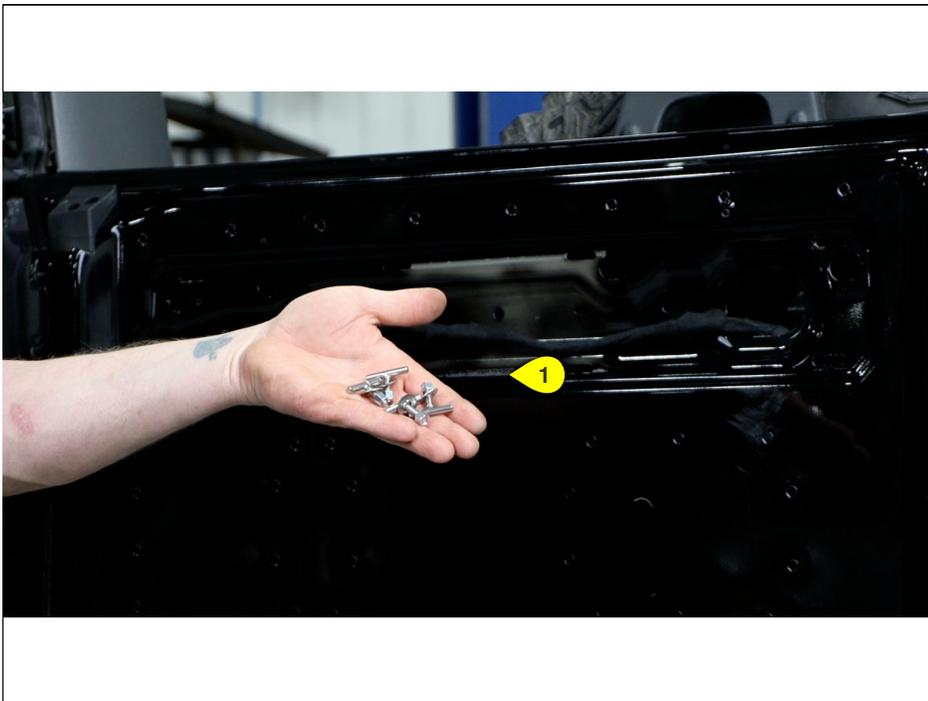


Step 7/24

Numbered annotations (1)

- 1 Locate your supplied T-Bolts, aluminum washers and 8MM socket nuts

Step 8/24

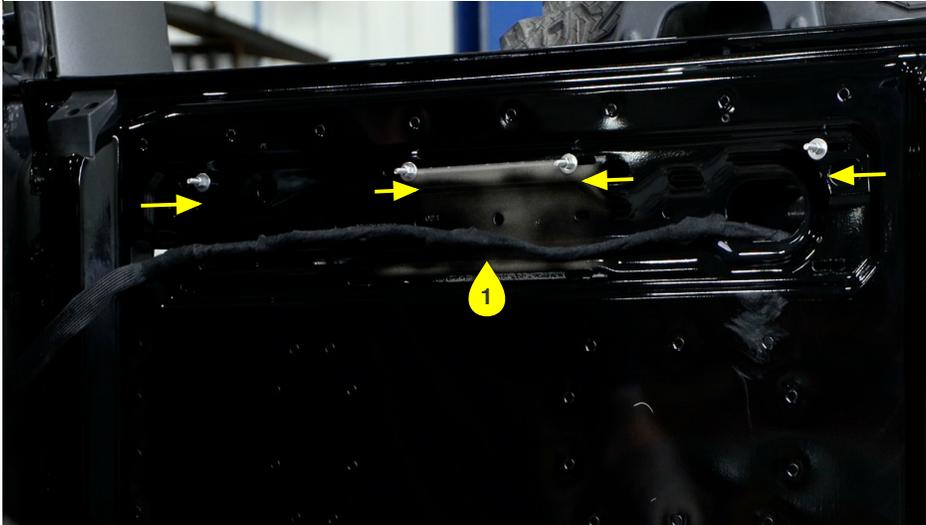

Numbered annotations (1)

- 1 Install T-Bolts in the upper slots with all bolts aligned toward the center and tighten with supplied wrench or 8mm socket/wrench


Step 9/24



Numbered annotations (1)

- 1 Locate your T-Studs, aluminum washers and 10MM socket nuts


Step 10/24

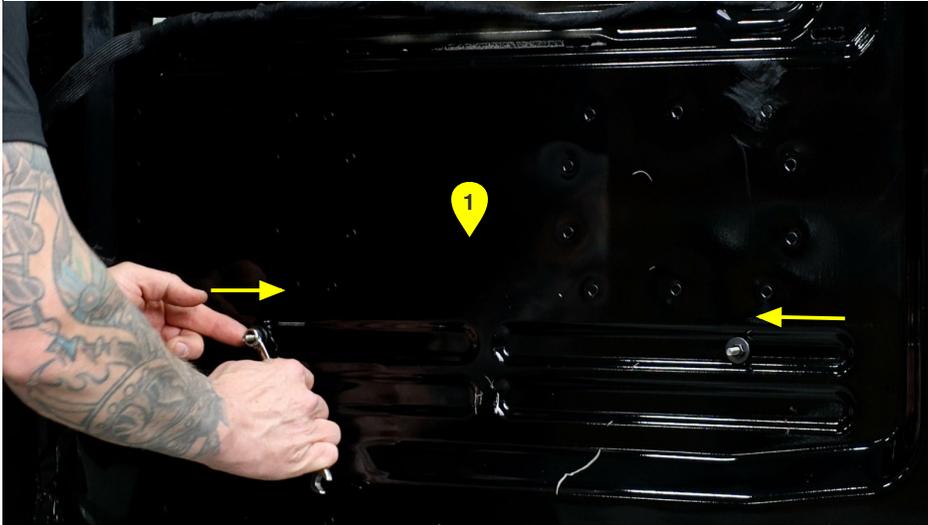

Numbered annotations (1)

- 1 Install T-studs into lower slots towards center tighten with wrench provided or 10mm socket/wrench

Step 11/24

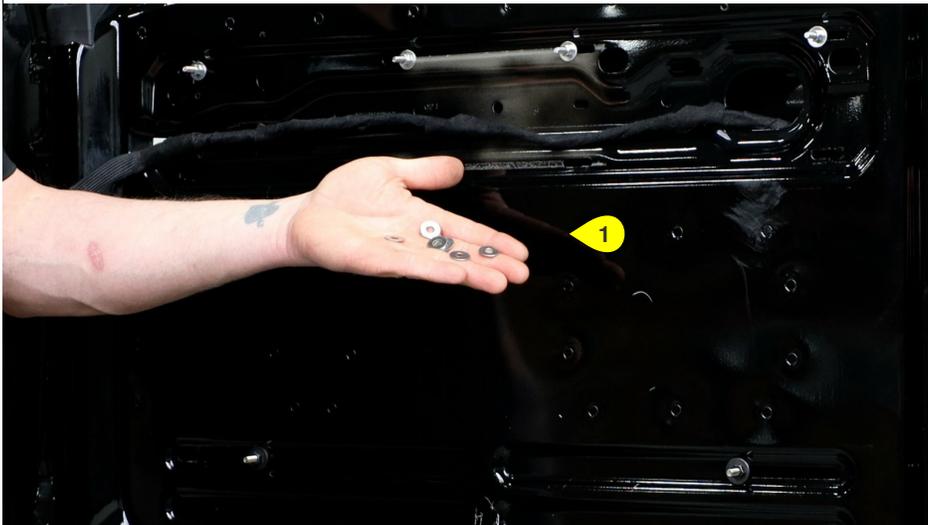

Numbered annotations (1)


- 1 Locate your remaining aluminum washers



Step 12/24

Numbered annotations (1)

- 1 Install washers onto all T ends

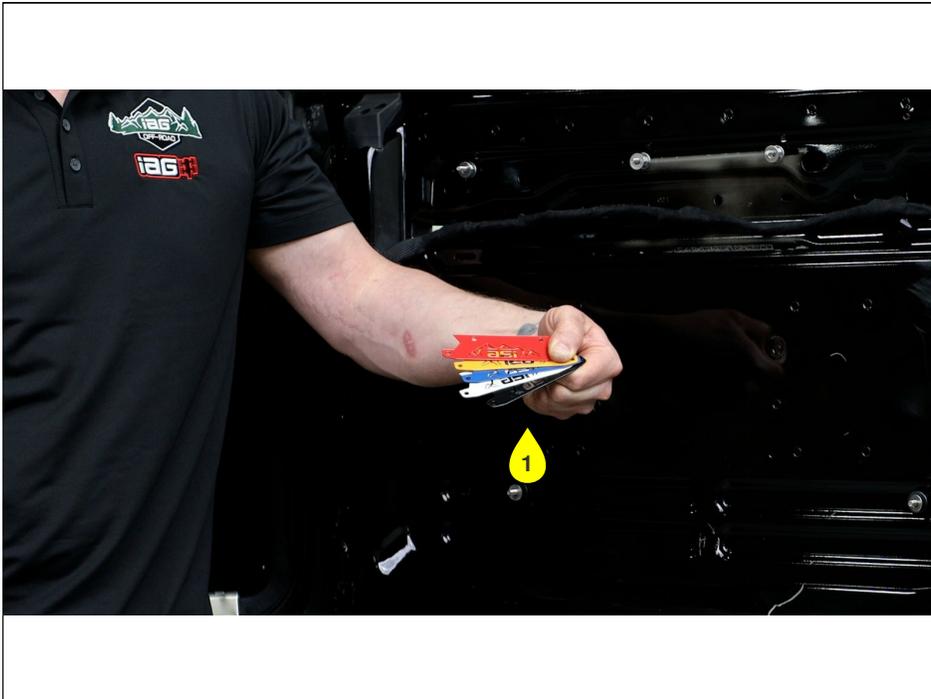


Step 13/24

Numbered annotations (1)

- 1 Locate and choose IAG logo color plate


Step 14/24

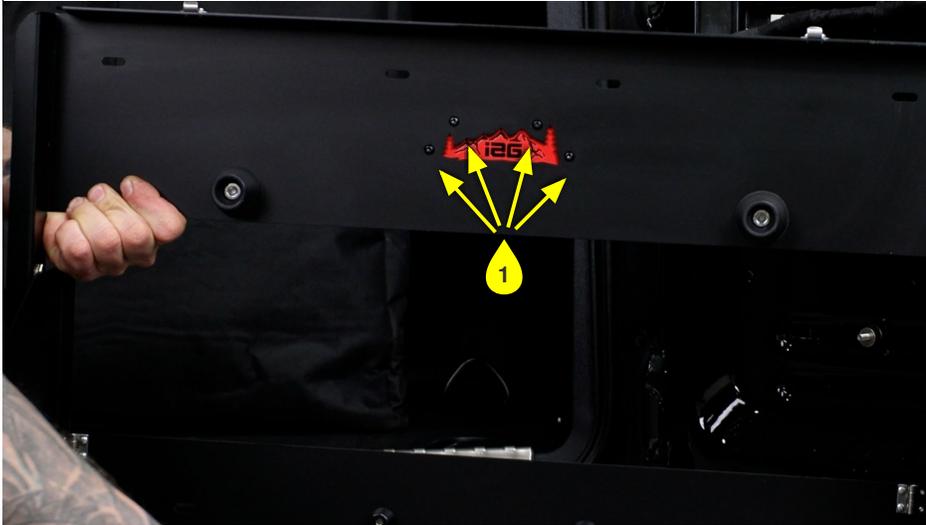

Numbered annotations (1)

- 1 Open your Tailgate Table and install IAG logo color plate to the back of your Tailgate table using (4) of the supplied M4 bolts and (4) M4 nuts

Step 15/24

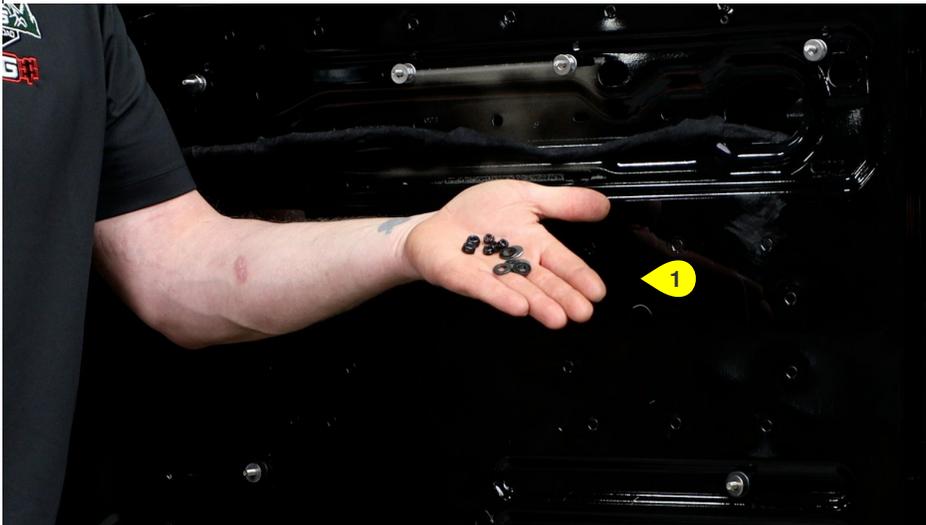

Numbered annotations (1)

- 1 Locate your black mounting washers, 2 aluminum washers, and nuts and keep them handy.



Step 16/24

Numbered annotations (1)

- 1 Place your open Tailgate Table onto the mounting hardware



Step 17/24

Numbered annotations (1)

- 1 Place and fit a washer and nut onto each mounting bolt and hand tighten

Step 18/24



Numbered annotations (1)

- 1 Place and fit an aluminum washer and nut onto each mounting bolt and hand tighten

Step 19/24



Numbered annotations (1)

- 1 Tighten each nut using provided wrench or 8MM socket/wrench


Step 20/24



Numbered annotations (1)

- 1 Tighten each lower 10MM nut with provided wrench or 10MM socket/wrench

Step 21/24

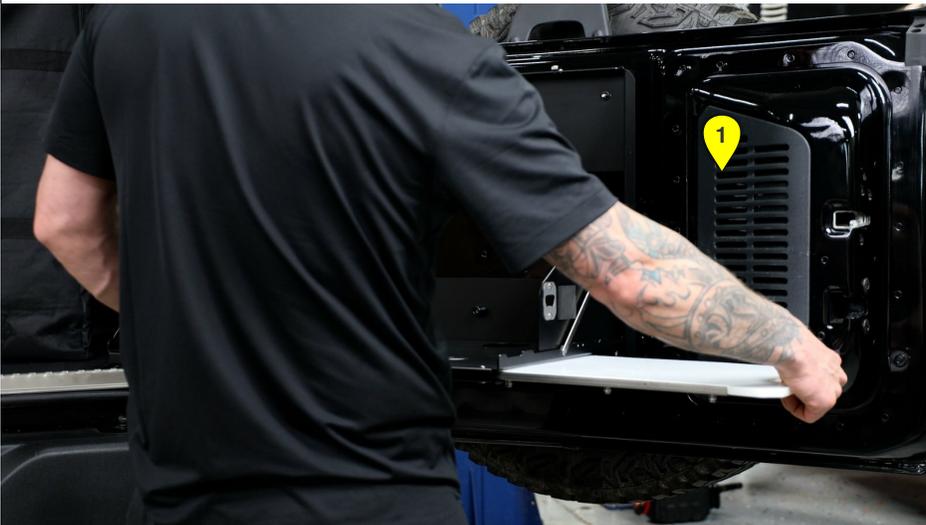


Numbered annotations (1)

- 1 Check fitment by opening and closing cutting board



Step 22/24

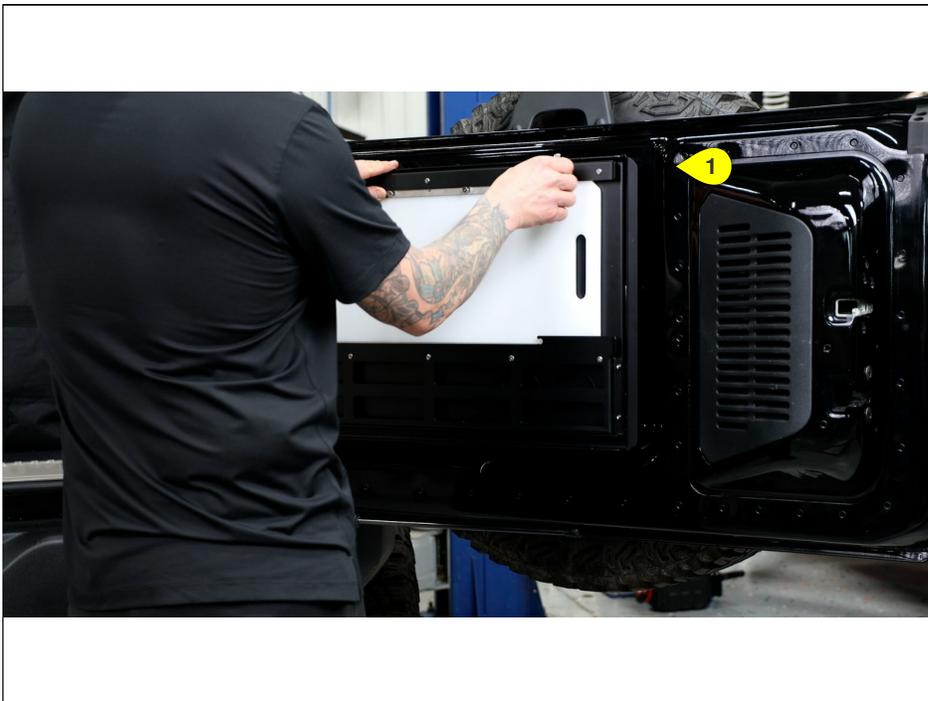

Step 23/24

Numbered annotations (1)

- 1 Check fitment by closing and latching Tailgate Table

If you have any questions, please reach out to support@iagoffroad.com



Step 24/24