

## ***IAG I-Line Exterior Door Ding Protector for 2021+ Ford Bronco 4-Door***



Step 1/16

### **IAG-BDY-F3002 - IAG I-Line Door Ding Protector Anti-Scratch for 2021+ FORD BRONCO**

**Part# IAG-BDY-F3002**

Congratulations on the purchase of your IAG I-Line Door Ding Protector, and thank you for choosing IAG Performance. These instructions are intended for users with basic mechanical skills. Professional installation is not required. The average installation time is 20 minutes.

**Step 2/16**

**IAG-BDY-F3002 - IAG I-Line Door Ding Protector Anti-Scratch for 2021+ FORD BRONCO**

**Part# IAG-BDY-F3002**

**Tools Required For Installation:**

Cleaning Spray

Rag

Adhesion Promotor Pack (Included)


Painter's Tape (Recommended)

**Step 3/16**

**IAG-BDY-F3002 - IAG I-Line Door Ding Protector Anti-Scratch for 2021+ FORD BRONCO**

**A CLEAN DRY SURFACE IS NECESSARY FOR PROPER ADHESION. INSTALLATION BELOW 60°F IS NOT RECOMMENDED. PROPER ORIENTATION IS NECESSARY TO ENSURE CORRECT FITMENT. IF THE FRONT DOOR DING PROTECTOR APPEARS TO BE TOO LONG, CHECK THAT ORIENTATION IS CORRECT BEFORE PROCEEDING.**

### Step 4/16

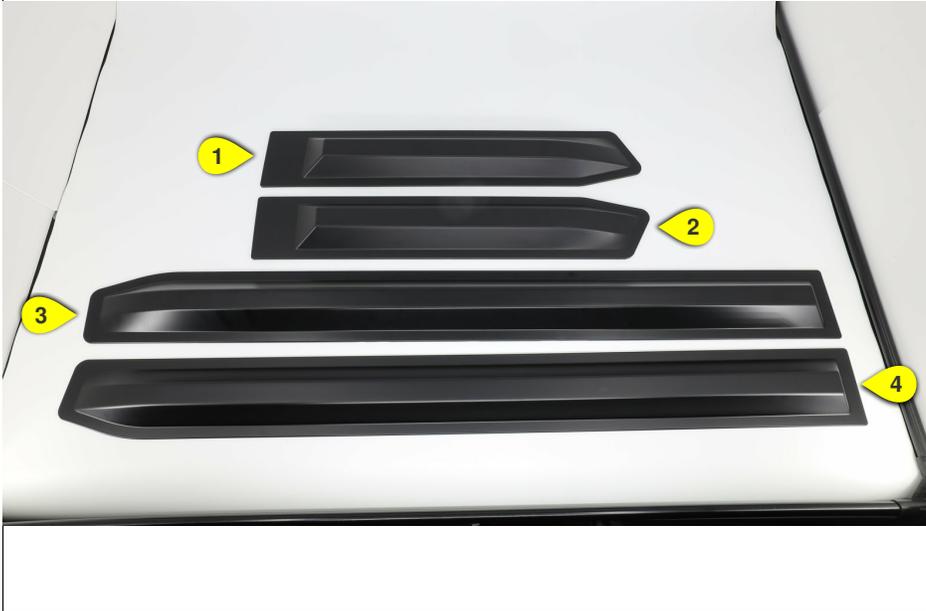

Numbered annotations (4)


- 1 Rear Passenger Side Protector (Labeled RR on backside)
- 2 Rear Driver Side Protector (Labeled LR on backside)
- 3 Front Driver Side Protector (Labeled FR on backside)
- 4 Front Passenger Side Protector (Labeled FL on backside)

### Step 5/16



Numbered annotations (1)


- 1 Double Sided Adhesive

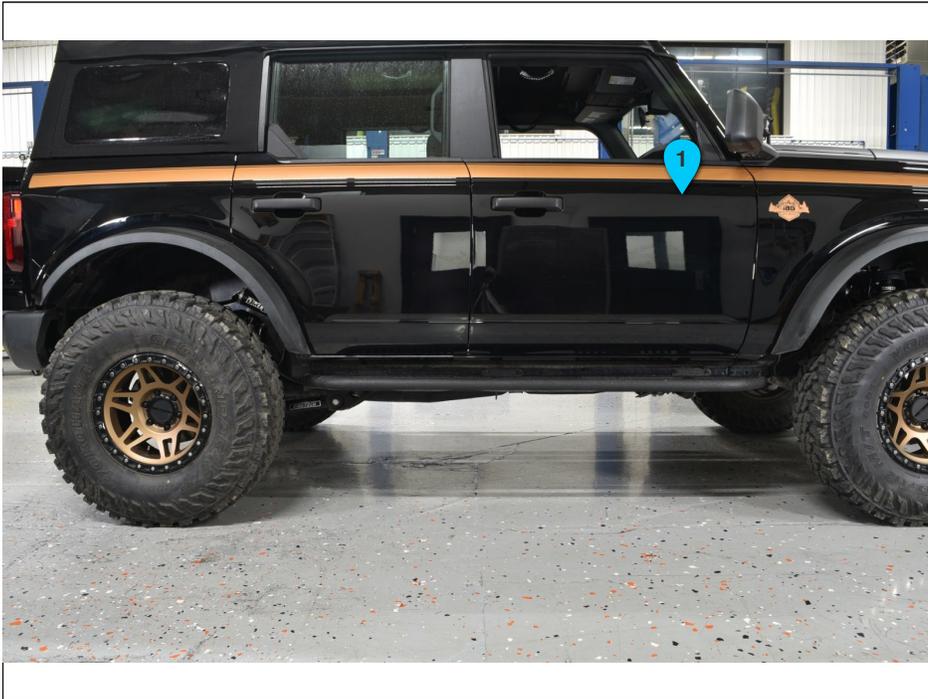

### Step 6/16

Numbered annotations (1)


- 1 Thoroughly clean both front and rear passenger side doors using a microfiber rag and cleaning spray

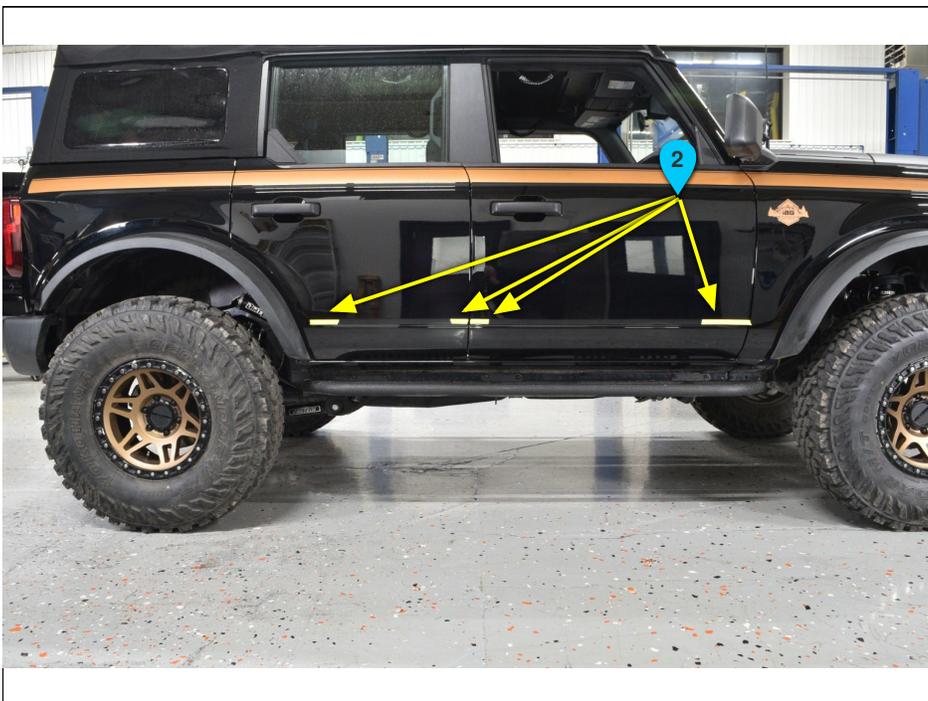

### Step 7/16

Numbered annotations (1)


- 2 Place painter's tape directly on the body line at the front and rear of each door. This will help align the door ding protectors during installation

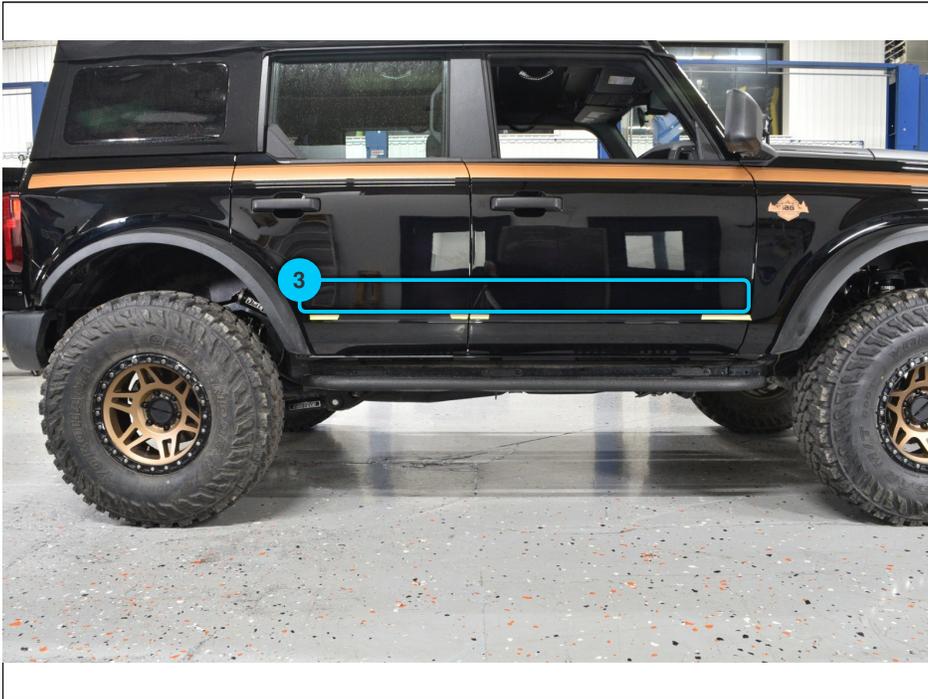

### Step 8/16

Numbered annotations (1)


- 3 Wipe outlined area with included adhesion promotor wipe

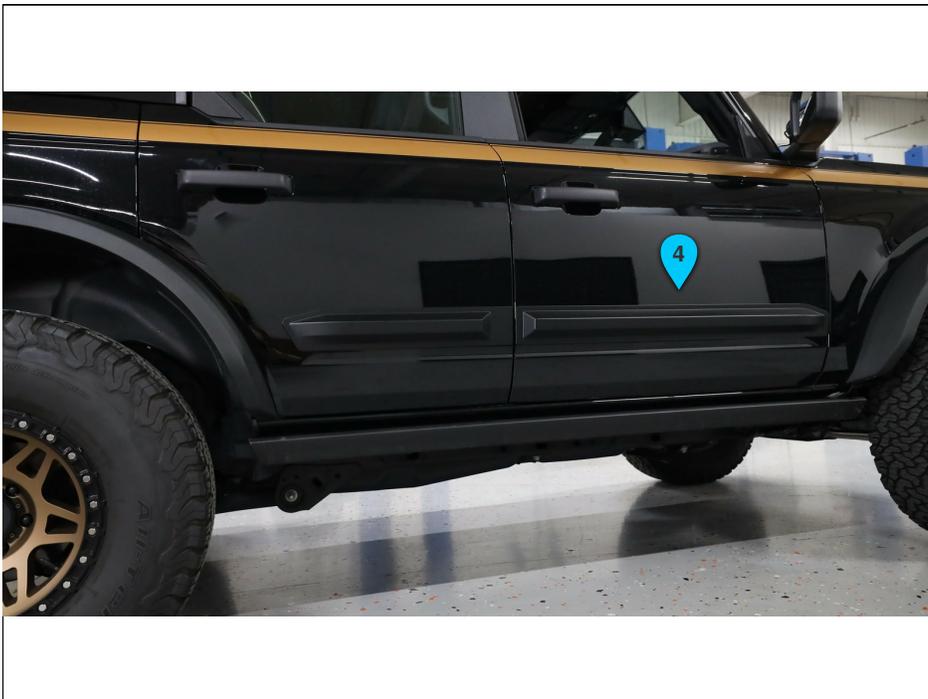

### Step 9/16

Numbered annotations (1)


- 4 Locate the front passenger door protector (labeled FR). Remove the red backing from the double-sided adhesive. Apply the front passenger door protector (labeled FR) with the slanted end pointing towards the front of the vehicle just above the previously applied painter's tape. Push firmly on protector for 30 seconds to ensure good adhesion.

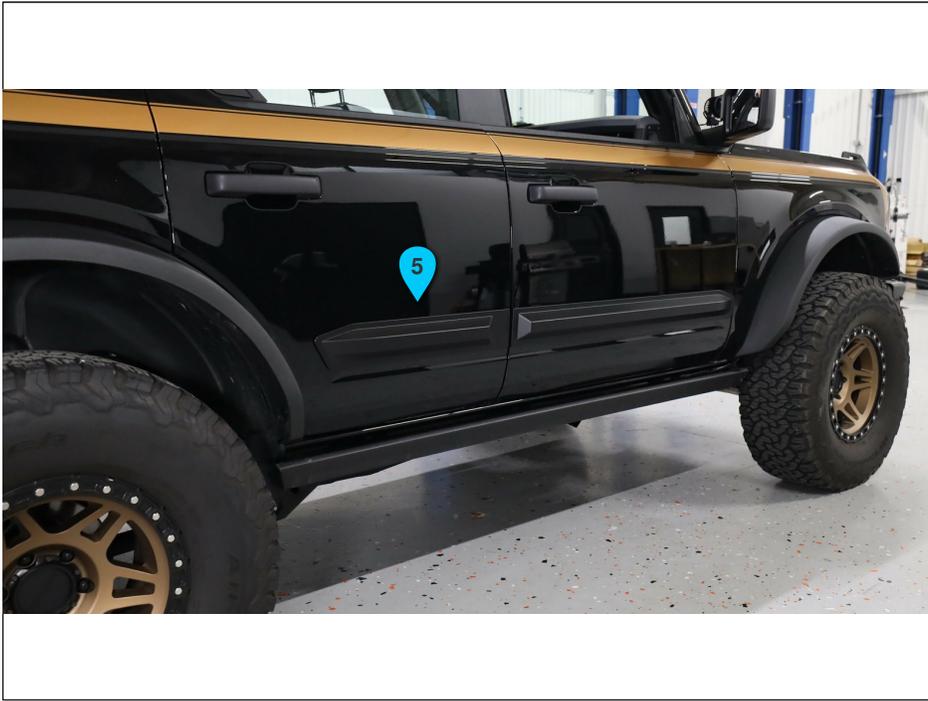

### Step 10/16

Numbered annotations (1)


- 5 Locate the rear passenger door protector (labeled RR). Remove the red backing from the double-sided adhesive. Apply the rear passenger door protector (labeled RR) with the slanted end pointing towards the rear of the vehicle just above the previously applied painter's tape. Push firmly on protector for 30 seconds to ensure good adhesion.

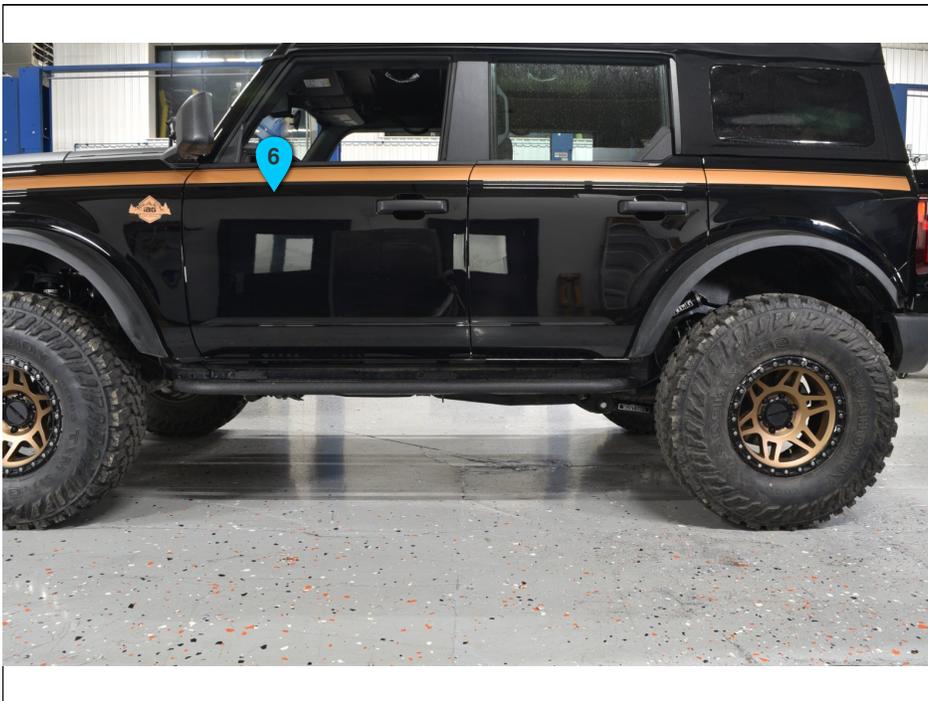

### Step 11/16

Numbered annotations (1)

- 6 Thoroughly clean both front and rear driver side doors using a microfiber rag and cleaning spray.

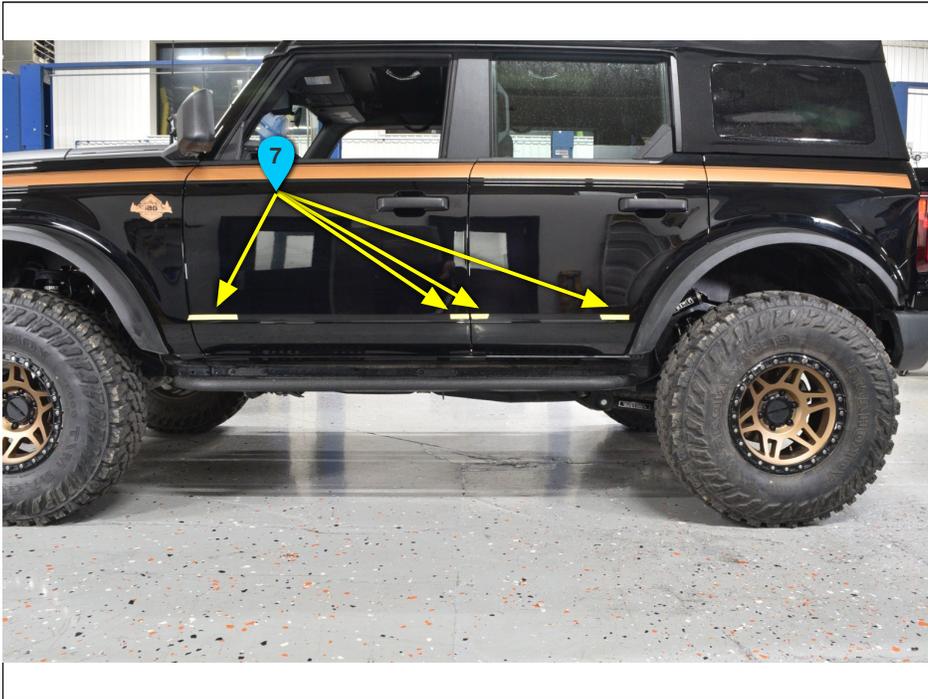

## Step 12/16

Numbered annotations (1)


- 7 Place painter's tape directly on the body line at the front and rear of each door. This will help align the door ding protectors during installation



## Step 13/16

Numbered annotations (1)


- 8 Wipe outlined area with included adhesive promotor wipe

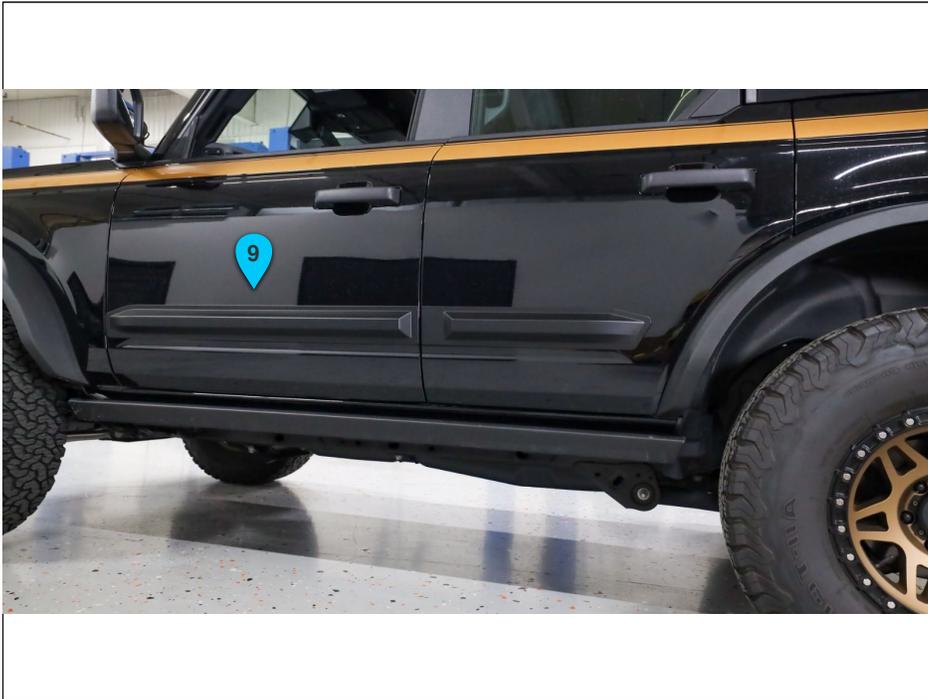

### Step 14/16

#### Numbered annotations (1)

- 9 Locate the front driver door protector (labeled FL). Remove the red backing from the double-sided adhesive. Apply the front driver door protector (labeled FL) with the slanted end pointing towards the front of the vehicle just above the previously applied painter's tape. Push firmly on protector for 30 seconds to ensure good adhesion.

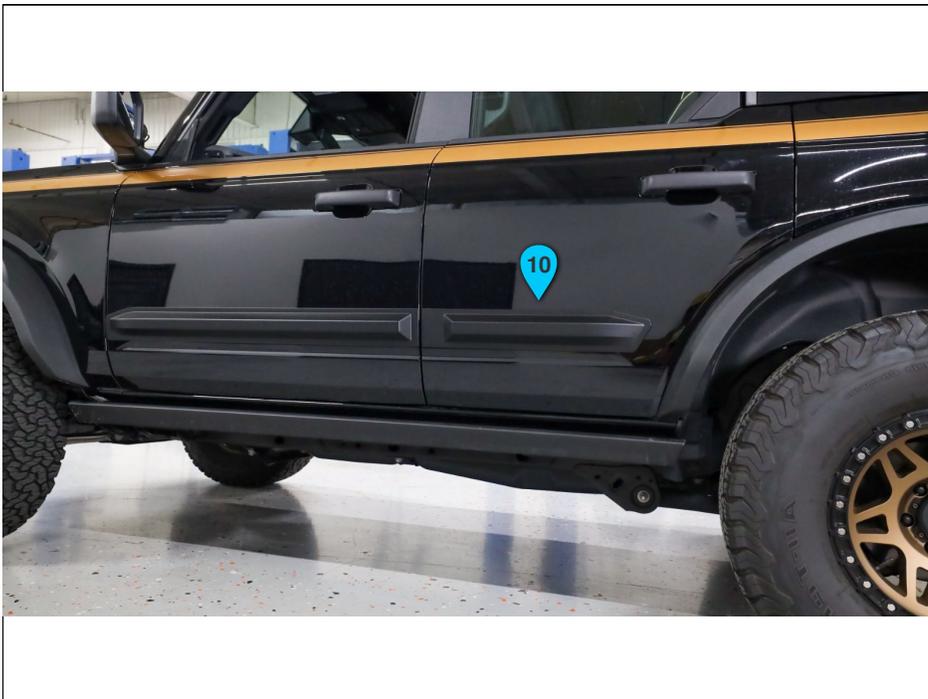

### Step 15/16

#### Numbered annotations (1)

- 10 Locate the rear driver door protector (labeled RL). Remove the red backing from the double-sided adhesive. Apply the rear driver door protector (labeled RL) with the slanted end pointing towards the rear of the vehicle just above the previously applied painter's tape. Push firmly on protector for 30 seconds to ensure good adhesion.

## Step 16/16

Numbered annotations (1)

- 11 Remove painter's tape from all doors. Installation has been completed.

