



**IAG I-Line 4pc Rain Deflector  
Visor System For 2021+ Ford  
Bronco Four Door**


**Part#: IAG-BDY-F3094**



**Congratulations on the purchase of your IAG I-Line 4 Piece Rain Deflector Visor system, and thank you for choosing IAG Off Road! These instructions are intended for users with basic mechanical skills. Professional installation is not required.**

**Product includes:**

- ① x2 Adhesive promotor
- ② x4 Rain deflector
  - 2 front door
  - 2 rear door

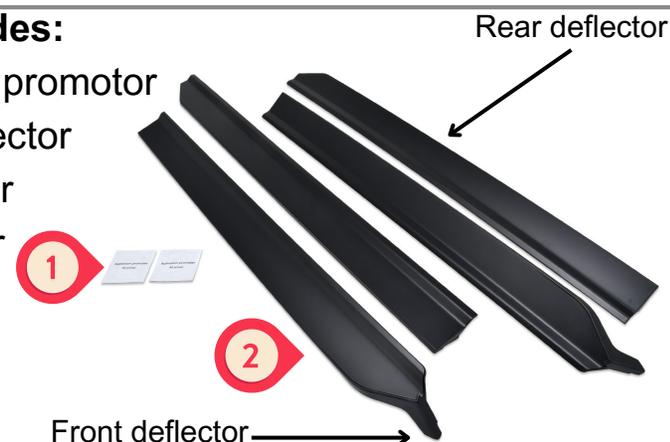

**Step 1/10:**

For **hard top**: remove front and middle panels.


For **soft top**: fold back.

**Step 2/10: Rear deflector**

Apply adhesion promotor. Wipe along upper window rail surface area from rear door to front door.



**Step 3/10:**  
Before install make sure rear of deflector fits in this channel.

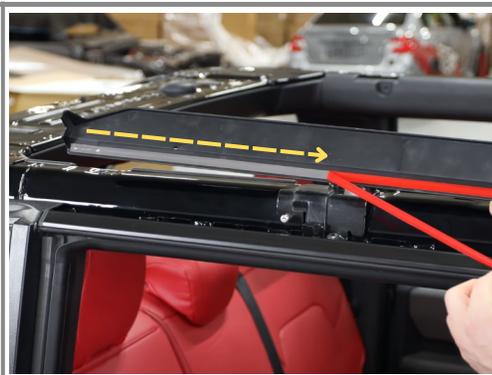

**Step 4/10:**  
Remove the tape backing.



**Step 9/10:**  
Remove the rest of the tape backing and press down thoroughly to adhere along front deflector.



**Step 10/10:**  
Repeat steps 2-10 for other side.



**Step 5/10:**  
Once the rear is in line with the channel press down thoroughly to adhere.



**Step 6/10: Front deflector**  
Starting from the rear of the deflector remove 75% of the tape backing.



**Step 7/10:**  
Place front deflector under weather stripping. **Do not let tape touch the paint.**



**Step 8/10:**  
Install the rear of the front deflector by bending the deflector (not letting tape touch) and click into front of rear deflector.



**If you have any questions about the installation or product please contact [support@iagoffroad.com](mailto:support@iagoffroad.com) or call 410-840-3555**