



U.S. BASED SUPPORT

HOURS: MONDAY - FRIDAY | 8AM - 5PM EST



1.410.840.3555



support@iagoffroad.com




VIDEO INSTRUCTIONS
[https://www.youtube.com](https://www.youtube.com/watch?v=-_YEntQYA_g)
[/watch?v=-_YEntQYA_g](https://www.youtube.com/watch?v=-_YEntQYA_g)



IAG Bronco Mud Flaps

For 2021+ Bronco

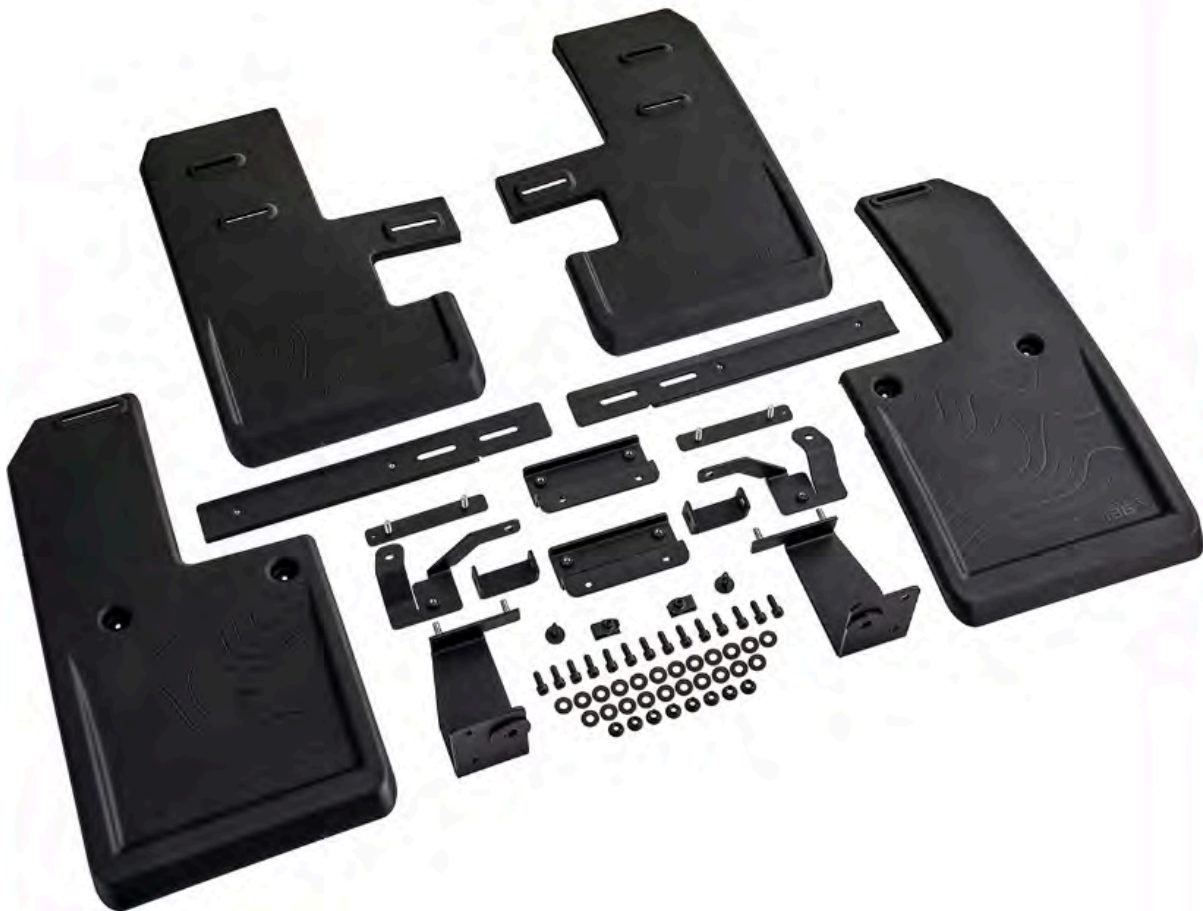



IAG-BDY-F1301 IAG Bronco Mud Flaps For 2021+ Bronco

Congratulations on the purchase of your IAG Bronco Mud Flaps, and thank you for choosing IAG Off Road! These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Installation video can be found on our website, or by using the following QR code.


Tools Needed:

- Socket or wrench sizes: 10mm, 13mm, 15mm, 3/8, 5mm Allen
- Pocket Screwdriver
- Small pry tool
- Razor blade


Scan or click QR code for
instruction video.



Install Video

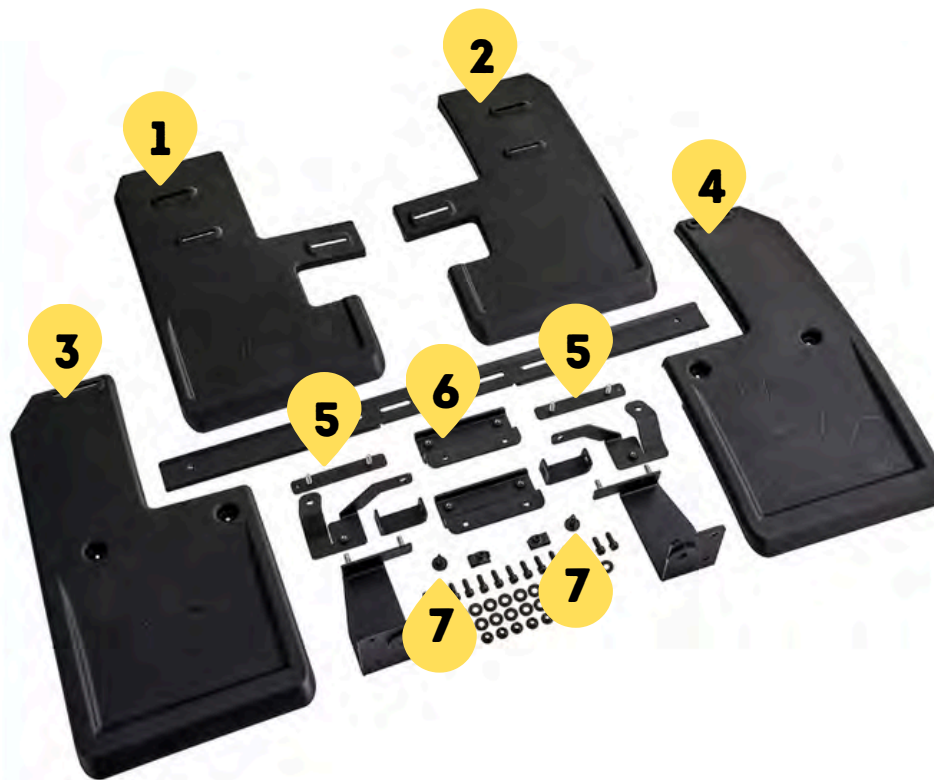

- 1** Left Front Mud Flap
- 2** Right Front Mud Flap
- 3** Left Rear Mud Flap
- 4** Right Rear Mud Flap
- 5** (X2) Front Inner Bracket
- 6** (X2) Front Outer Bracket
- 7** (X2) Push Clips

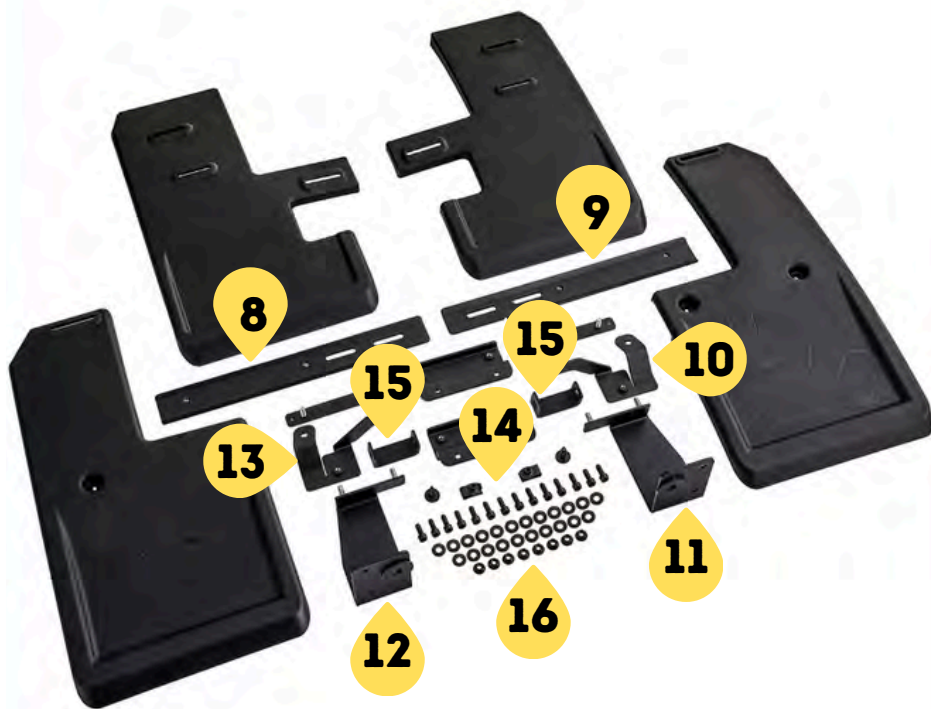

- 8** Rear Slider Bracket
(Passenger side)
- 9** Rear Slider Bracket
(Driver side)
- 10** Rear Upper Bracket
(Driver side)
- 11** Rear Lower Bracket
(Passenger side)
- 12** Rear Lower Bracket
(Driver side)
- 13** Rear Upper Bracket
(Passenger side)
- 14** (X2) Clip Nuts
- 15** (X2) Spacer Bracket
(Metal Bumper Only)
- 16** (X14) 5mm Allen bolts
(X8) 10mm nuts
(X22) Washers



Step 1

Remove the front fender flare from the drivers side.

Rotate the locking tabs on the inside of the fender flare 90° to disengage the tabs.



Step 1 pt. 2

Pull the fender flare away from the vehicle using even force, and set fender flare aside.



Step 2

Using a pry tool, remove the four lower push clips of the front fender liner.

Fold the fender liner aside.



Step 3

Prepare the Front Inner Bracket.

Install the bracket behind the fender with the studs facing out.

5



Step 4

Reinstall the fender liner, reuse one of the factory push clips as shown.

Step 5

Prepare the Front Outer Bracket and two 10mm nuts.

Install the bracket onto the studs. Use 10mm nuts and washers, then tighten.(10Nm)

6





Step 6

Reinstall the fender flare.

Rotate the locking tabs 90° to secure the flare.



Step 7

Prepare LF Mud Flap and two 5mm Allen Bolts.

Install Mud Flap onto the outer bracket, use Allen bolts and washers. Do not tighten.



Step 8

Prepare one of the provided push clips.

Install push clip into mudflap.





Step 9

Adjust Mud Flap to align with fender flare, then tighten the mudflap hardware. (10Nm)

Note: Check clearance between Mud Flap and OEM rock rail.

The rock rail may need loosened and adjusted if the Mud Flap makes contact.



Step 10

Remove the rear fender flare from the drivers side.

Rotate the locking tabs on the inside of the fender flare 90° to disengage the tabs.

Pull the fender flare away from the vehicle using even force.



Step 11

Remove shown 10mm bolt from the fender.



Step 12

Remove shown push clip from fender liner and fold fender liner aside.



Step 13

Install the clip nut onto the fender as shown.

Unfold the fender liner.

14



Step 14

Prepare the Rear Upper Bracket for the drivers side, and a 5mm Allen bolt.

10





Step 15


Install the bracket onto the fender.

Reinstall the factory 10mm bolt, and install the provided 5mm Allen bolt with a washer.

Tighten the bolts. (10Nm)


Plastic Frame Rear Bumper


For vehicles equipped with a plastic rear bumper, (15mm and 13mm bolt) **continue to Step 16 (Plastic Bumper)**.

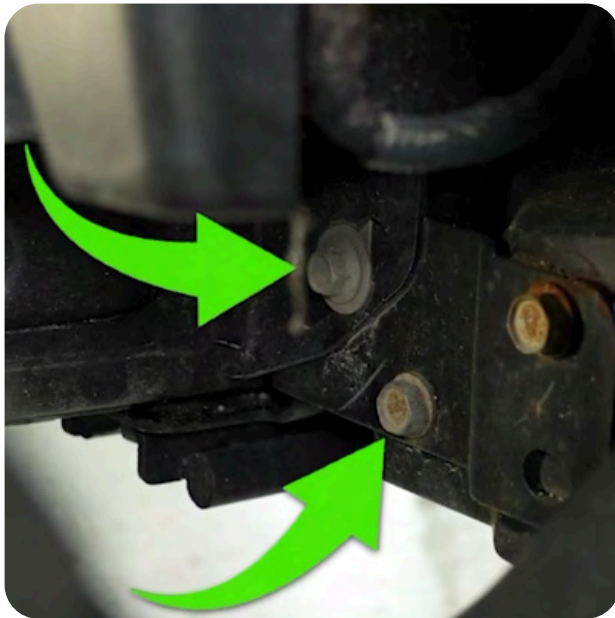

Metal Frame Rear Bumper

For vehicles equipped with a metal rear bumper, (two 13mm bolts) **skip to Step 17 (Metal Bumper)**.

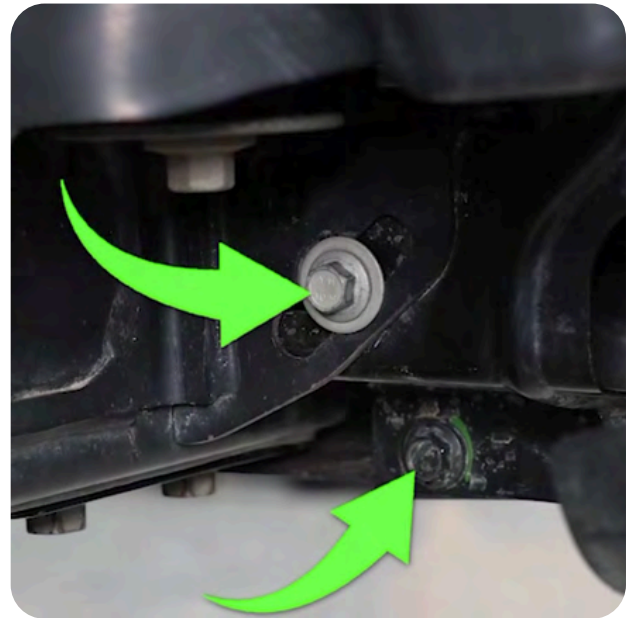

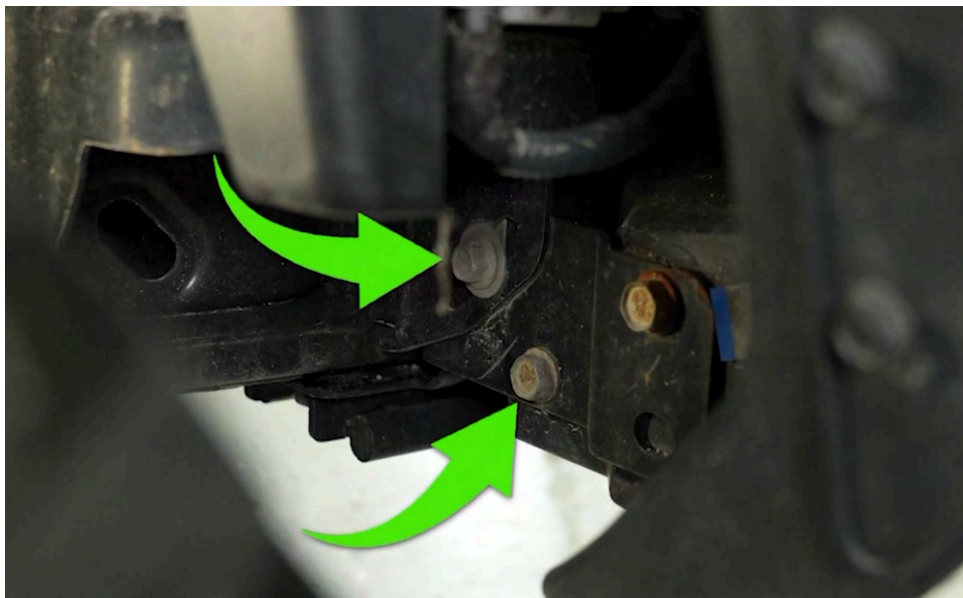

Step 16 (Plastic Bumper)

Remove the 15mm and 13mm bolts from the bumper.

Note: The threaded inserts in the bumper may come loose and spin in place.


If this happens, the bumper may need to be partially removed to re-insert the threads.



Step 16 pt. 2

Prepare the Rear Lower Bracket for the drivers side.

12

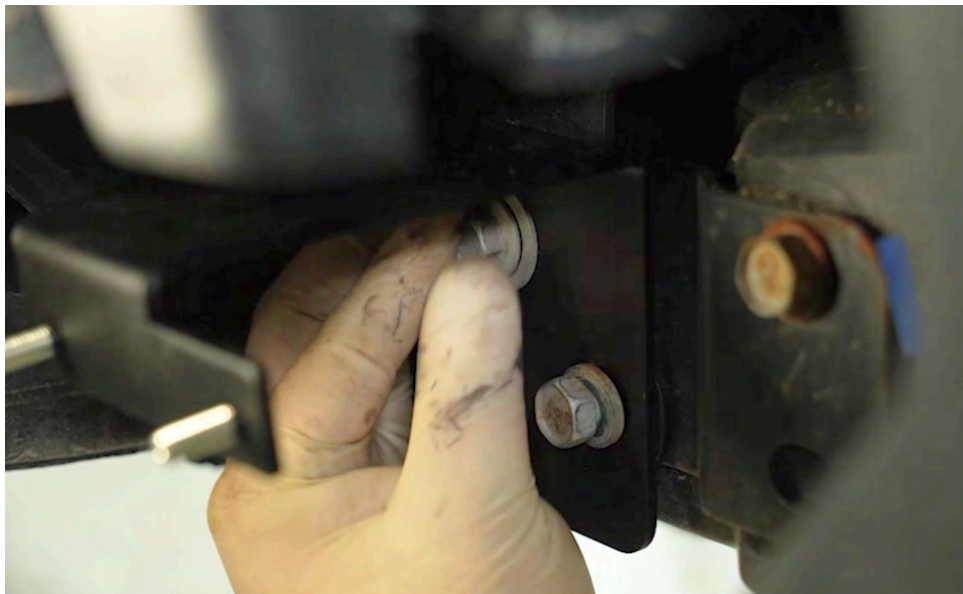


Step 16 pt. 3

Install the Lower Bracket onto the bumper, and reinstall factory bolts.

Tighten the bolts. (20Nm)

Skip to step 18.

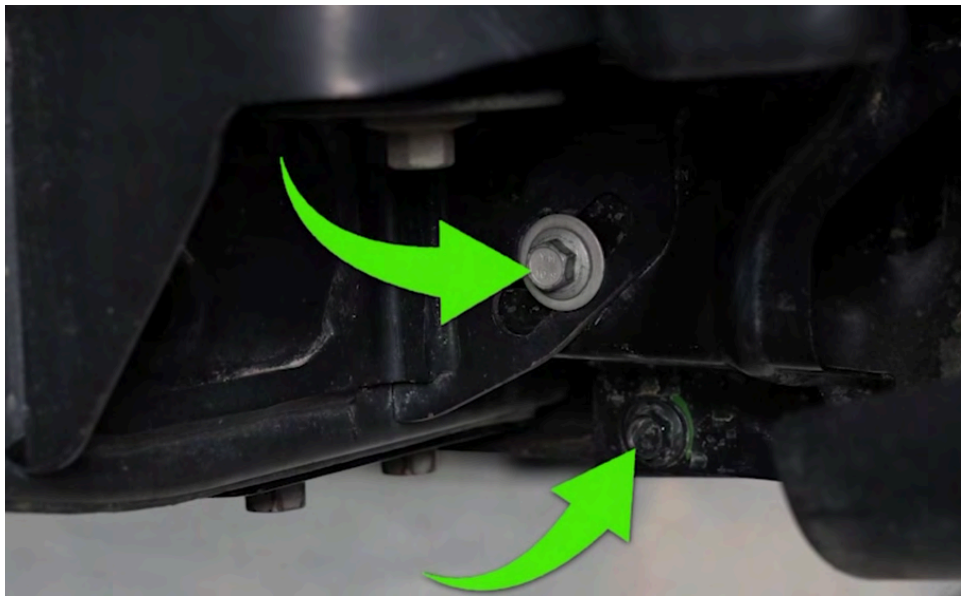

Step 17 (Metal Bumper)

Remove the two 13mm bolts from the bumper.



Step 17 pt. 2

Prepare the Rear Lower Bracket for the drivers side.

12



Step 17 pt. 3

Install the Lower Bracket onto the bumper, reinstall one of the factory 13mm bolts but do not tighten.




Step 17 pt. 4

Prepare the Spacer Bracket and a 5mm Allen bolt.

Install the Spacer Bracket onto the bumper, install the factory 13mm bolt, and the 5mm Allen Bolt with washer.

15

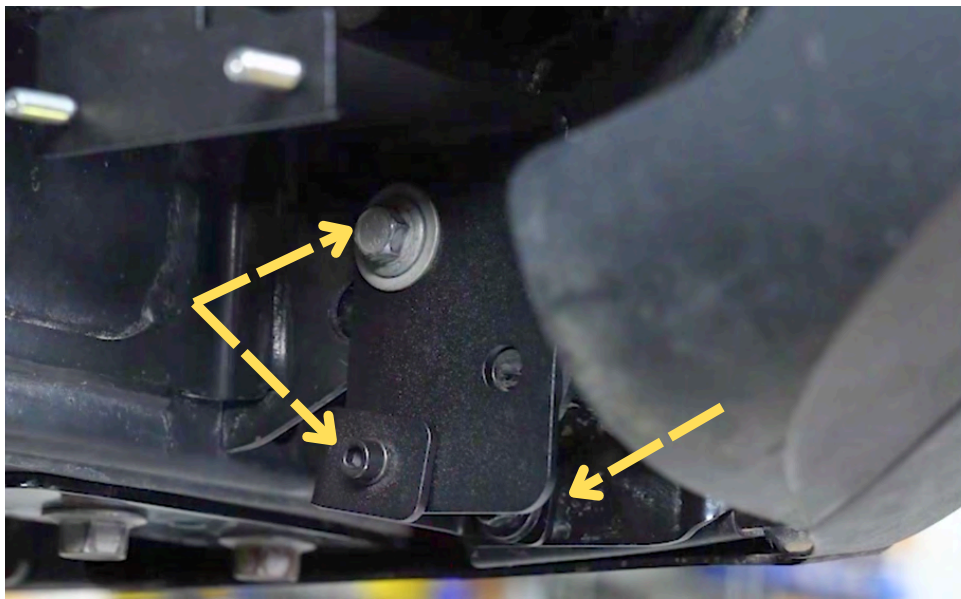

Step 17 pt. 5

Tighten the two 13mm bolts. (20Nm)

Tighten the 5mm Allen bolt. (10Nm)



Step 18

Prepare the LR Mud Flap, driver side Slider Bracket, and two 5mm Allen bolts.

3



9





Step 18 pt. 2

Install the Slider Bracket onto the Mud Flap with the notch facing up.

Install the Allen bolts with washers and tighten. (10Nm)



Step 19

If vehicle is equipped with Bumper Flares, remove the flares.

Remove the three 3/8 screws from the flare.



Step 20

Using a razor blade, cut the excess plastic extruded from the screw holes.



Step 21

Install the Mud Flap Slider onto the studs of the Lower Bracket



Step 22

Install a 5mm Allen bolt and washer into the Mud Flap and Upper Bracket

Do not tighten.



Step 23

Install two 10mm nuts and washers onto the studs of the Lower Bracket.

Do not tighten.



Step 24

Reinstall the fender flare.

Rotate the locking tabs 90° to secure the flare.



Step 25

Adjust Mud Flap to align with fender flare.



Step 25 pt. 2

Tighten the Mud Flap hardware. (10Nm)



Step 26

Repeat for other side.



If you have any questions about the product or install please reach out to support@iagoffroad.com or call 410-840-3555