

***IAG Rock Armor Front Lower Control Arm Skid Plate***  
***For 21+ Ford Bronco***






## IAG-BDY-F2308 IAG Rock Armor Front Lower Control Arm Skid Plate for 21+ Ford Bronco

Congratulations on the purchase of your IAG Rock Armor Front Lower Control Arm Skid Plate, and thank you for choosing IAG Off Road! These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Video instructions can be found here:

[https://youtu.be/C7DKKe9oWX4?si=sIE\\_3306fpWI5lvL](https://youtu.be/C7DKKe9oWX4?si=sIE_3306fpWI5lvL)

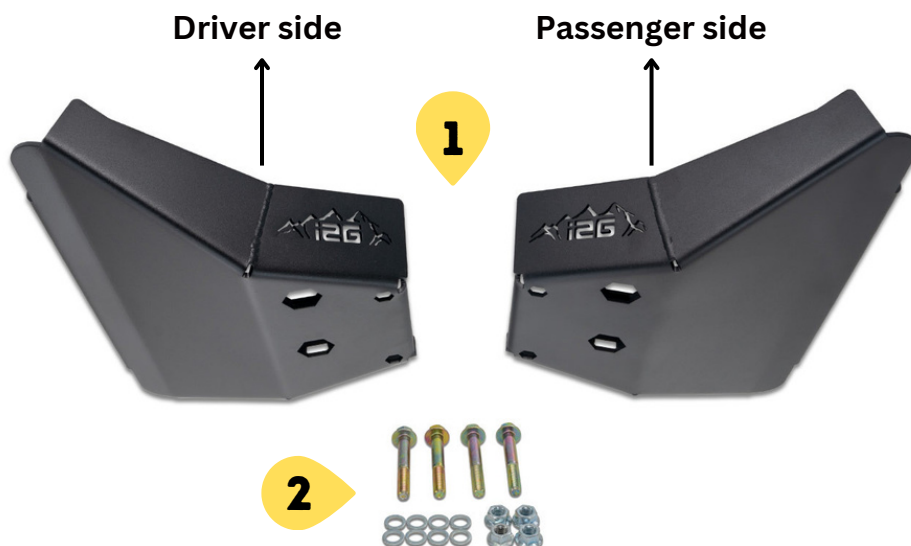

**1** x2 Lower control arm skid plates

**2** Hardware kit

**Tools needed:** 18mm socket

**Note:** Hardware kit is needed **ONLY IF** you have an aftermarket strut installed.



### Step 1

On driver side remove the two front strut bolts or nuts.

Note: The factory nuts are 18mm.



### Step 2

Hold up skid plate so the holes align with strut.



### Step 3

Reinstall the strut bolts or nuts and tighten.

Note: The factory nuts are 18mm.



#### Step 4

Repeat process for the other side.



If you have any questions about the product or install please reach out to [support@iagoffroad.com](mailto:support@iagoffroad.com) or call 410-840-3555