


CRAWLTEK R E V O L U T I O N

491 W. GARFIELD AVE., COLDWATER, MI 49036 • 517.278.1039
CRAWLTEKREVOLUTION.COM • E-MAIL: SALES-CRAWLTEK@RIDEFOX.COM

INSTALLATION INSTRUCTIONS

PYRO FRONT BUMPER **TJ11001 - STUBBY**

FOR USE WITH ALL
CJ/YJ/TJ MODELS FROM 1976-2005

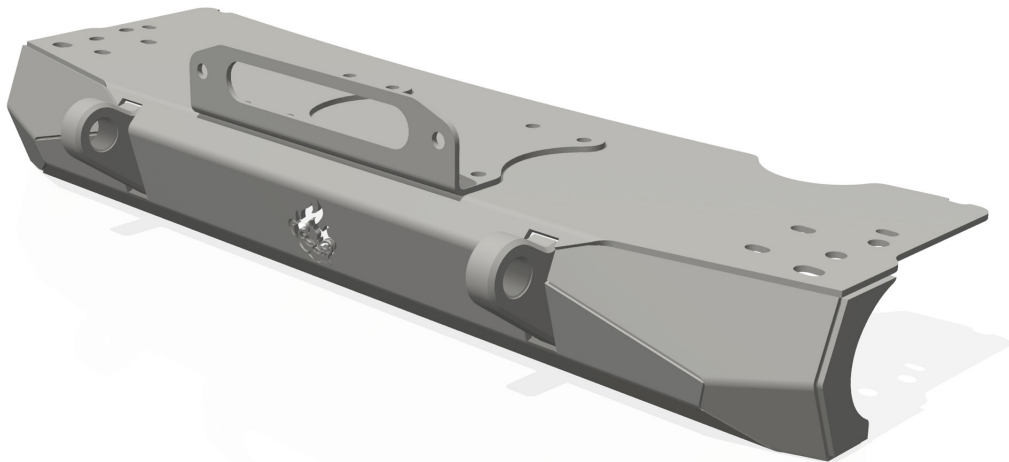

CrawTek YouTube

PLEASE READ THROUGH INSTRUCTIONS BEFORE INSTALLING

2020-11-24

WHAT'S IN THE BOX?

PLEASE VERIFY KIT CONTENTS BEFORE BEGINNING INSTALLATION

PART #	Qty	DESCRIPTION
06086	1	FRONT BUMPER - TJ PYRO STUBBY (TJ10101 ONLY)
06152	1	FRONT BUMPER - TJ PYRO STUBBY - BULLBAR (TJ10111 ONLY)
06153	1	FRONT BUMPER - TJ PYRO STUBBY - FLAT TOP STINGER (TJ10121 ONLY)
06154	1	FRONT BUMPER - TJ PYRO STUBBY - STINGER (TJ10131 ONLY)
06087	1	FRONT BUMPER - TJ PYRO MIDWIDTH (TJ10201 ONLY)
06155	1	FRONT BUMPER - TJ PYRO MIDWIDTH - BULLBAR (TJ10211 ONLY)
06156	1	FRONT BUMPER - TJ PYRO MIDWIDTH - FLAT TOP STINGER (TJ10221 ONLY)
06157	1	FRONT BUMPER - TJ PYRO MIDWIDTH - STINGER (TJ10231 ONLY)
CWLU30010	1	DECAL: CRAWLTEK GEARSHIFT 3.5" X 3.5"
CWLU30020	1	DECAL: CRAWLTEK EYES 6" X 2"
CWLU30030	1	DECAL: CRAWLTEK JAX 3.75" X 2.8"
	6	1/2"-13 X 1-1/4" GRADE 8 YELLOW ZINC FINISH HEX CAP SCREW
	6	1/2" X 1.062" YELLOW ZINC FINISH STEEL SAE FLAT WASHER

TOOLS REQUIRED

SAFETY GLASSES

1/2" SOCKET OR WRENCH

T55 TORX SOCKET

10MM SOCKET OR WRENCH

RATCHET

FACTORY BUMPER REMOVAL

STEP 1:

IF YOUR VEHICLE IS EQUIPPED WITH FACTORY FOG LIGHTS DISCONNECT WIRING.

STEP 2:

REMOVE (4) T-35 BOLTS FROM THE TOP OF THE BUMPER AND (2) T-35 BOLTS FROM THE BOTTOM OF THE BUMPER, REMOVE BUMPER

STEP 3:

REMOVE (4) BOLTS HOLDING THE SWAY BAR ON (KEEP FOR REINSTALLATION).



ASSEMBLING THE JEEP PYRO FRONT BUMPER

STEP 4:

INSTALL WINCH ON TO BUMPER ASSEMBLY WITH BOLTS SUPPLIED FROM WINCH MFG.

INSTALLATION OF THE PYRO FRONT BUMPER

STEP 5:

SET BUMPER ONTO FRAME RAILS.

STEP 6:

SLIDE SWAY BAR OVER WINCH PLATE.

STEP 7:

INSTALL NEW 1/2"-13 BOLTS AND WASHERS SUPPLIED, INSTALL OEM SWAY BAR BOLTS. (IF YOU ARE INSTALLING YOUR CRAWLTEK BUMPER ON A CJ YOU WILL NEED TO USE THE SUPPLIED SPACERS FOR THE BOTTOM BOLTS).



YOU'RE NOT DONE YET!

Thank you for your new CrawlTek Revolution purchase! Follow us on facebook for up to date coverage of new product releases. We love feedback, if you have any questions about the installation or parts were missing please contact us at sales-crawltek@ridefox.com or call us at 517.278.1039.

Be sure to show off your jeep to the rest of the CrawlTek Revolution online. Find us on facebook and instagram to keep up on new products, upcoming events and more action. Tag us @crawltek for a chance to get featured

