



JET Power-Flo

Throttle Body Spacer Installation Instructions

Dodge Hemi 5.7L Ram Truck

Dodge Hemi 5.7L Durango

Dodge Hemi 5.7L Magnum RT/300C


Chrysler 6.1L SRT-8

Part #62138 & 62139

1. **DISCONNECT NEGATIVE BATTERY TERMINAL!**
2. Remove air intake assembly from the throttle body.
3. Remove the 4 bolts that secure the throttle body to the intake manifold.
4. Align and install JET TBI Spacer onto manifold. Install O-Ring onto JET TBI spacer side that faces throttle body.
5. Reinstall factory throttle body on top of JET TBI spacer using the 4 6m x 60m bolts and washers (see photo 1).
6. Reinstall factory intake assembly.
7. Reconnect negative battery terminal.

PARTS LIST:

- (1) JET TBI Spacer
- (1) O Ring
- (4) 6mX60m Hex Head Bolts
- (4) 6m Flat Washers

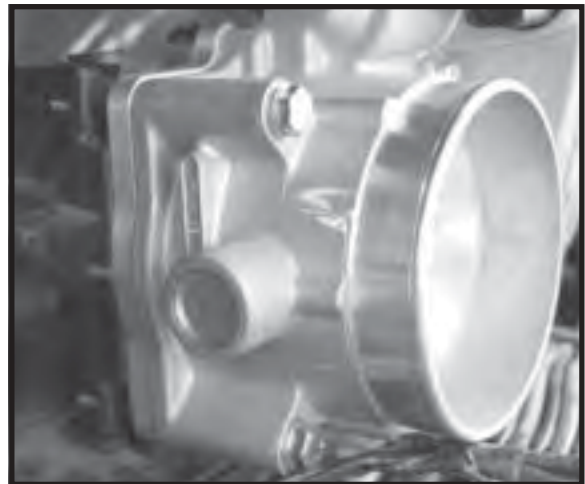

Jet Performance Products

17491 Apex Circle

Huntington Beach, CA 92647

714-848-5515 • Fax: (714) 847-6290 • www.jetchip.com



JET Power-Flo
Throttle Body Spacer
Installation Instructions
Dodge Hemi 5.7L Ram Truck
Dodge Hemi 5.7L Durango
Dodge Hemi 5.7L Magnum
RT/300-C
Chrysler 6.1L SRT-8
Part #62138 & 62139