



INSTALLATION INSTRUCTIONS

Part Number 25-2587

This K&N Airforce Pre-Cleaner fits: KA-2587

INSTALLATION

1. Remove the air box lid.
2. Oil the K&N Airforce Pre-Cleaner per the oiling instructions.
3. Slide the tab of the K&N Airforce Pre-Cleaner in gap that is between the K&N Filtercharger® and the air box housing. (Fig. 1)
4. Fold the K&N Airforce Pre-Cleaner over onto the air filter. (Fig. 2)
5. Reinstall the air box lid.

Note: The K&N Airforce Pre-Cleaner is designed to be used with K&N Filter Oil. It must be cleaned with K&N Cleaner or soap and water.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.

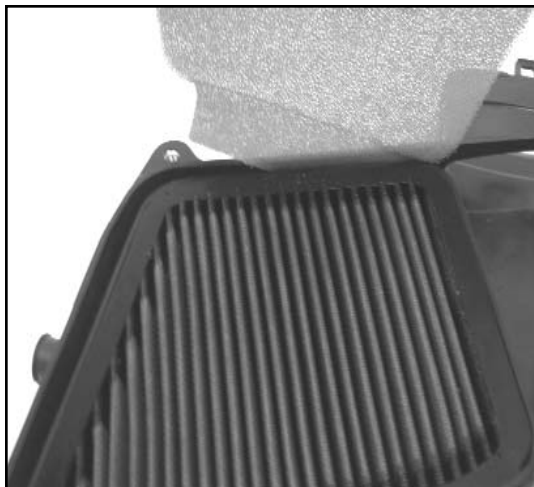


Fig. 1



Fig. 2