

SPEED BY SPECTRE™

Intake Installation Instructions P/N 9902

Year/Make/Model/Engine

99-04 Chevy S10 2.2-L4 w/ac
98-04 GMC Sonoma 2.2-L4 w/ac
99-04 Chevy Blazer 2.2-L4 w/ac
99-04 GMC Jimmy 2.2-L4 w/ac
99-03 Isuzu Hombre 2.2-L4 w/ac

Tools Required:

- 8mm wrench
- 10mm socket or wrench
- 5/16" nut driver or flat blade screwdriver
- Razor knife

Parts List

1- Filter shield
1- Air filter
1- Intake tube
3- 4" hose clamps
1- Rubber vibration mount
1- M8 fender washer
1- M8 lock nut
1- 90° coupler
2- 1.25" hose clamps
1- 1/2" breather hose
1- Grommet
5- M5 allen bolts
5-M5 lock nuts
5-M5 washers
1-M4 hex key wrench



Legal for use on pollution
controlled vehicles
C.A.R.B E.O.# D-629-1
for applications listed above

For filter reorders ask at the
special order counter of your
local parts store or call:
1-800-821-4868
ask for P/N 889884

Step 1

Safety First! Before you begin disconnect the negative battery terminal. Verify all components listed are present before beginning the installation.



Step 2

Start by loosening the clamps securing the OE intake tube to the intake plenum and the air box.



Step 3

Loosen the clamp on the intake resonator.



Step 4

Disconnect the IAT sensor. Lift up and remove the OE intake tube.



Step 5

Remove the intake resonator.



Step 6

Loosen the bolts securing the plenum cover. Remove plenum cover and breather hose located below the cover.




Step 7

Loosen the 10mm nuts securing the air box. Remove OE air box.



Step 8

Remove the stud that secures the OE air box.

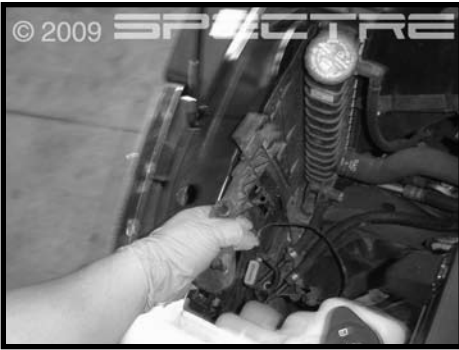


Step 9
Slide up and out the front air box support tray.



Step 10
Remove the 10mm screws holding the fan shroud on both sides. Remove shroud.



Step 11
Using the included 5mm Allen bolts, lock nuts and washers, assemble the heat shield as shown. Install the Allen bolts from the top of the flanges and put the flat washer and lock nuts on the back. Once all the hardware is installed, use the included hex key wrench and an 8mm (5/16" will also work) wrench to fully tighten all of the lock nuts.

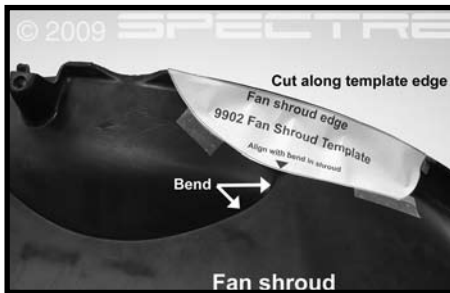

Step 12
Line up template on right hand side of fan shroud. Cut excess plastic with a razor knife. This is required to provide clearance for the intake tube.



Step 13
Re install fan shroud. Install the air filter shield. Secure with factory screws.



Step 14
Insert threaded vibration mount in the OE air box mount location.



Step 15
Insert the new breather hose and secure with clamps.



Step 16
Place coupler over throttle body secure with clamps.



Step 17
Insert the rubber grommet and insert the IAT sensor.



Step 18
Place the air filter in the housing assembly.



Step 19
Place tube into coupler, secure the hose clamps. Attach the bracket on the intake tube to the vibration mount. Secure with provided washer and nut.



Step 20
Tighten air filter. Insert the breather hose and clamp. Tighten all clamps.

Step 21
Gently close the hood and check to make sure the intake assembly does not come in contact with the hood when closed. Make any adjustments if necessary. Reconnect the negative terminal on the battery. Start up the engine and check for any air leaks. Your installation is now complete. Periodically check all clamps and brackets. Affix carb E.O. sticker in a prominent place under the hood. Enjoy your Spectre Intake System.



If you have any difficulties or questions regarding the installation of this intake system, contact the Spectre Performance Technical Department by email - Tech@spectreperformance.com or by phone 1-800-821-4868 Monday thru Thursday 6:00am to 4:30pm PST.

Product Info:
Performance Air Induction
System P/N 9902

SPEED BY SPECTRE.

(909) 673-9800
www.spectreperformance.com